

Usage Precautions

Do not disassemble, modify, or repair the product yourself.
As this is an electrical device, avoid use in places with fire, excessive heat, or humidity.
If the product comes into contact with water, alcohol, benzene, or other chemicals, or is exposed to fire risk, immediately disconnect the power supply and only use it again after ensuring it is safe.
During charging, place the device on the wireless charger and check the LED or device display to confirm charging has started correctly.
Do not drop the product from high places.
Do not place heavy objects on the wireless charger.
Do not touch the outlet or plug with wet hands, as this may cause electric shock or fire.



AIRCHARGE WIRELESS CHARGING PAD AIR43419

User Manual

How to Use & Main Functions

USB Type C / Charging Area

Connect a USB Type-C cable to the wireless charger USB Type-C power input.
Place your wireless charging-compatible device on the charging area; charging will start automatically. This product uses magnetic induction technology. Due to the characteristics of this technology, if the device is not properly aligned with the charging area, charging may not start correctly.
Using a USB power source with a lower current than specified may cause malfunction. It is recommended to use an adapter that provides the specified current.
In case of a charging error (indicated by the LED blinking), lift the device from the charger and place it back on to resume normal charging.
If the problem persists, disconnect the USB cable, wait about 10 seconds, and reconnect it before using it again.
Depending on the device model and usage environment, there may be a delay of about 4–5 seconds before charging begins after placing the device on the charger.
This is a natural phenomenon caused by magnetic field synchronisation and does not indicate a defect in the device or charger.


LED Status & Sequence



Error	Charging in Progress	Fully Charged
FLASHING RED	RED	GREEN

On powered up, red for 2 seconds, then green for 2 seconds, and then off (standby). For certain devices, the LED indicator may remain red even after charging is complete. This behaviour is normal and does not indicate a malfunction

Product Specification

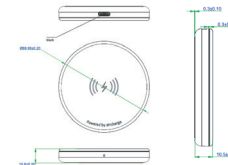

Input: 5V / 2A
Output: 5W Max
Operating Ambient Temperature: 0°C to 30°C
Product Dimensions: W: 70 mm / L: 70 mm / H: 11 mm
Product Weight: 44g
Operating Frequency: 115-205 kHz

FCC Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. IMPORTANT NOTE: Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is	no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.
--	--