

**DX H85TCEX-AUS**



BORN INNOVATIVE®

EN



# Index


Please read and follow these instructions carefully and operate the machine accordingly. This booklet provides important guidelines for safe use, installation, maintenance and some useful advice for best results when using your machine.

Keep all documentation in a safe place for future reference or for any future owners.

Please check that the following items are delivered with the appliance:

- Instruction manual
- Guarantee card
- Energy label

By placing the  mark on this product, we are confirming compliance to all relevant European safety, health and environmental requirements which are applicable in legislation for this product.

 Check that no damage has occurred to the machine during transit. If it has, call for service. Failure to comply with the above can compromise the safety of the appliance. You may be charged for a service call if a problem with your machine is caused by misuse.

## 1. SAFETY REMINDERS

## 2. DRAIN HOSE KIT: FITTING INSTRUCTIONS

## 3. PREPARING THE LOAD

## 4. CLEANING AND ROUTINE MAINTENANCE

## 5. WATER CONTAINER

## 6. DOOR AND FILTER AND CONDENSER

## 7. CONTROLS AND INDICATORS


## 8. SELECTING THE PROGRAMME AND SET THE FUNCTION

## 9. TROUBLESHOOTING CUSTOMER SERVICE

# 1. SAFETY REMINDERS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - Children should be supervised to ensure that they do not play with the appliance.
  - **WARNING** Misuse of a tumble dryer may create a fire hazard.
  - This appliances is intended to be used in household and similar applications such as:
    - Staff kitchen areas in shops, offices and other working environments;
    - Farm houses;
    - By clients in hotels, motels and other residential type environments;
    - Bed and breakfast type environments.
- A different use of this appliance from household environment or from typical housekeeping functions, as commercial use by expert or trained users, is excluded even in the above applications.
- If the appliance is used in a

manner inconsistent with this it may reduce the life of the appliance and may void the manufacturer's warranty. Any damage to the appliance or other damage or loss arising through use that is not consistent with domestic or household use ( even if located in a domestic or household environment) shall not be accepted by the manufacturer to the fullest extent permitted by law.

- This machine should only be used for its intended purpose as described in this manual. Ensure that the instructions for installation and use are fully understood before operating the appliance.
- Do not touch the appliance when hands or feet are damp or wet.
- Do not lean on the door when loading the machine or use the door to lift or move the machine.
- Do not allow children to play with the machine or its controls.
- **WARNING** Do not use the product if the lint filter is not in position or is damaged; lint could be ignited.
- **WARNING** Where the hot surface symbol  is located the temperature rise during operation of the tumble dryer may be in excess of 60 degrees C.

- Remove the plug from the electricity supply. Always remove the plug before cleaning the appliance.
- Do not continue to use this machine if it appears to be faulty.
- Lint must not be allowed to collect on the floor around the outside of the machine.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Maximum load drying weight : 8 kg.



You will find this symbol on your appliance. It indicates surfaces that become hot when the appliance is in use, care is required around these areas.



This symbol indicates there is a risk of fire if the appliance is not used correctly.



**WARNING:** Risk of fire/ Flammable materials.

Read these warnings carefully to avoid the possible danger fire.

## Installation

- Do not use adapters, multiple connectors and/or extensions.
- Never install the dryer against curtains and be sure to prevent items from falling or collecting behind the dryer.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer.

**Important:** During transport ensure that the dryer is in an upright position, if it's necessary you can only flip in the side shown;



**Caution:** If the product is in different side, wait at least 4 hours before switching on so that the oil can flow back into the compressor. Failure to do this could result in damage to the compressor.

## The Laundry

- Do not dry unwashed items in the tumble dryer.
- **WARNING** Do not tumble dry fabrics treated with dry cleaning fluids.
- **WARNING** Foam rubber materials can, under certain circumstances, when heated become ignited by spontaneous combustion. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads **MUST NOT** be dried in the tumble dryer.
- Always refer to the laundry care labels for directions on suitability for drying.
- Clothes should be spin dried or thoroughly wrung before they are put into the tumble dryer. Clothes that are dripping wet should not be put into the dryer.
- Lighters and matches must not be left in pockets and **NEVER** use flammable liquids near the machine.
- Glass fibre curtains should **NEVER** be put in this machine. Skin irritation may occur if other garments are contaminated with the glass fibres.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol,

petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.


## Ventilation

- Adequate ventilation must be provided in the room where the tumble dryer is located to prevent gases from appliances burning other fuels, including open fires, being drawn into the room during operation of the tumble dryer.
- Installing the rear of the appliance close to a wall or vertical surface.
- There should be a gap of at least 12 mm between the machine and any obstructions. The inlet and outlet should be kept clear of obstruction. To ensure adequate ventilation the space between the bottom of the machine and the floor must not be obstructed.
- Check regularly that the air flowing through the dryer is not restricted.

- After each use check the lint filter and clean out any lint.
- Prevent items from falling or collecting behind the dryer as these may obstruct the air inlet and outlet.
- NEVER install the dryer up against curtains.
- In cases where the dryer is installed on top of a washing machine, a suitable stacking kit must be used according to the follow configuration.
  - Stacking kit Mod 35100019: for minimum washing machine depth 49 cm.
  - Stacking kit Mod 35900120: for minimum washing machine depth 51 cm.

The stacking kit shall be one of that above, obtainable from our spare service.

The instructions for installation and any fixing attachments, are provided with the staking kit.

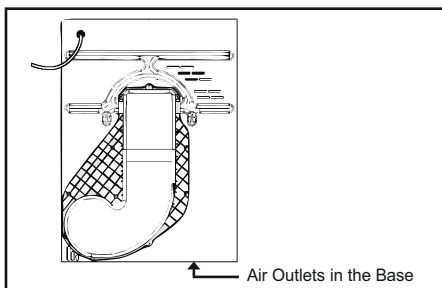

- Oil-affected items can ignite spontaneously, especially when exposed to heat sources

- such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Pilling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent- this will reduce but not eliminate, the hazard.
- For appliances with ventilation openings in the base, carpet must not obstruct the openings.

⚠ Do not install the product in a low temperature room or in a room where there is a risk of frost occurring. At temperatures around freezing point the product may not be able to operate properly: there is a risk of damage if the water is allowed to freeze in the hydraulic circuit (valves, hoses, pumps). For a better product performance the ambient room temperature must be between 5-35°C. Please note the operating in cold conditions (between +2 and +5°C) may create some water condensation and water drops on floor.

## Environmental Issues

● All packaging materials used are environmentally-friendly and recyclable. Please help dispose of the packaging via environmentally-friendly means. Your local council will be able to give you details of current means of disposal.

● To ensure safety when disposing of an old tumble dryer disconnect the mains plug from the socket, cut the mains power cable and destroy this together with the plug. To prevent children shutting themselves in the machine break the door hinges or the door lock.

## European Directive 2012/19/EU

This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).



WEEE contains both polluting substances (which can cause negative consequences for the environment) and basic components (which can be re-used). It is important to have WEEE subjected to specific treatments, in order to remove and dispose properly all pollutants, and recover and recycle all materials.

Individuals can play an important role in ensuring that WEEE does not become an environmental issue; it is essential to follow some basic rules:

- WEEE should not be treated as household waste.

- WEEE should be handed over to the relevant collection points managed by the municipality or by registered companies. In many countries, for large WEEE, home collection could be present.

In many countries, when you buy a new appliance, the old one may be returned to the retailer who has to collect it free of charge on a one-to-one basis, as long as the equipment is of equivalent type and has the same functions as the supplied equipment.

## Service

● To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised service engineer.

## Electrical Requirements


Tumble dryers are supplied to operate at a voltage of 220-240V, 50 Hz single phase. Check that the supply circuit is rated to at least 6A.


**Electricity can be extremely dangerous. This appliance must be earthed. The socket outlet and the plug on the appliance must be of the same type. Do not use multiple adapters and/or extension leads.**


**The plug should be accessible for disconnection after the appliance has been installed.**



**Contains fluorinated greenhouse gases. Hermetically sealed.**  
R134a / 0,260 [kg] / CO2 equivalent: 0,372[t] GWP1430


 You may be charged for a service call if a problem with your machine is caused by incorrect installation.

 If the mains cord on this appliance is damaged, it must be replaced by a special cord which is **ONLY** obtainable from the spares service. It must be installed by a competent person.

 Do not plug the machine in and switch it on at the mains until the installation is completed. For your safety, this dryer must be correctly installed. If there is any doubt about installation, call Service for advice.

## Adjusting the Feet

Once the machine is in place the feet should be adjusted to ensure that the machine is level.

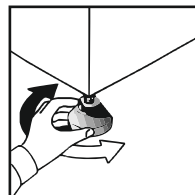

## 2. DRAIN HOSE : FITTING INSTRUCTIONS


To avoid emptying the water container after each drying cycle, the water can be discharged directly to a waste water drain pipe (the same drainage system as household sinks). Water Bye-Laws prohibit connection to a surface water drain. The waste water drain pipe should be located adjacent to the tumble dryer.

The kit consists of: 1 hose and 1 tap.


**⚠ WARNING!** Switch off and remove the tumble dryer plug from the electricity supply before carrying out any work.

### Fit the Hose as Follows:


1. Flip the machine slowly to the right side.

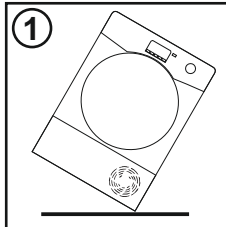


2. The waste water pipe is situated at the right-hand side of the machine (see the picture). A grey hose connects to the bridge at the left hand side of the machine. Using pliers, remove the pipe retaining clip from the bridge.

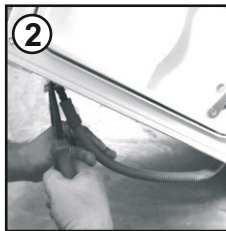


3. Pull the hose off the bridge connection.

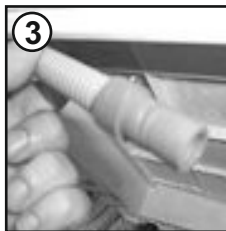


4. Attach the black hose from the kit, (using the connector and pipe clips supplied), to the hose removed from the bridge connection.

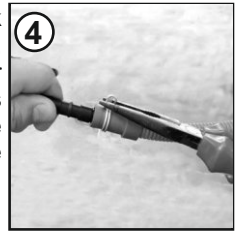

5. Connect the new drain hose to the waste Water pipe.

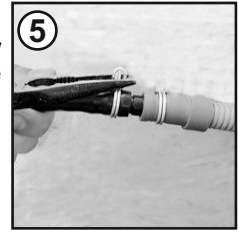

6. Once the machine is in place, check the bottom to ensure that the new hose does not kink when pushing the tumble dryer into position.

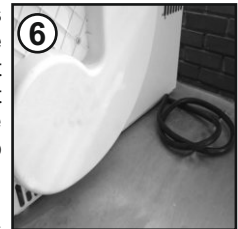

Connect to the mains electricity supply.

**Caution:** If the product is in different side, wait at least 4 hours before switching on so that the oil can flow back into the compressor. Failure to do this could result in damage to the compressor.

### 3. PREPARING THE LOAD

Before using the tumble dryer for the first time:

- Please read this instruction book thoroughly.
- Remove all items packed inside drum.
- Wipe the inside of the drum and door with a damp cloth to remove any dust which may have settled in transit.

#### Clothes Preparation

Make sure that the laundry you are going to dry is suitable for drying in a tumble dryer, as shown by the care symbols on each item.

Check that all fastenings are closed and that pockets are empty. Turn the articles inside out. Place clothes loosely in the drum to make sure that they don't get tangled.

#### Do Not Tumble Dry:

Silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, garments with PVC or leather trimmings.

**⚠ IMPORTANT:** Do not dry articles which have been treated with a dry cleaning fluid or rubber clothes (danger of fire or explosion).

During the last 15 minutes the load is always tumbled in cool air.

#### Energy Saving

Only put into the tumble dryer laundry which has been thoroughly wrung or spin-dried. The drier the laundry the shorter the drying time thus saving electricity.

##### ALWAYS

- Check that the filter is clean before every drying cycle.





##### NEVER

- Put dripping wet items into the tumble dryer, this may damage the appliance.

#### Sort the Load as Follows

##### • By care symbols

These can be found on the collar or inside seam:

-  Suitable for tumble drying.
-  Tumble drying at high temperature.
-  Tumble drying at low temperature only.
-  Do not tumble dry.

If the item does not have a care label it must be assumed that it is not suitable for tumble drying.

##### • By amount and thickness

Whenever the load is bigger than the dryer capacity, separate clothes according to thickness (e.g. towels from thin underwear).

##### • By type of fabric

**Cottons/linen:** Towels, cotton jersey, bed and table linen.

**Synthetics:** Blouses, shirts, overalls, etc. made of polyester or polyamid, as well as for cotton/synthetic mixes.

**⚠** Do not overload the drum, large items when wet exceed the maximum admissible clothes load (for example: sleeping bags, duvets).

### 4. CLEANING AND ROUTINE MAINTENANCE

#### Cleaning the Dryer

- Clean the filter and empty the water container after every drying cycle.
- Regularly clean the condenser.
- After each period of use, wipe the inside of the drum and leave the door open for a while to allow circulation of air to dry it.
- Wipe the outside of the machine and the door with a soft cloth.
- DO NOT use abrasive pads or cleaning agents.
- To prevent the door sticking or the build up of lint clean the inner door and gasket with a damp cloth after every drying cycle.


#### **⚠ WARNING!**

The Drum, door and load may be very hot.

**⚠ IMPORTANT** Always switch off and remove the plug from the electricity supply before cleaning this appliance.

**⚠** For electrical data refer to the rating label on the front of the dryer cabinet (with the door open).

## 5. WATER CONTAINER

The water removed from the laundry during the drying cycle is collected in a container inside the door of the dryer. When the container is full the  indicator on the control panel will light, and the container MUST be emptied. However, we recommend that the container is emptied after each drying cycle.

**NOTE:** Very little water will collect during the first few cycles of a new machine as an internal reservoir is filled first.

### To Remove the Container

1. Gently pull out the water container holding the handle. **(A)**



**When it is full the water container will weigh about 6 kg.**

2. Tilt the water container to empty the water out through the spout. **(B)**

When empty, replace the water container back as shown; **(C)** first insert the base of the container into position as shown **(1)** then gently push the top into position **(2)**.

3. Press  Button to restart the cycle.

**NOTE:** If you have the option of drainage near to the dryer you can use the discharge kit to provide a permanent drainage for the water collected in the container of the dryer. This means that you don't have to empty the water container.

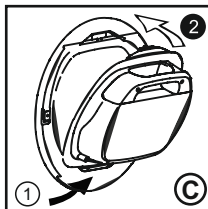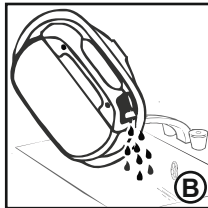



### OPERATION

1. Open the door and load the drum with laundry. Ensure that garments do not hinder closure of the door.

2. Gently close the door pushing it slowly until you hear the door 'click' shut.

 
3. Turn the Programme Selector dial to select the required drying programme (see Programme Guide).

 4. Press the  button. The dryer will start automatically and the indicator above the button will be continuously lit.

5. If the door is opened during the programme to check the laundry, it is necessary to press  to recommence drying after the door has been closed.

6. When the cycle is nearing completion the machine will enter the cool down phase, the clothes will be tumbled in cool air allowing the load to cool down.

7. Following the completion of the cycle the drum will rotate intermittently to minimize creasing. This will continue until the machine is switched OFF or the door is opened.

 Do not open the door during the automatic programs in order to obtain a proper drying.

## 6. DOOR and FILTER

Pull on handle to open the door.


To restart the dryer, close the door and press Start / Pause button. ▶|||

**⚠WARNING!** When the tumble dryer is in use the drum and door may be VERY HOT.

### Filter


**IMPORTANT:** To maintain the efficiency of the dryer check that the lint filter is clean before each drying cycle.

1. Pull the filter upwards.

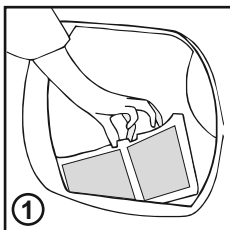

2. Open filter as shown.

3. Gently remove lint using a soft brush or your fingertips.

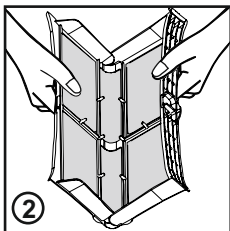

4. Snap the filter together and push back into place.

### Filter Care Indicator

🌐 Lights when the filter needs cleaning.


If the laundry is not drying check that the filter is not clogged.

**⚠ IF YOU CLEAN FILTER UNDER WATER, REMEMBER TO DRY IT.**


**⚠ WARNING!** If you open the door mid cycle, before the cool-down cycle has completed, the handle may be hot. Please use extreme caution when attempting to empty the water reservoir during the cycle.

### To Clean the Condenser Filter


1. Remove the kickplate.

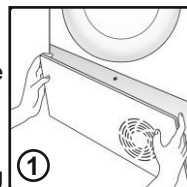


2. Turn the three locking levers anti-clockwise and pull out the front cover.

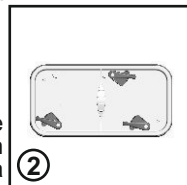


3. Gently remove the filter frame and clean any dust or lint with a cloth from the filter. Do not use water to clean the filter.

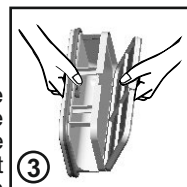

4. Remove the sponge gently from its place and then wash the sponge by holding it under a running tap turning it so to remove any dust or lint.

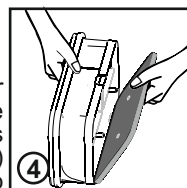


5. Refit the front cover ensuring it is in the correct way (as indicated by the arrow) and pushed firmly into place. Lock the three levers by turning them clockwise.

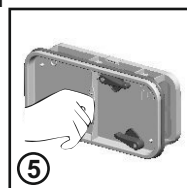

6. Refit the kickplate.



## 7. CONTROLS AND INDICATORS

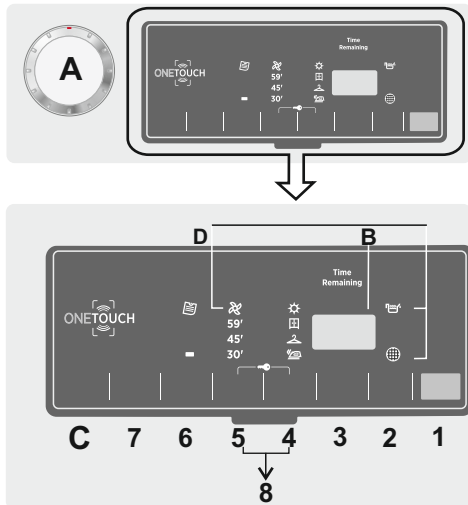

**A-Programme Selector** - Rotating the knob in both directions it's possible to select the desired drying program. To cancel the selections or switch off the dryer rotate the knob on OFF.

**B- Display Digit** - The display shows the remaining time for drying, the postponed time in case of delayed start selection and other notifications setting.

**C-Buttons -**

### 1.Start/Pause Button

To start the selected program and/or suspend it.

### 2.Delay Start Button

Delay the start of a program from 1 to 24 hours, the time will increase in 1 hour intervals. The delay start selected will be shown on the display. To begin the delay start press the start button, time until the cycle begins will be display, decreasing each hour. If the door is opened while delay start is set the delay start countdown will pause, to resume press the start button once the door has been closed.

### 3.Time cycle selection

It's possible to modify the time-cycle up to 3 minutes after the cycle start (cycle will change from automatic to programmed).

The progressive pressure of this button increases the time-cycle by 10 minutes intervals. After this selection, to reset the automatic drying functioning, is necessary to switch off the dryer. In case of incompatibility, all LEDs flash quickly 3 times.

### 4.Drying Selection Button

It allows to set the desired dryness level editable option up to 5 minutes after the starting of the cycle:

- **Ready to Iron** : It leaves the garments slightly wet to facilitate ironing.

- **Dry Hanger** : To get garment ready to be hang

- **Dry wardrobe** : For laundry that can be directly stored

- **Extra-dry** : To get completely dry garments, ideal for full load.

This appliances is equipped with Drying Manager Function. On automatic cycles, each level of intermediate drying, prior to the reaching the selected one, is indicated by flashing the light indicator corresponding to the degree of drying reached. In case of incompatibility, all LEDs flash quickly for 3 times.

### 5.Rapids Button

If an automatic program has been selected it can be changed to Rapid program within the first 3 minutes of a cycle. The progressive pressure increases the time(30-45-59minutes). If the load is incompatible all LEDs will flash quickly 3 times, the dryer will need to be turned off and an automatic drying function selected.

### 6.Best Ironing

This feature reduces folds and creases as the drum alternates direction during and after the cycle. This option can be selected within the first 5 minutes of the cycle, it will only activate on automatic cycles.

### 7.Memory

This feature allows the options selected on a cycle to be stored. To store, during the cycle push the "memory" button for 3 seconds, the memory light on the display will flash 3 times indicating that the selected options have been stored. To use saved options, selected the desired cycle and then push the "memory" button.


### 8. Keylock


This feature prevents unwanted changes during the drying cycle. To activate or remove, push buttons 4 and 5 for approximately 2 seconds simultaneously. When activated 'LOC' will display and when the feature is turned off 'UNL' will flash on the display. Opening the door while the key lock is activated will only stop the cycle. To resume the cycle, close the door, turn off the key lock feature and press the start button. If the dryer is turned off the key lock will automatically be inactivated. The key lock can be activated or removed at any point during the cycle.


### Automatic Anti crease

This feature automatically activates an anti-crease movement of the drum, pre-cycle (when delay start is activated) and at the end of the drying cycle for up to 6 hours every 10 minutes. To stop, turn the machine off.

### D-Led

**Water tank**  - The indicator will light up when the water tank need to be emptied.

**Filter cleaning**  - The indicator will light up when the filter (door or lower) needs to be cleaned.

**Cooling**  - The indicator will light up when the cycle is in the final cooling stage.

**ONE TOUCH area** - When the program selector is in the One Touch position a previously downloaded cycle can be selected by pressing the start button. (Please see relevant section of the manual for more information on downloading cycles on the Wizard app).



APPAREL CARE

The wool drying cycle of this machine has been approved by The Woolmark Company for the drying of machine washable wool products provided that the products are washed and dried according to the instructions on the garment label and those issues by the manufacturer of this machine M1530.

In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark.

#### Maximum Drying Weight

|                         |           |
|-------------------------|-----------|
| Cottons                 | Max. 8 kg |
| Synthetics or Delicates | Max. 4 kg |

### Drying Guide AS/NZS 2442.2

The programme tested in accordance with AS/NZS 2442.2 is Cotton Hanger Dry.

This is the most energy efficient and best suited for drying normal wet cotton laundry.

### Technical Specifications

|               |                  |
|---------------|------------------|
| Drum capacity | 115              |
| Maximum load  | 8 kg             |
| Height        | 85 cm            |
| Width         | 60 cm            |
| Depth         | 60 cm            |
| Energy class  | See energy label |

|                               |        |
|-------------------------------|--------|
| Capacity (as energy label)    | 8 kg   |
| Power consumption of off-mode | 0,40 W |
| Power consumption of on-mode  | 0,75 W |

### Information for Test Laboratory\*\*

#### AS 2442.2

Cotton Hanger Drying.





Rated capacity 8 kg.

Install and use discharge kit to evacuate the Condensed water.



The real duration of drying cycle depends by the starting humidity level of the laundry due to spin speed, type and amount of load, cleanliness of filters and ambient temperature.

## 8. SELECTING THE PROGRAMME AND SET THE FUNCTION

| PROGRAM   | PROGRAM DESCRIPTION  | CAPACITY<br>(kg) | DRYING<br>TIME<br>(min) |
|---|--|------------------|-------------------------|
| All In One   | A new innovative cycle allowing various fabrics to be dried in the one cycle. When the lightweight fabrics are dry the machine will indicate to remove these items, an acoustic sound is emitted and AIO will blink on the display for 3 minutes. Once these items are removed press the start button again to complete the drying cycle for the remaining heavier items.  | 6                | *                       |
| Darks & Coloured  | A delicate and specific cycle to dry dark or coloured cotton or synthetics garments.   | 4                | *                       |
| Whites  | The right cycle to dry cottons, sponges and towels.  | 8                | *                       |
|  Cotton**    | Program Eco normative (hang dry) drying. The most efficient program in energy consumption. Suitable for cottons and linens.  | 8                | *                       |
| Shirts  | This cycle minimises folds and creases in garments thanks to the specific movements of the drum. It is recommended that the load is removed immediately after the drying cycle is finished.  | 2.5              | *                       |
| Jeans   | This cycle is designed for fabrics such as jeans and denim. It is recommended to reverse the garments over before drying.  | 4                | *                       |
| Synthetics  | To dry delicate and synthetic fabrics that need an accurate and specific treatment.  | 4                | *                       |
| Waterproof Revitalize   | An special service to revitalize the waterproofing treatment of the linens.  | 2                | *                       |
| Sports  | Dedicated to technical garments for sport and fitness, drying gently with special care to avoid shrinking and deterioration of elastic fibers.   | 4                | *                       |
| Bed Quilt   | Perfect cycle to dry uniformly duvets and quilts, revitalizing the smoothness of the feathers.   | 4                | *                       |
|  Wool        | Woolen clothes: the program can be used to dry up to 1 kg of laundry (around 3 jumpers). It is recommended to reverse all clothes before drying. Timing can change due to dimensions and thickness of load and to spinning chosen during washing. At the end of the cycle, clothes are ready to be worn, but if they are heavier, edges can be a bit wet: it is suggested to dry them naturally. It is recommended to unload clothes at the very end of the cycle. Attention: felting process of wool is irreversible; please dry exclusively clothes with symbol (symbol "ok tumble"); this program is not indicated for acrylic clothes. | 1                | 70'                     |
| Antiallergy   | This cycle will help reduce allergens such as dust mites, pet hair, pollens and residual of powder detergents.   | 4                | Max 220'                |
| XXL Load  | Specific cycle dedicated to dry large linens e.g. curtains sheets and tableclothes. Thanks to a specific movement of the drum the linens will be dry minimizing tangles and folds.   | 6                | Max 220'                |
| Anti Odours   | The perfect cycle to remove the smells from the linens smoothing creases.  | 2.5              | *                       |
| One Touch  | Customizable setting that interacts with the App on your android smartphone and to download the cycles (see the dedicated section). The factory sets the default programme Auto-Higiene, which will sanitize the machine.  |                  |                         |

\*The real duration of drying cycle depends by the starting humidity level of the laundry due to spin speed, type and amount of load, cleanliness of filters and ambient temperature.

\*\* According with AS/NZS 2442.2

## ONE TOUCH

This appliance is equipped with One Touch technology that allows you to interact, via the App, with smartphones based on Android operating system and equipped with NFC (Near Field Communication) function.

- Download on your smartphone the Hoover Wizard App.

The Hoover Wizard App is available for devices running both Android and iOS, both for tablets and for smartphones. However, you can interact with the machine and take advantage of the potential offered by One Touch only with Android smartphones equipped with NFC technology, according to following functional scheme:

|   |   |
|---|---|
| Android smartphone with NFC technology    | Interaction with the machine + contents |
| Android smartphone without NFC technology | Contents only                           |
| Android Tablet                            | Contents only                           |
| Apple iPhone                              | Contents only                           |
| Apple iPad                                | Contents only                           |

## FUNCTIONS

The main functions available using the App are:

- **Voice Coach** – A guide to help you choose the ideal cycle with only three voice inputs (clothes/fabrics, colour, drying level).
- **Programmes** – To download and launch new drying programmes.

- **Clever Care** – Clever Check-up and a troubleshooting guide.

- **Reports** – Drying statistics and tips for a more efficient use of your machine.

Get all the details of the One Touch functions, browsing the App in DEMO mode or go to:  
[www.hooveronetouch.com](http://www.hooveronetouch.com)

## HOW TO USE ONE TOUCH

### FIRST TIME - Machine registration

Enter the "Settings" menu of your Android smartphone and activate the NFC function inside the "Wireless & Networks" menu.

Depending on the smartphone model and its Android OS version, the process of the NFC activation may be different. Refer to the smartphone manual for more details.

- Turn the knob to the **One Touch** position to enable the sensor on the dashboard.
- Open the App, create the user profile and register the appliance following the instructions on the phone display or the "Quick Guide" attached on the machine.

More information, F.A.Q. and the video for an easy registration are available on:  
[www.hooveronetouch.com/how-to](http://www.hooveronetouch.com/how-to)

## NEXT TIME – Regular usage

- Every time you want to manage the machine through the App, first you have to enable the One Touch mode by turning the knob to the One Touch indicator.
- Make sure you have unlocked your phone (from stand-by mode) and you have activated the NFC function; then, follow the steps mentioned earlier.
- If you want to start a dry cycle, load the laundry and close the door.
- Select the desired function in the App (e.g.: starting a programme, the Clever Check-up cycle, update statistics, etc...).
- Follow the instructions on the phone display, KEEPING IT ON the One Touch logo on the machine dashboard, when requested to do so by the App.



### NOTES:

Place your smartphone so that the NFC antenna on its back matches the position of the One Touch logo on the appliance (as illustrated below).



If you do not know the position of your NFC antenna, slightly move the smartphone in a circular motion over the One Touch logo until the App confirms the connection. In order for the data transfer to be successful, it is essential TO KEEP THE SMARTPHONE ON THE DASHBOARD DURING THESE FEW SECONDS OF THE PROCEDURE; a message on the device will inform about the correct outcome of the operation and advise you when it is possible to move the smartphone away.

Thick cases or metallic stickers on your smartphone could affect or prevent the transmission of data between machine and telephone. If necessary, remove them.

The replacement of some components of the smartphone (e.g. back cover, battery, etc...) with non-original ones, could result in the NFC antenna removal, preventing the full use of the App.

The management and the control of the machine via App is only possible "by proximity": it is therefore not possible to perform remote operations (e.g.: from another room; outside of the house).

## WIRELESS PARAMETERS

| Parameter            | Specifications                                  |
|----------------------|---|
| Wireless Standard    | ISO/IEC 14443 Type A and NFC Forum Type 4       |
| Frequency band       | 13,553-13,567 MHz (centre frequency 13,560 MHz) |
| Magnetic field limit | < 42dBµA/m (at 10 meters)                       |

With this the Candy Hoover Group Srl, declares that this appliance marked with **CE** complies with the essential requirements of the Directive 2014/53/EU. To receive a copy of the declaration of conformity, please contact the manufacturer at: [www.candy-group.com](http://www.candy-group.com)

## 9. TROUBLESHOOTING

### FOR ONE TOUCH MODELS

The **Hoover Wizard** app has a Clever Check-up function that allows you to confirm the functionality and status of the product at any time. To use the **Hoover Wizard app** you will need an Android smartphone with NFC technology.

#### More info can be found on the App.

If the display of the machine is showing an error (by a code or blinking LEDs), you should turn on the App on your Android smartphone, with NFC on. selecting "Read the error" on the "Help on line" menu place your smart phone against the One Touch logo on the control panel. You should now be able to read the fault directory to solve the issue.

### What Might be the Cause of...

#### Defects you can remedy yourself

Before calling service for technical advice please run through the following checklist. A charge will be made if the machine is found to be working or has been installed incorrectly or used incorrectly. If the problem persists after completing the recommended checks, please call Service, they may be able to assist you over the telephone.

**Time display to end could change during drying cycle. The time to end is continuously checked during the drying cycle and the time is adjusted to give the best estimation time. The displayed time may increase or decrease during the cycle and this is normal.**

#### Drying time is too long/clothes are not dry enough...

- Have you selected the correct drying time/programme?
- Were the clothes too wet? Were the clothes thoroughly wrung or spindried?
- Does the filter need cleaning?
- Is the dryer overloaded?

#### The dryer does not operate...

- Is there a working electricity supply to the dryer? Check using another appliance such as a table lamp.
- Is the plug properly connected to the mains supply?
- Is there a power failure?
- Has the fuse blown?
- Is the door fully closed?
- Is the dryer switched on, both at the mains supply and at the machine?
- Has the drying time or the programme been selected?
- Has the machine been switched on again after opening the door?

#### The dryer is noisy...

- Switch off the dryer and contact Service for advice.

#### The Indicator is on...

- Does the filter need cleaning?

#### The Indicator is on...

- Does the water container need emptying?

### CUSTOMER SERVICE

Should there still be a problem with your dryer after completing all the recommended checks, please call service for advice.

They may be able to assist you over the telephone or arrange for a suitable appointment for an engineer to call under the terms of your guarantee. However, a charge may be made if any of the following applies to your machine:

- Is found to be in working order.
- Has not been installed in accordance with the installation instructions.
- Has been used incorrectly.

### Spares

Always use genuine spares, available direct from service.

### Service

For service and repairs call your local service engineer.

**The manufacturer declines all responsibility in the event of any printing mistakes in this booklet. The manufacturer also reserves the right to make appropriate modifications to its products without changing the essential characteristics.**

**Customer care: 1300 769 522**

hooverappliances.com.au  
customercare@hooverappliances.com.au



**E2284**

**40012338**