



Owner's manual


1. Introduction Safety Instructions

Please store this instruction manual for future reference.

- Do not use this product near water or moisture.
- Clean only with a dry cloth.
- Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards.
- Please contact the manufacturer to be referred to an authorized service center near you.
- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.




2. CONTROLS, CONNECTORS

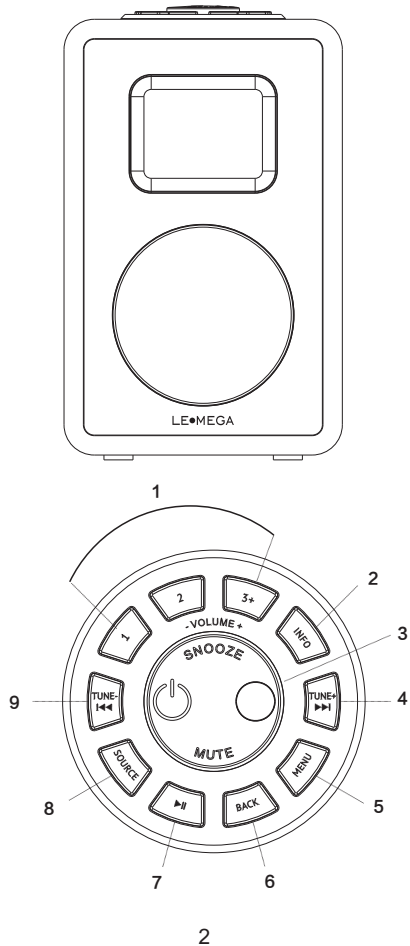

1. Preset 1,2,3+	6. Back
2. Info	7. Play/Pause /▶▶
3. Power on/off&Volume&Select/Snooze/Mute	8. Source
4. Tune+ /▶▶	9. Tune- /◀◀
5. Menu	

REAR VIEW

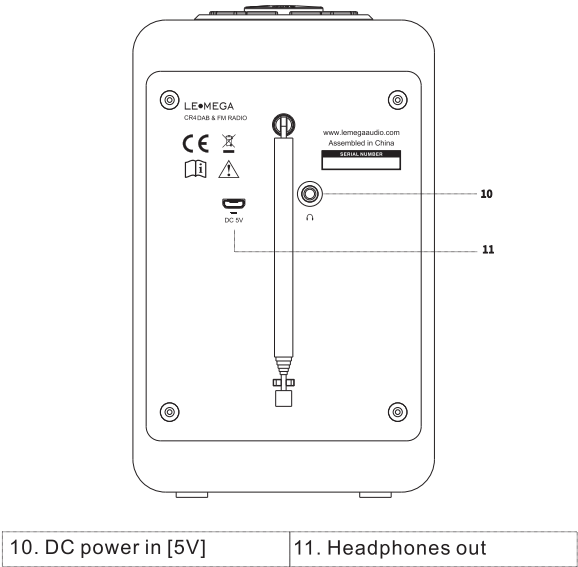

GETTING STARTED

ACCESSORIES INCLUDED

Carefully remove the unit and all accessories from the package.

Please verify that you have all the following accessories before recycling the gift box.

- 1 CR4 unit
- 1 Owner's manual
- 1 USB charging cable
- 1 Power adapter

UNDERSTANDING THE CONTROL FUNCTIONS

QUICK SETUP

Fully extend the Telescopic antenna to ensure good reception in both DAB and FM Radio modes. It may be necessary to alter the position of the DAB Digital Radio and/or the Telescopic antenna to achieve the best signal.

1. Connect the power cable to the input in the side of the CR4 and then plug the cable into an outlet or insert the four "AA" batteries into the battery compartment to power on.
2. Fully extend the rear telescoping antenna.
3. Press the Power knob on the front to turn on the CR4.
4. When powered on for the first time in DAB mode, the C4 will initiate an auto scan. When complete, The display will indicate how many stations were received. Be sure the rear antenna is fully extended during the auto scan.
5. Press the **SOURCE** button to select the desired source.
6. Adjust the volume to the desired level using the **SELECT** knob.
7. In DAB mode, the **TUNE+/TUNE-** button allows you to navigate between different stations.

GUIDE TO FEATURES

- 1 **PRESET** : Long press button 1, 2 to preset and save your favorite stations
Short Press button 1,2 to select the favorite station to play or Preset recall.
You can save 20 stations by Long press button 3+ and rotate the volume Knob to choose and push this button to confirm your selection.

2. **INFO**: View more information about the station or track playing.
Press again to cycle through further information screens then return to the normal playing screen.

FULL SIDESHOW: Press and hold INFO button to switch DAB normal playing screen image to full screen slide show image.

3 . SELECT/ VOLUME/MUTE/SNOOZE:

- a. **Power**: Push and hold the knob for 3 seconds to Power off or go Standby mode.
[showing clock and date], or cancel sleep, or cancel alarm function.
Briefly push to power on the unit.

- b. **VOLUME**: Rotate the scroll button to adjust the volume up or down during playback.

- c. **MUTE**: Press the scroll button to mute the music when playing.

- d. **SELECT**: Rotate the scroll button scroll through a menu or station list. Press to the scroll button to select the chosen option. Press and hold Select scroll button to auto scan DAB/FM stations.

- e. **SNOOZE**: Press the scroll button to snooze a set time when alarm sounding.

4. **▶▶ / Tune+**: Press to select the next track under FM/DAB/ Bluetooth Mode; Press and hold the Tune+ button 2 seconds to auto-scan the stations under the FM mode.

5. **MENU**: press the MENU to show the MENU for the current mode.
Press again to show now playing screen.

6. BACK: press the BACK to return to the previous screen.

7. ►|| : Press to select Play/Pause under BT mode.

8 SOURCE: Press to Source to select different modes DAB, FM, Bluetooth.

9. ◀◀ / Tune-: Press to select the previous track under Bluetooth mode.

DAB mode

1. In DAB mode, press MENU button to enter the menu list. Press the TUNE+/TUNE- button to select option through the list of menu or rotate SELECT knob to scroll the menu list. Then, stop at your preferred option and Push the SELECT knob to confirm. The menu options are: full scan/ manual tune/ DRC /prune/ system.

2. Full scan – under menu list, rotate the SELECT knob to select “Full scan” through the list of menu, Push the knob to confirm and full scan starts automatically to fig.4. Once a scan is completed, the radio returns to play the previously-selected station or first station on the station list.

Note: if no radio station found, it shows “No DAB station”. For a better reception, extend the antenna or do the full scan again in another place.

3. Manual tune – as well as the normal method of scanning, you can also manually tune to a particular channel/frequency. This can be useful for adjusting your antenna to achieve the best possible reception and scanning a particular channel to update the station list. Under menu list, press the TUNE+ button or rotate SELECT knob to select “Manual tune” through the list of menu, Push SELECT knob to confirm. Rotate SELECT knob to select a particular channel/frequency and then Push SELECT button to confirm the setting to fig.5. The display shows a live indication of the received signal strength on the selected frequency.

Adjustments to your antenna will be manifested in the received signal strength displayed.

4. DRC (Dynamic range compression) – this function reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder and loud sounds comparatively quieter.

Options: off (default)/high/low under menu list, press the TUNE+ /TUNE- button or Rotate SELECT knob to select “DRC” through the list of menu, Push SELECT button to confirm. Then press the TUNE+/TUNE- button or Rotate SELECT knob to select a particular setting and Push SELECT knob to confirm the setting.

5. Prune – this removes all invalid stations indicated in the station list with a '?' in front of the station name.

Under menu list, Rotate SELECT knob to select “Prune” through the list of menu, Push SELECT knob to confirm.

6. System – the System menu options are:

Sleep /Alarm / Equaliser / Time / Backlight / Language/, Factory Reset / Software upgrade / SW version.

6.1 Sleep – when listening to the radio you can set a period of time before the radio enters 'standby' mode.

Note: the radio must be active and not in 'standby' mode already.

Under the system menu, Rotate SELECT knob to select through the list of menu, push in SELECT knob to confirm Sleep to fig.9. Then press TUNE-/TUNE+ button or rotate SELECT knob to select

< sleep off / 15mins / 30mins / 45mins / 60mins / 90mins > and Push SELECT knob to confirm.

6.2 Alarm- Press Menu>System setting> Alarm. There are 2 Alarms, you can press and hold Play/Pause button to switch to Alarm 2. Alarm 1 set up: Press **SELECT** knob to set on time/Source/ Frequency / Volume then push **SELECT** knob to confirm the settings.

Parameters

Alarm – Off | On

Source – DAB/FM/Buzzer

Frequency - Daily | Once | Weekends | Weekdays

6.3. Time – if there is any DAB+ radio signal, the machine will automatically update the time, there is no signal, can also be set manually.

*Set Time/Date: set hour / set minute / set month / set date> set year > saved

*Auto update options: update from Any / update from DAB / update from FM / no update

*Set 12/24 hour: 12hour/24 hours

*Set date format: DD-MM-YYYY.

6.4 Backlight - The MD2 has a backlight with three brightness settings, and adjustable timeout (this is the time delay, in seconds, after which the display switches to the Dim level). Refer to fig.11.

There are three settings:

- Timeout - On | 10 | 20 | 30 | 45 | 60 | 90 | 120 | 180 sec
- On level - High | Medium | Low
- Dim level - High | Medium | Low

6.5. Language – the language used for display messages can be selected from below options: English | Espanol | Francais | Italiano | Nederlands | Norsk | Polski Suomi | Dansk | Deutsch. Under the system menu, press the TUNE+/TUNE- button or rotate **SELECT** knob to select “Language” through the list of menu, Push the **SELECT** knob to confirm. Cycle through Language menu by press the TUNE+/TUNE- button or rotate **SELECT** knob to select, select and stop at a particular language, Push the **SELECT** knob to confirm.

6.6. Factory Reset – this function clears all user defined settings, replacing them with the original default values, so time/date, preferences/settings, DAB station list and preset stations are all lost. Under the system menu, Rotate **SELECT** knob to select “Factory Reset” through the list of menu, Push the **SELECT** knob to confirm. Then, or rotate **SELECT** knob to choose <Yes> and Push the **SELECT** knob to start the factory reset.

6.7. Software Upgrade- From time to time, CR4 may make software upgrades available with bug Fixes and/or additional features.

This feature is for service centre.

6.8. Software version – this is used to display the current software version. Under the system menu, or rotate **SELECT** knob to select “Software version” through the list of menu. Push the **SELECT** knob to confirm. Then, the existing SW version will be showed.

FM mode

1. In FM mode, Press **MENU** button to enter the menu list. Rotate **SELECT** knob to select option through the list of menu.

Then, stop at your preferred option and Push the **SELECT** knob to confirm. The menu options are: scan setting, audio setting, and system.

2. Scan setting - by default, FM scans stop at a Strong stations only. Options: Strong stations only / All stations under menu list, rotate **SELECT** knob to select a particular option in “Scan setting”, then Push the **SELECT** knob to confirm the change to new setting.

3. Audio setting - by default, all stereo stations are reproduced in stereo. For weak stations, this may result in poor quality audio. The audio quality can be improved using mono. Options: Stereo allowed Forced mono under menu list, rotate **SELECT** knob to select a particular option in “Audio setting”, then Push the **SELECT** knob to confirm the change to new setting. It will automatically change to new setting after 3 seconds.

4. System - Please refer to above description point 6 “System”.

Bluetooth Mode

Bluetooth mode allows CR4 to act as a wireless speaker playing audio content from a connected Bluetooth capable device.
To enter Bluetooth mode: Press SOURCE to choose Bluetooth mode
To connect a Bluetooth capable device.
Use your Bluetooth capable smart device to pair and connect with the CR4.

TECHNICAL SPECIFICATION

Model:	CR4
Type:	DAB & FM Radio
Speaker:	1 X 2.5" full range speaker
Power:	5W RMS
Power Supply:	5V DC
Dimension (mm):	174 X 109 X 100MM
Weight:	0.86KG

Specifications subject to change without notice.

LE•MEGA
LIFE & ALOUD

CR4 DAB & FM Radio

If you have any questions or suggestions,
please share with us

info@lemegaaudio.com
www.lemegaaudio.com

