

PMP54INBK - PMP54INBL - PMP54INRD



This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference. Ensure it is available to all persons using this device.



Unique Elements:

- High-output 50W handheld bullhorn for strong voice projection over long distances.
- 3.5 mm AUX input to play audio from phones, MP3 devices, and other external sources.
- Dedicated siren/alert mode for emergency situations, ensuring immediate attention.
- Adjustable volume control for versatility in different environments and sound requirements.

Features:

- 50W Output for Loud, Clear Sound in Large Crowds and Outdoor Settings
- User-friendly Controls for Volume, Power, and Microphone Adjustments
- Digital Amplifier for Enhanced Sound Projection
- Compact, Portable PA System for Easy Transport and Powerful Sound
- Wired Handheld Microphone for Clear Voice Amplification
- Integrated Siren Alarm Function
- 3.5mm AUX Input for Connecting External Devices to Play Music or Audio
- Adjustable Volume Control
- Ergonomic, Lightweight Pistol Grip for Comfort and Ease of Use
- Perfect for Crowd Control & Public Gatherings
- Ideal for Outdoor Events, Sports Teams, Rallies, Schools, and Emergency Use

What's in the Box:

- Thin Type 50W Megaphone
- Strap

Technical Specs:

- Construction Materials: Plastic
- Carrying Strap: Included
- Volume Control Type: Analog
- Output Power: 50W
- Charging Method: DC12V
- Battery Type: 8 C batteries (not included)
- Battery Life: 8-10 hours
- Weight: 1.8 lbs
- Microphone Type: Dynamic
- Operating Range: Up to 1000m
- Product Dimensions (D x L): 7.5 x 14.9 inches



SAFETY

This megaphone is intended to be used only as described in this user manual. Any other use or use under different operating conditions is considered improper and may result in personal injury or device damage. Please use the megaphone as described and supervise its use when used by children or minors.

- Ensure that plastic bags, packaging, etc., are removed.
- Never let children use electrical devices unattended.
- Observe proper polarity when inserting batteries. Incorrectly inserted batteries may cause damage & the risk of fire.
- Leaking batteries can cause permanent damage to the device.
- Remove batteries if the megaphone will not be used for long periods.

PRECAUTIONS

- Ensure correct polarity of cells used. Insert the batteries in the correct direction by aligning the (-) marks on the batteries with the spring in the back cover.
- Use new batteries/cells whenever possible.
- When the megaphone is not in use for a long period, remove the dry cells and replace them. Drained cells or rechargeable batteries will not provide sufficient sound volume.

California Prop 65 Warning

⚠ WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov



Questions? Comments?

We are here to help!

Phone: (1) 718-535-1800

PyleUSA.com/ContactUs

 
 
 
Battery Insertion

- Unfasten the clip located near the top, back side of the unit.
- The clip will release the lid to reveal the battery compartment.
- Please observe the correct battery direction placement on the top side of the opening battery compartment lid. Insert batteries, close the cover, and fasten the clip until locked.

NOTE: Make sure the batteries are inserted correctly, observing correct polarity.


TO REPLACE BATTERIES

1. Loosen the locking screw of the battery compartment cover on the back of the body. The battery compartment cover comes off.
2. Insert 8 x type-C (UM-2) batteries into the battery case, observing correct polarity.
3. Insert the battery case with batteries into the battery compartment of the megaphone, paying attention to polarity.

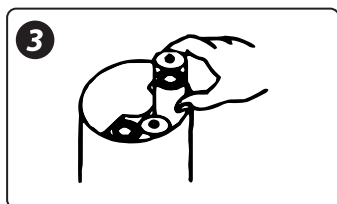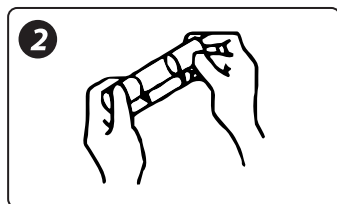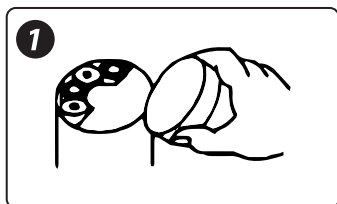

OPERATING INSTRUCTIONS

 1. When carrying the megaphone on the shoulder, press the (1) press-to-talk power on-off switch on the left side of the microphone.
2. When holding the megaphone at the grip, fix the microphone hanger inlet in the microphone fixing hanger, then press the (2) press-to-talk power on-off switch back with your index finger.
3. Position the speaker opening mouth towards the object and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.
4. Turn the sound volume control on the right-hand side of the microphone and adjust the sound level to the maximum without causing howling.
5. Adjust the volume control to the min. before recording.
6. To record, press the RECORD button. Now your megaphone is ready for recording. The longest record time is about 60 seconds. Press the RECORD button again after recording is done.
7. Press the PLAY button to activate the recorded materials circularly.

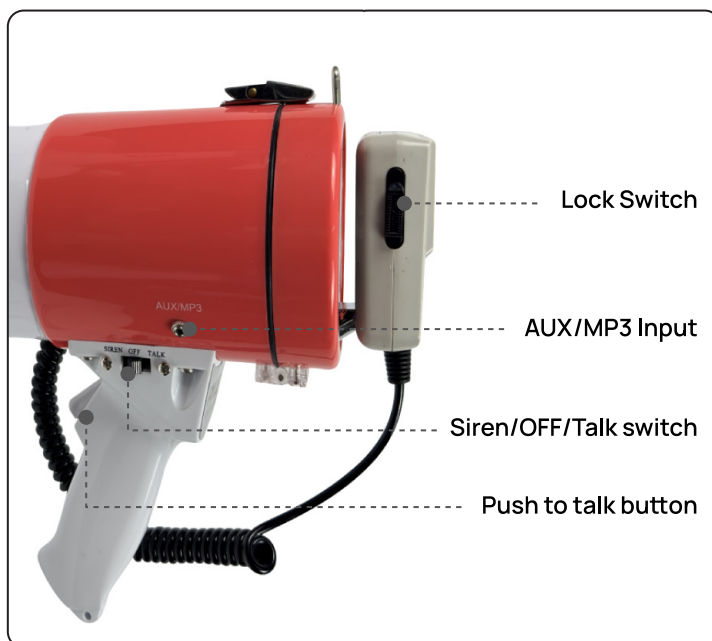

- Slide the 'PA Mode Selector Switch' on the side of the megaphone to choose the desired PA mode and to power on/off the unit. Choose between 'Siren,' 'Talk,' and 'Off' modes.
- **Talk:** While in 'Talk' mode, speak through the microphone mouthpiece while holding the 'Press-to-Talk' button on the detachable handheld differential mic. Users also have the ability to use the 'PA Talk Trigger Switch' on the megaphone's handheld pistol grip. NOTE: An adjustable volume control slider is also located on the handheld mic.
- **Siren:** Selecting this mode activates an automatic, continuous alarm siren. Switch to another mode to discontinue the alarm siren play.
- **Off:** Powers the unit off.

Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.

Start Here



Model Number:
PMP54INBK

PyleUSA.com/pages/register