 




Retro Bluetooth Turntable

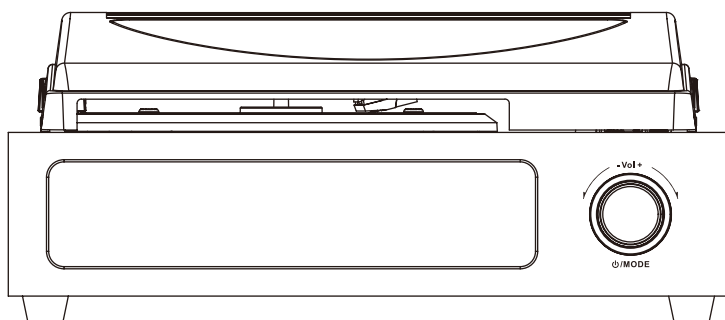

Model: JP-2326

Instruction Manual

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.


To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation.

PRODUCT OVERVIEW

FRONT VIEW

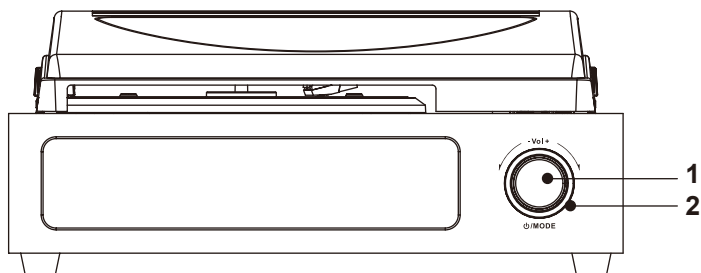

BACK VIEW

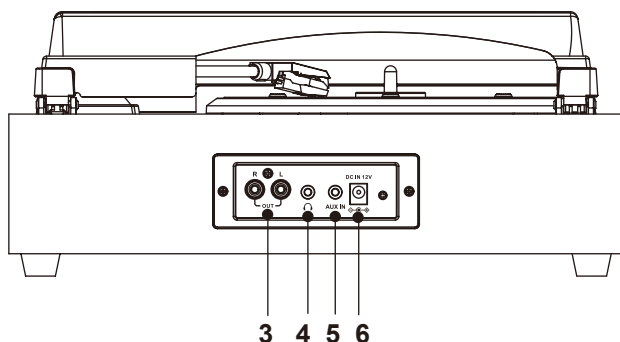

1. ⏻/MODE button & Volume knob

- Press the **⏻/MODE button** to turn on the turntable, then press repeatedly to switch to different mode (Bluetooth, Vinyl, Auxiliary), press and hold the button to turn off the turntable.
- In Bluetooth mode, double press this button to disconnect or reconnect the Bluetooth connection; in AUX/HDMI mode, double press this button to enter Bluetooth transmitting state.
- Rotate the **Volume knob** to adjust the music volume.

2. Light ring

3. LINE OUT jacks


4. Earphone jack

5. AUX IN jack

6. DC IN jack

PRODUCT OVERVIEW

BACK VIEW

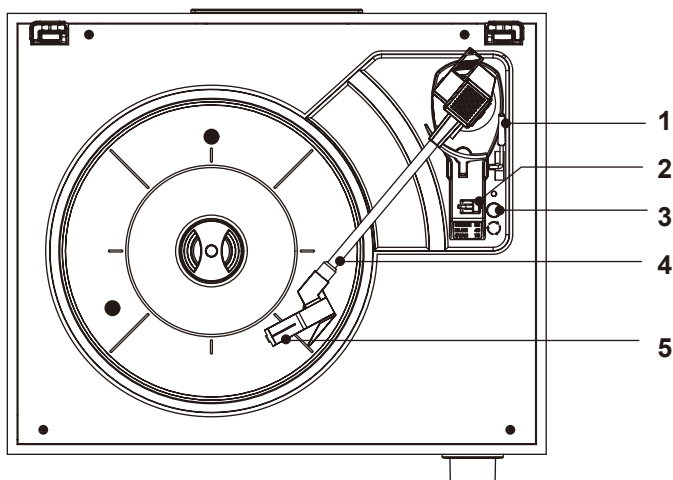

1. **Lift lever**

2. **Hold down clip**

3. **Speed selector**

Press to select the playback speed. (Green 33 $\frac{1}{3}$ rpm, Blue 45 rpm, Cyan 78 rpm)

4. **Tone arm**

5. **Stylus**


GENERAL OPERATION

1. Plug the AC adapter into the DC IN jack to power the turntable.
2. Press the **⏻/MODE button** to turn on the turntable, then press the button repeatedly to switch to different mode; press and hold the **⏻/MODE button** to turn off the turntable.
3. In Bluetooth mode, double press the **⏻/MODE button** to disconnect the current Bluetooth connection, then you can connect to another Bluetooth device, or you can double press again to reconnect the device.
4. In AUX/HDMI mode, double press the **⏻/MODE button** to transmit the audio signal to another Bluetooth device via Bluetooth transmission, double press again to stop the transmitting.
5. The turntable will enter standby mode after 20 minutes without audio signal input (only for Europe version).

BLUETOOTH RECEIVER AND TRANSMITTER

Bluetooth Receiver

1. Plug the AC adapter into the DC IN jack of the turntable.
2. Press the **⏻/MODE button** to turn on the turntable, then press the button repeatedly to switch to Bluetooth mode, and you will hear a sound "Bluetooth" and the Light ring will flash blue.
3. Enable the Bluetooth function on your Bluetooth device to search for the turntable.

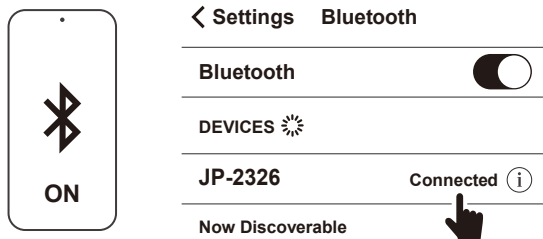

4. When the pairing name "JP-2326" appears in the list, select it to make connection.
5. Once connected, you will hear a confirmation sound and the Light ring stops flashing.
6. Now you can play the music on your Bluetooth device.

Note: If you want to connect another Bluetooth device, double press the **⏻/MODE button** on the turntable to disconnect the current Bluetooth connection.

Bluetooth Transmitter


You can play music from this turntable to external Bluetooth speaker/soundbar/earbud/headphone.

1. Start playback in AUX/HDMI mode.
2. Double press the **⏻/MODE button** on the turntable to activate Bluetooth Transmitter function, the Light ring will flash.
3. Power on the external Bluetooth device and activate its Bluetooth pairing mode.
4. After a few seconds, the external device will connect to the turntable automatically, then the Light ring will stop flashing.
5. To turn off Bluetooth Transmitter mode, double press the **⏻/MODE button** on the turntable.


Note: Make sure there is no other Bluetooth devices near the turntable.

VINYL RECORD PLAYBACK

1. Plug the AC adapter into the DC IN jack of the turntable.
2. Press the **⏻/MODE button** to turn on the turntable, then press the button repeatedly to switch to Vinyl mode, and you will hear a sound "Vinyl" and the Light ring will flash white.
3. Open the cover of the turntable.
4. Detach the stylus guard by pulling straight in the direction shown.

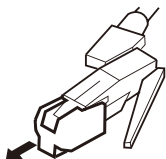

5. Place a vinyl record (not included) on the turntable by aligning the Turntable Spindle to the record hole.
6. Press the Speed Selector to select 33, 45 or 78 to match the play speed of the record.
7. Unlock the Hold Down Clip.

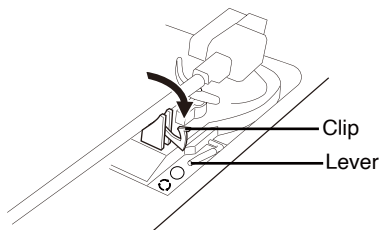


8. Raise the Cue Lever to lift the tone arm off the tone arm support.
9. Gently move the tone arm to the edge of the record (or the starting point of a track).
10. Release the Cue Lever to put the tone arm on the record and it will automatically start playing.
11. Rotate the **Volume +/- knob** to adjust the volume.
12. To pause/stop during playback, raise the Cue Lever to lift the tone arm off the record.
13. When finished listening, the tone arm will automatically stop after a while and return to the tone arm holder, then you can lock the Hold Down Clip.

Note: Put the 45 RPM Adapter across the Turntable Spindle firstly if playing a 45 RPM record.

AUX IN AND LINE OUT

AUX IN


1. Plug the AC adapter into the DC IN jack of the turntable.
2. Press the **⏻/MODE button** to turn on the turntable, then press the button repeatedly to switch to AUX mode and you will hear a sound “Auxiliary”, the Light ring will light green.
3. Plug one end of the supplied AUX in cable into the AUX IN jack at the rear of the turntable, plug the other end into the AUX out jack of external audio device (e.g., MP3 player, mobile phone, tablet).

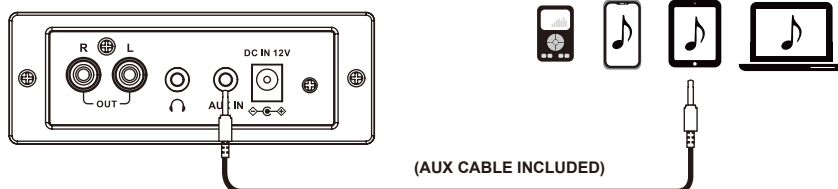

4. Start playing music on your external audio device.
5. Adjust the volume to the desired level by rotating the **Volume knob**.
6. When finished listening, stop the playback and unplug the AUX in cable from the AUX IN jack.

LINE OUT

1. Connect one end of the RCA audio connection cable (not included) to the LINE IN jacks or AUX IN jacks on the external audio amplifier.
2. Connect the other end of the cable to the LINE OUT jacks on the rear of the turntable as the illustrated.
3. Power on the external audio amplifier and set it to LINE IN mode.
4. Power on the turntable and play music in any mode, the sound will be heard through the external audio amplifier.

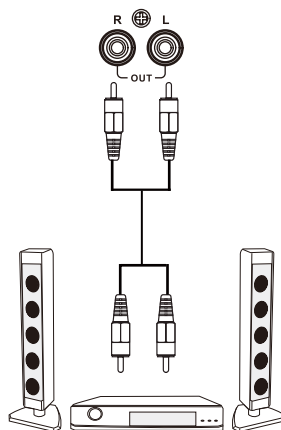

(To the Line In/AUX In jacks on the external audio amplifier.)

VINYL RECORD PLAYBACK

The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality.


Prolonged use of a worn-out stylus may damage the record. Wear and tear on the stylus will be accelerated when playing 78 RPM records. The higher speed of 78 RPM records can wear more quickly.

Caution:

- Do not remove or bend the stylus.
- To avoid injury, do not touch the needle.
- Turn off the unit's power before you replace the stylus.
- Keep out of the reach of children.
- Handle with care, as the stylus is delicate. Use of a bent or broken stylus may damage the record and cause the turntable stylus to malfunction.
- Do not expose the stylus to extreme heat.
- Contact a qualified repair company if you have trouble changing the stylus.


Removing an old stylus:

1. Set a screwdriver at the tip of the stylus and push down to the direction "A".
2. Pull the stylus out toward direction "B".

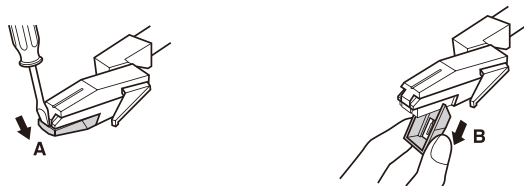

Installing a new stylus

1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tip.

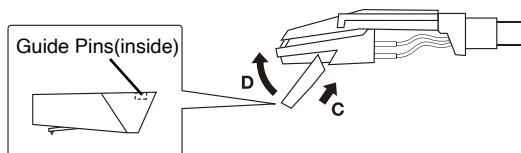

CARE AND MAINTENANCE

Check the following before requesting service:

Function	Problem	Solution
General	No power.	• Plug the power adapter into the wall outlet and connect its DC plug to the turntable's DC IN jack.
	No sound.	• Rotate the Volume knob to adjust the volume.
	There is interference.	• Devices near the turntable may cause interference. Relocate the turntable further away from them or turn the other appliances off.
Record Player	Will not play.	• Detach the stylus guard. The stylus guard is a white plastic cover that protects the stylus during transportation. If you fail to remove this guard, the needle cannot contact the grooves of the record and no sound will be heard. • If the stylus is worn-out, change the stylus. • Select the correct playback speed.
	Sound skips.	• Place the turntable on a stable surface to avoid vibration and shock. • Clean the surface of the record. • Do not use scratched, damaged or warped records.
AUX in	No sound.	• Ensure the AUX cables are securely connected. • Rotate the Volume knob to adjust the volume.
Bluetooth	Will not play.	• Device is not paired properly, re-pair the device.

SPECIFICATIONS

- Power Source: 12V $\overline{\text{---}}$ 1A
- Power Consumption: Max. 12W
- Turntable Speed: 33-1/3, 45, 78 RPM
- Bluetooth® Version: 5.3
- Input: AUX In
- Power Source: AC 100-240V~50/60Hz, DC 12V/1A
- Accessories Included: Power Adapter, 45RPM Adapter, AUX In Cable, RCA Cable, User Manual

Support@otic.shop

Shenzhen Junlan Electronic Ltd.

Add: No. 71 Lijing South Road, Pingshan District , Shenzhen, CHINA



The appliance is in compliance with the essential requirements and other relevant provisions of the following EC directives: 2014/35/EU LOW voltage directive and the 2014/30/EU EMC directive.



Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



For indoor use only



MADE IN CHINA