



User Guide

tpPLC Utility
For TP-Link Powerline Adapters and Extenders

Contents

About This Guide	1
Chapter 1. Get to Know the tpPLC Utility	2
Chapter 2. Quick Start	4
Chapter 3. Manage an Individual Powerline Device	7
3. 1. Change Basic Settings.....	8
3. 1. 1.Rename a Device.....	8
3. 1. 2.Turn On or Off the LEDs	9
3. 1. 3.Customize Wireless Settings	9
3. 1. 4.Reset a Device	10
3. 1. 5.Check the Firmware Version.....	11
3. 2. Change Advanced Settings.....	12
3. 2. 1.Set Up QoS	12
3. 2. 2.Update the Firmware	13
3. 2. 3.Change the Working Mode	14
3. 3. Redirect to the Web Management Interface	16
3. 4. Remove a Remote Device.....	16
Chapter 4. Manage the Whole Powerline Network	17
4. 1. Add a Device to the Network.....	18
4. 2. Set a New Powerline Network Name.....	18
4. 3. Refresh the Page	19
4. 4. Turn On or Off the LEDs.....	20
4. 5. View Usage Tips	20

About This Guide

This guide provides detailed functions of the tpPLC Utility and shows how to manage your powerline devices according to your needs. In addition to this guide, a Quick Installation Guide is also released with each TP-Link powerline device. You are suggested to configure your powerline devices for quick internet setup by following the published Quick Installation Guide before you get started with a further configuration.

When using this guide, please notice that features of the product may vary slightly depending on the model and software version you have, and on your location, language, and internet service provider. All images, parameters and descriptions documented in this guide are used for demonstration only.

Conventions

In this guide the following conventions are used:

Convention	Description
Powerline adapter	Stands for a TP-Link powerline device providing only wired access without any explanation.
Powerline extender	Stands for a TP-Link powerline device providing both wired access and wireless access without any explanation.
Powerline device	Stands for both TP-Link powerline adapters and powerline extenders without any explanation.
<u>Underlined</u>	Hyperlinks are in teal and underlined. You can click to redirect to a website or a specific section.
Teal	Key information appears in teal, including management page text such as menus, items, buttons and so on.
 Note:	Ignoring this type of note might result in a malfunction or damage to the device.
 Tips:	Indicates important information that helps you make better use of your device.

More Info

- The latest software, management app and utility are available from the [Download Center](http://www.tp-link.com/support) at <http://www.tp-link.com/support>.
- The Quick Installation Guide (QIG) can be found where you find this guide or inside the product package.
- Specifications can be found on the product page at <http://www.tp-link.com>.
- A Technical Support Forum is provided for you to discuss our products at <http://forum.tp-link.com>.
- Our Technical Support contact information can be found at the [Contact Technical Support](http://www.tp-link.com/support) page at <http://www.tp-link.com/support>.

Chapter 1

Get to Know the tpPLC Utility

This chapter briefly introduces the tpPLC Utility.

What This Software Does

The tpPLC Utility is a computer software used to view and manage TP-Link powerline devices, including powerline adapters and powerline extenders.

Compared with the web management interface focusing on single-device management, the tpPLC Utility shows you a vivid and intuitive powerline network, and it also enables you to conveniently manage all powerline devices in the network.

View a Vivid and Intuitive Powerline Network

This utility can show you a network map, with the local powerline device at the bottom, remote powerline devices above it, and colored lines between them. The colored lines illustrate the current powerline data rates, yellow lines for rates higher than 50Mbps while red lines for rates lower than 50Mbps. It also shows the LEDs on each device in real time for you to know the working status of your devices.

Manage an Individual Powerline Device

With this utility, you can change the settings for each powerline device in the current network, redirect to the web management interface of a powerline extender for more settings, or remove a remote device from the current network.

Note that earlier TP-Link powerline devices (200Mbps series) and non-TP-Link powerline devices only support the renaming and removing functions.

Manage the Whole Powerline Network

This utility also enables you to manage the whole powerline network, such as adding a new device, setting a new powerline network name, and turning on or off the LEDs on all powerline devices. What's more, it also provides usage tips for you to better use your powerline devices.

Chapter 2

Quick Start

This chapter guides you on how to prepare for using the utility.

1. Download the utility and install it on your computer.

- For Windows Users

- a) Go to the product support page at <http://www.tp-link.com> and download the tpPLC Utility package.
- b) Double-click the package and follow the setup wizard to install the utility.

■ Note:

WinPcap (version 4.1.2 or higher) is required for the tpPLC Utility. If it is not found on your computer, the wizard will guide you to install it.

- c) Wait until the installation is completed. The following icon will appear on your desktop.



 
- d) Double-click the tpPLC icon to open the utility.

- For Mac Users

- a) Go to the product support page at <http://www.tp-link.com> and download the tpPLC Utility package.
- b) Double-click the package and drag tpPLC to Applications.



- c) Find the utility in Launchpad or Applications. Click to open it.




2. Simply connect your computer to a powerline device via an Ethernet cable or wirelessly.

Then the utility will show you the powerline network, with the local powerline device at the bottom and remote powerline devices above it.

🔧 Tips:

1. You can click each device to view the current powerline rates. If you see a red line between two devices, move either device to another location and check the rates again.
2. You can change the display language of the product according to your needs.

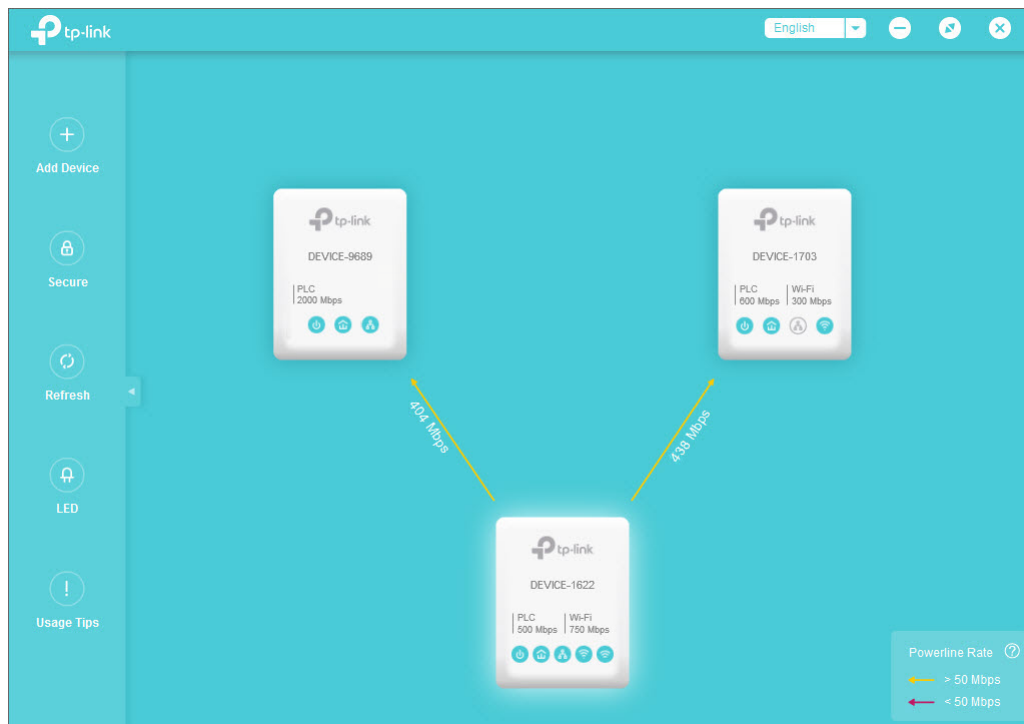

Chapter 3

Manage an Individual Powerline Device

This chapter guides you on how to manage an individual powerline device via the utility. It contains the following sections:

- [Change Basic Settings](#)
- [Change Advanced Settings](#)
- [Redirect to the Web Management Interface](#)
- [Remove a Remote Device](#)

3.1. Change Basic Settings

3.1.1. Rename a Device

The utility names a powerline device in “Device-XXXX” format by default, in which “XXXX” indicates the last four digits of the device’s MAC address. You can rename your powerline devices for easy identification. To rename a device, follow the steps below:

1. Open the utility, move your mouse over a device, and click the  (Basic) icon.

Note:


Login is required at your first access to basic settings of a powerline extender. The login username and password (admin/admin by default) are the same as those of the web management interface.



2. Go to the [Rename](#) page, enter a new name, and click [Save](#).

A screenshot of the 'Basic - DEVICE-1622' settings window. On the left is a sidebar with buttons: 'Rename' (selected), 'LED', 'Wireless', 'Reset', and 'Version'. The main area contains the text 'Enter a new device name.' above a text input field containing 'My Bedroom'. A 'Save' button is located at the bottom right of the main area.

Now the new device name will be displayed on the device.

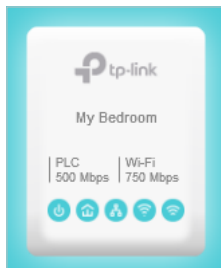


3.1.2. Turn On or Off the LEDs

Device LEDs help you to know the device working status. To turn on or off the LEDs on a device, follow the steps below:


1. Open the utility, move your mouse over a device, and click the ⚙️ (Basic) icon.

■ **Note:**

Login is required at your first access to basic settings of a powerline extender. The login username and password (admin/admin by default) are the same as those of the web management interface.

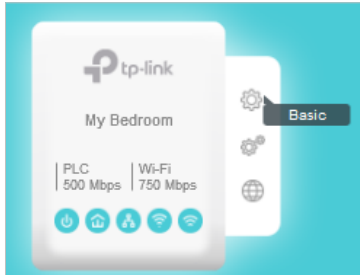

2. Go to the LED page, and click the icon to turn on or off the LEDs.

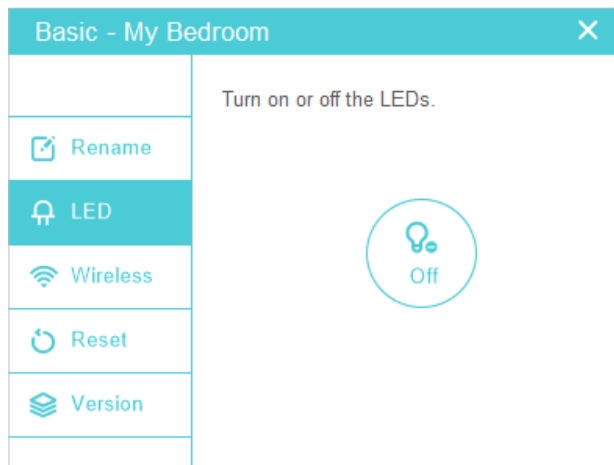

Now the displayed LEDs as well as the actual product LEDs will become on or off correspondingly.

■ **Note:**

Some powerline extenders support Wi-Fi Move. If such devices are on a powerline network that does not use the default name (HomePlugAV), changes made to the LED status of one device will be synchronized to other devices.


3.1.3. Customize Wireless Settings

For a powerline extender (wireless powerline device), you can customize its wireless settings. Follow the steps below to customize:

1. Open the utility, move your mouse over a powerline extender, and click the ⚙️ (Basic) icon.

■ **Note:**

Login is required at your first access to basic settings of a powerline extender. The login username and password (admin/admin by default) are the same as those of the web management interface.

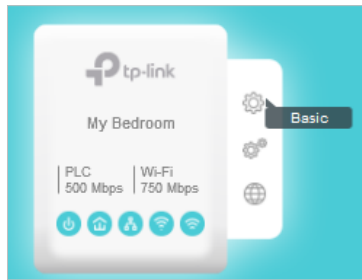

2. Go to the [Wireless](#) page, click [2.4GHz](#) or [5GHz](#).

Note:

If you can't find the [Wireless](#) menu, make sure you select a powerline extender, not a powerline adapter. Then make sure your computer uses an IP address of the same segment as the powerline extender's IP address assigned by your router. We recommend you change your computer to obtain an IP address automatically.

 A screenshot of the 'Basic - My Bedroom' settings page. On the left is a sidebar with options: 'Rename', 'LED', 'Wireless' (highlighted), 'Reset', and 'Version'. The main area shows the 'Wireless' configuration. At the top are tabs for '2.4GHz' and '5GHz'. Below them, the 'Wireless' section has a checked 'Enable Wireless Radio' checkbox. The 'SSID' field contains 'TP-LINK_1702' and the 'Password' field contains '12345670'. A 'Save' button is at the bottom right.

3. Keep the [Enable Wireless Radio](#) checkbox selected, enter a new SSID and password, and click [Save](#).

Note:

The password type is the same as that on the web management interface. To change the password type, go to the [Wireless > Settings](#) page on the web management interface. For details, refer to the User Guide of your powerline extender.

Now you can wirelessly connect to the powerline extender using the new SSID and password you set.

Note:

Some powerline extenders support Wi-Fi Move. If such devices are on a powerline network that does not use the default name (HomePlugAV), changes made to the wireless settings of one device will be synchronized to other devices.


3.1.4. Reset a Device

To reset a device to factory default settings, follow the steps below:


1. Open the utility, move your mouse over a device, and click the  ([Basic](#)) icon.

Note:

Login is required at your first access to basic settings of a powerline extender. The login username and password ([admin/admin](#) by default) are the same as those of the web management interface.

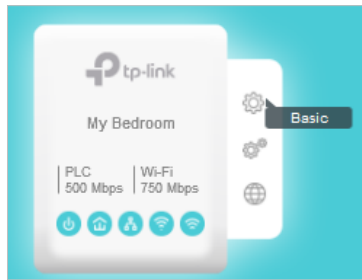

2. Go to the [Reset](#) page, and click [Reset](#).

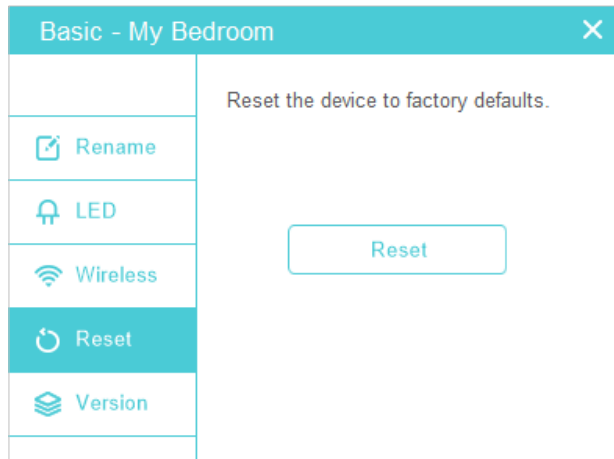

Now this device will be restored to its factory default settings.

Note:

After reset, the device may leave the original powerline network if this network does not use the default name (HomePlugAV). In this case, refer to the device's Quick Installation Guide to pair the device.

3. 1. 5. Check the Firmware Version

To check the firmware version of this device, follow the steps below:


1. Open the utility, move your mouse over a device, and click the  ([Basic](#)) icon.

Note:

Login is required at your first access to basic settings of a powerline extender. The login username and password ([admin/admin](#) by default) are the same as those of the web management interface.



2. Go to the [Version](#) page.

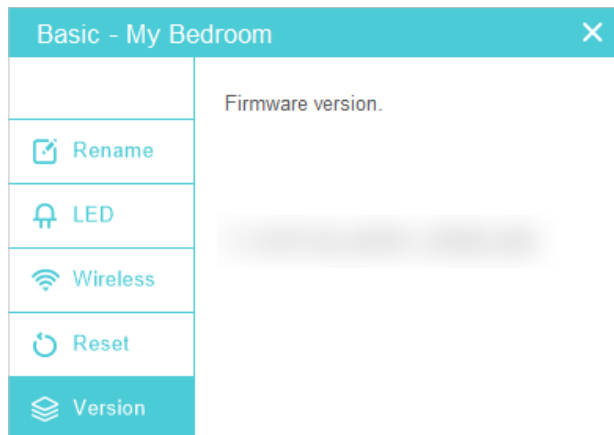

Here you see the current firmware version of this device. You can update it on the [Advanced > Update](#) page.


3.2. Change Advanced Settings

3.2.1. Set Up QoS


QoS (Quality of Service) allows you to give highest priority to a specific traffic type. The powerline device will first guarantee transmission of the selected traffic type in case of data traffic congestion.

To set up QoS, follow the steps below:

1. Open the utility, move your mouse over a device, and click the  ([Advanced](#)) icon.

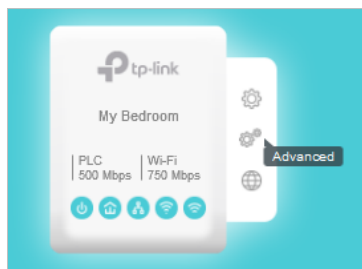

2. Go to the [QoS](#) page, select a traffic type, and click [Save](#).

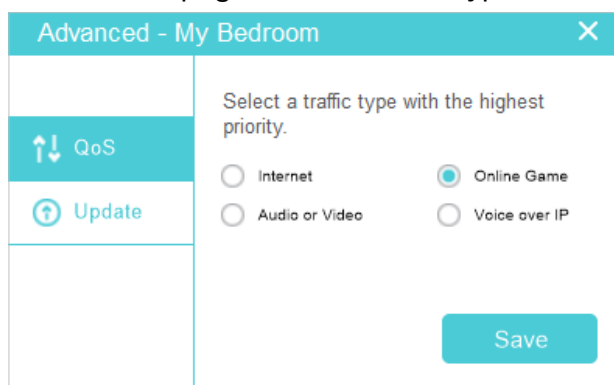

Now the powerline device will first guarantee transmission of the traffic type you selected in case of data traffic congestion.

3.2.2. Update the Firmware

TP-Link is dedicated to improving and enriching the product features, giving you a better network experience. We will release the latest firmware at TP-Link official website (<http://www.tp-link.com>). You can download and upgrade the latest firmware for your device.

 Tips:

For a powerline extender, it's better to back up your current settings and update the firmware on the web management interface. For details, refer to its User Guide.

To update the firmware, follow the steps below:

1. Download the latest firmware package specific to your product model from the support page at <http://www.tp-link.com>.
2. Decompress the package to obtain the update file(s).

 Note:


You may obtain simply a BIN file, a GGL file, or a combination of NVM and PIB files, depending on the product model.

3. Open the utility, move your mouse over a device, and click the  (Advanced) icon.



4. Go to the **Update** page.

You may see one of the following pages, depending on the product model.

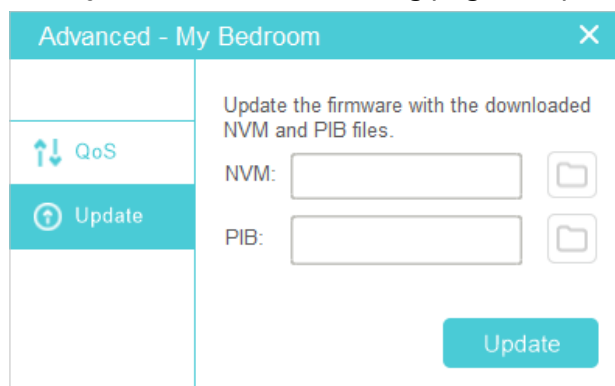The screenshot shows the 'Advanced - My Bedroom' firmware update page. The page has a teal header with the title and a close button. On the left, there is a sidebar with 'QoS' and 'Update' (selected) options. The main content area contains the instruction 'Update the firmware with the downloaded NVM and PIB files.' Below this, there are two input fields: 'NVM:' and 'PIB:', each with a file selection icon to its right. At the bottom right, there is a large teal 'Update' button.

Advanced - DEVICE-0001

↕ QoS

⬆ Update

Update the firmware with the downloaded GGL file.

GGL: 

Update

Advanced - DEVICE-2705

↕ QoS

⬆ Update

Update the firmware with the downloaded BIN file. If you have already logged in to the web management page, please log out before updating.

BIN: 

Update

5. Select the obtained update file(s), and click **Update**.

6. Wait for the upgrading to complete.

Note:

During the upgrading process, do not turn off or reset the powerline device.

3.2.3. Change the Working Mode

For some powerline devices you can change their working mode according to your needs.

- **Power Saving Mode**


This mode is supported by powerline adapters only. It can reduce the powerline adapter's power usage if the device connected to it is off or inactive for over 5 minutes.

This mode is enabled by default. If you want to disable it, follow the steps below:

1. Open the utility, move your mouse over a powerline adapter, and click the  (Advanced) icon.



2. Go to the **Mode** page and disable the **Power Saving Mode**.

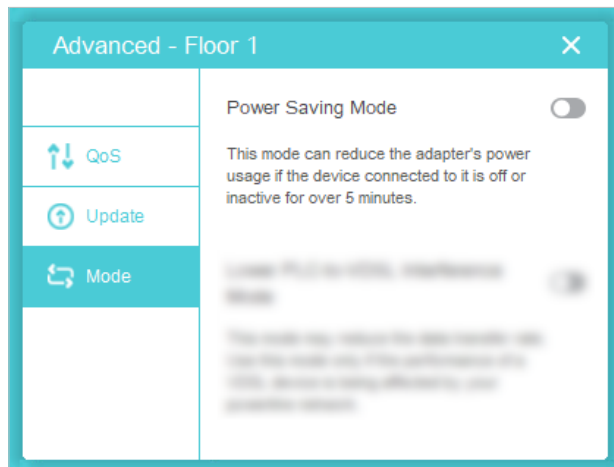

- **Lower PLC-to-VDSL Interference Mode**


This mode is supported by 8-series and 9-series powerline devices only. It can lower the interference to the VDSL device, but may reduce the data transfer rate. Use this mode only if the performance of a VDSL device is being affected by your powerline network.

This mode is disabled by default. If you want to enable it, follow the steps below:

1. Open the utility, move your mouse over an 8-series or 9-series powerline device, and click the  (**Advanced**) icon.



2. Go to the **Mode** page and enable **Lower PLC-to-VDSL Interference Mode**.

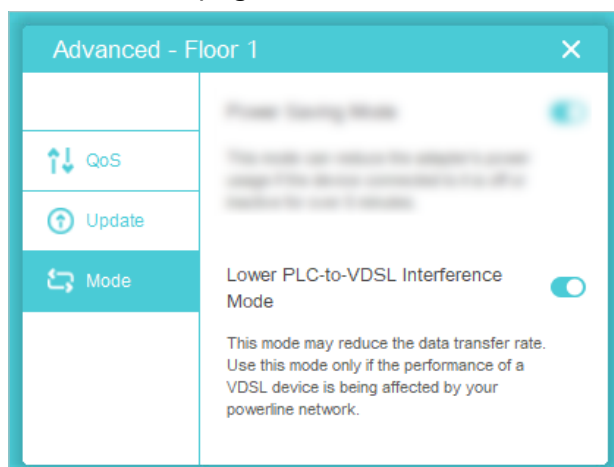

3. On the pop-up window, click [Apply](#).

Now this device will have less interference with your VDSL device.

3.3. Redirect to the Web Management Interface

For a powerline extender (wireless powerline device), you can redirect to its web management interface for more settings.

Open the utility, move your mouse over a powerline extender, and click the  ([Website](#)) icon.

Note:

If you can't find the [Website](#) icon, make sure you select a powerline extender, not a powerline adapter. Then make sure your computer uses an IP address of the same segment as the powerline extender's IP address assigned by your router. We recommend you change your computer to obtain an IP address automatically.



Now a web browser will pop up and you are redirected to the web management interface.

3.4. Remove a Remote Device

To remove a remote device from the current network:

Open the utility, move your mouse over a remote device, and click the  ([Remove](#)) icon.



Now the remote device will leave the current powerline network and disappear from the utility.

Chapter 4

Manage the Whole Powerline Network


This chapter guides you on how to manage the whole powerline network via the utility. It contains the following sections:

- [Add a Device to the Network](#)
- [Set a New Powerline Network Name](#)
- [Refresh the Page](#)
- [Turn On or Off the LEDs](#)
- [View Usage Tips](#)

4. 1. Add a Device to the Network

To add a device to the current network, follow the steps below:

1. Write down the 16-digit powerline key printed on the device label.
2. Plug the device into a wall socket and wait until its LEDs become stable.
3. Open the utility, and click [Add Device](#) on the left column.

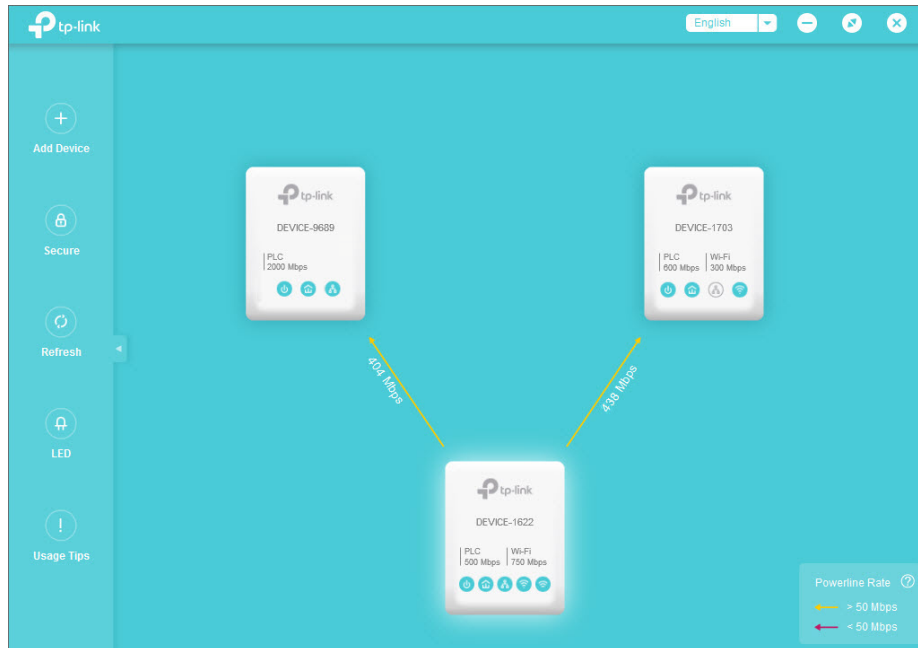

4. On the [Add a New Device](#) page, enter the powerline key you wrote down, and click [Save](#).

The screenshot shows a dialog box titled 'Add a New Device' with a close button (X) in the top right corner. Inside the dialog, there is a prompt: 'Please enter the Powerline Key printed on its back.' Below this, the text 'Powerline Key:' is followed by four input fields containing the characters 'ERQE', 'TQRE', 'RYWE', and 'HYQE'. At the bottom right of the dialog is a blue 'Save' button.

Now the new device will appear on the utility.


4. 2. Set a New Powerline Network Name

Powerline network name groups powerline devices into a network. TP-Link powerline devices use the name HomePlugAV by default, and therefore they can form a network

once plugged on the same electrical circuit. You can change this name to a new one, allowing only the powerline devices using the same name to join this network.

To set a new powerline network name, follow the steps below:

1. Open the utility, and click **Secure** on the left column.

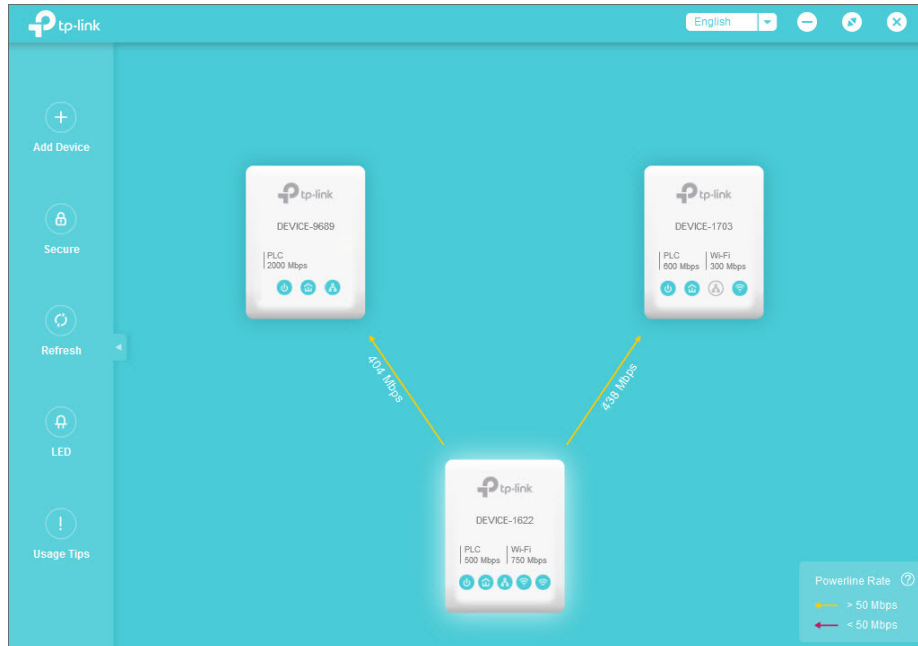

2. On the **Secure Powerline Network** page, enter a new name, or generate a random name. Then click **Save**.

The screenshot shows a dialog box titled 'Secure Powerline Network' with a close button (X) in the top right. Inside, it says 'Enter a new powerline network name.' Below this is a text input field containing 'Auto-Encrypted Name' and an eye icon to toggle visibility. There are two buttons: 'Generate New Name' and 'Use Default Name'. At the bottom center is a 'Save' button.

Now only the powerline devices using the same name can join this network.


4.3. Refresh the Page

To refresh the page, simply click **Refresh** on the left column.


4.4. Turn On or Off the LEDs

Device LEDs show you working status of the device . To turn on or off the LEDs on all the powerline devices in the current network, follow the steps below:

1. Open the utility, and click **LED** on the left column.

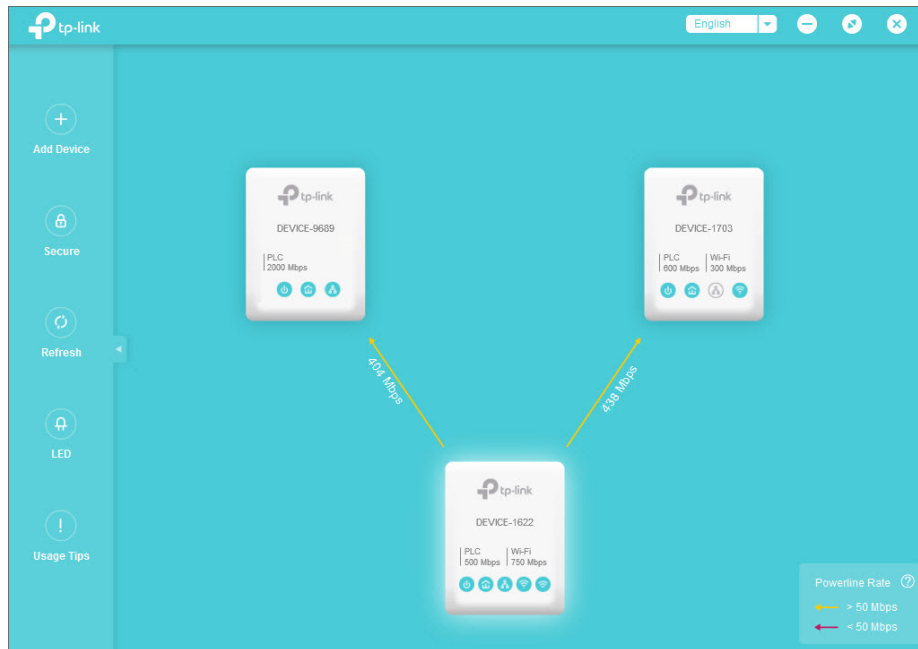



2. On the **LED ON/OFF** page, click the **On** or **Off** icon.

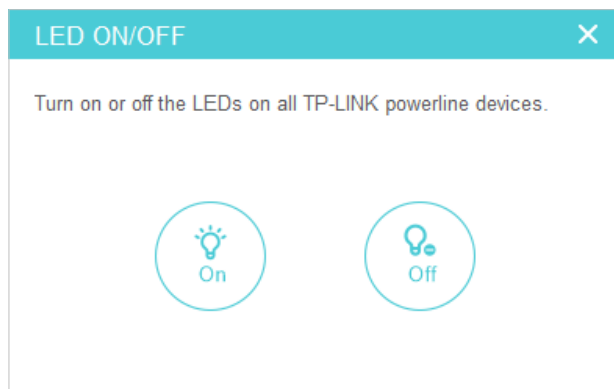

Now the displayed LEDs as well as the actual product LEDs will become on or off correspondingly.

4.5. View Usage Tips

To view the usage tips for using powerline devices, open the utility, and click **Usage Tips** on the left column.

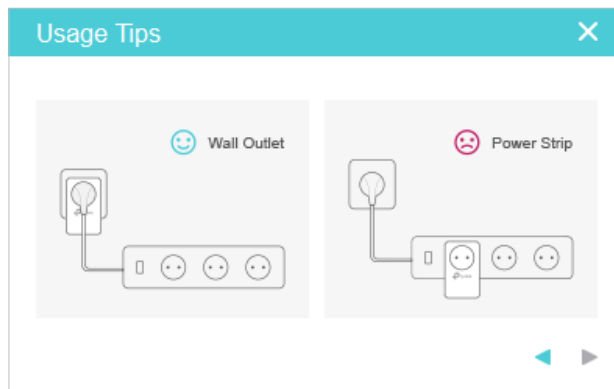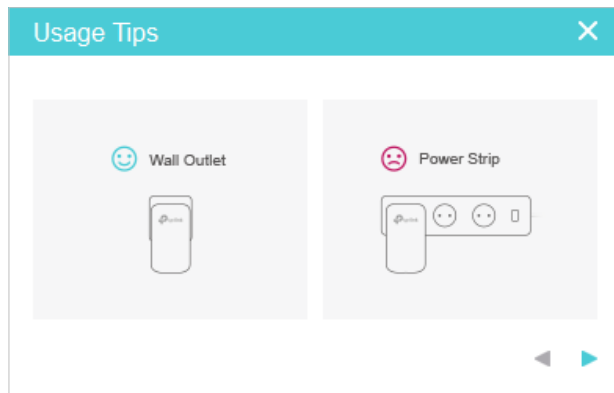

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2017 TP-Link Technologies Co., Ltd. All rights reserved.