

User manual



To fully benefit from the item we offer, please read this manual carefully before using and keep for future reference.

Important Tips

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Check the sieve for damage every time you use the appliance. Do not use the appliance if the rotating sieve is damaged.

Always disconnect the appliance from the mains supply socket if it is left unattended and before assembling, disassembling or cleaning.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

⚠ Never use this appliance for anything other than its intended use. This appliance is for household use only. Do not use this appliance outdoors.

⚠ Always ensure that hands are dry before handling the plug or switching on the appliance.

⚠ Always use the appliance on a stable, secure, dry and level surface.

⚠ This appliance must not be placed on or near any potentially hot surfaces (such as a gas or electric hob).

⚠ Never immerse any part of the appliance or power cord and plug in water or any other liquid.

⚠ Never let the power cord hang over the edge of a work top, touch hot surfaces or become knotted, trapped or pinched.

⚠ Do not use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking.

⚠ Never use any accessory or attachment not recommended by the manufacturer.

⚠ Switch off the appliance before changing accessories or approaching parts which move during use.

⚠ Allow moving parts to come to a stop before opening or cleaning.

⚠ Never insert your fingers, utensils or any other object into the feeding tube. Always use the food pusher.


⚠ Never attempt to remove or replace any part of the appliance whilst it is in operation.

Ensure that the appliance is switched off and unplugged from the supply socket if it is left unattended and before assembling, disassembling or cleaning.

Never immerse any part of the appliance or power cord and plug in water or any other liquid.

Never use harsh, abrasive or caustic cleaners to clean this appliance.

Product Features

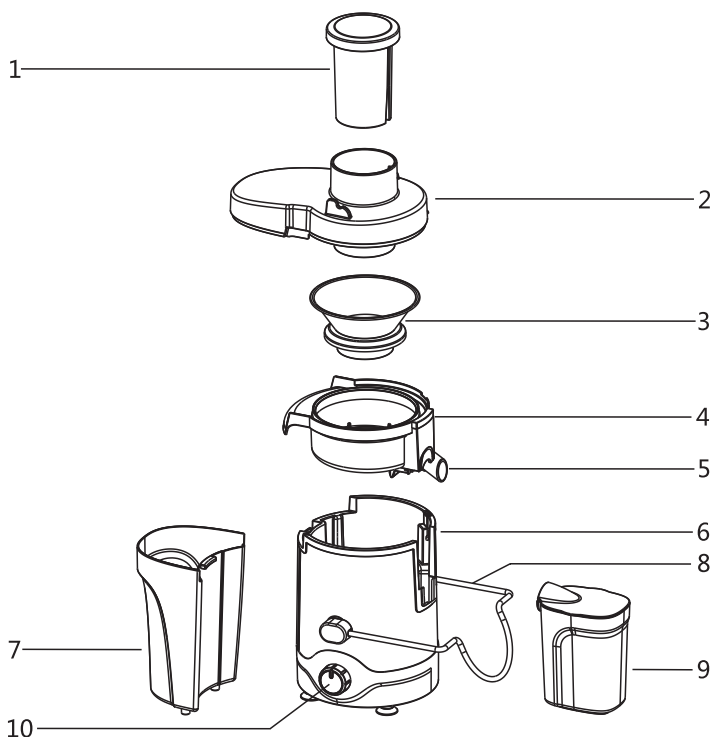

1. Food pusher

For safely pushing whole fruit and vegetables into the professional juicer's feed chute. Dishwasher safe.

2. Juicer cover

Dishwasher safe, durable, clear cover.

3. Juice strainer

Dishwasher safe.

4. Bowl

Dishwasher safe.

5. Juice outlet

Up and down adjustable.

6. Motor base

High performance, 600W copper motor.

7. Pulp container

8. Interlocking safety arm

9. Juice container

10. Knob switch


Specification

ALW-J01

AC120V~60Hz

600W

Principle

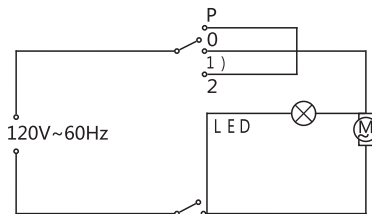


How to use



Be careful when handling the stainless steel sieve. Do not touch the small sharp blades inside the sieve.


Place the motor base on a flat, dry surface such as your kitchen worktop. Ensure that the 3-position switch is in the off (0) position, then switch the appliance off at the power outlet and unplug the cord.

1. Hang the pulp container on the motor base.
2. Install the juicing bowl on the motor base
3. Insert the juice strainer into the juicing bowl and attach it to the motor wheel
4. Put the juicer cover right above on the motor base and properly install it to make sure the protrusion of the juicer cover is correctly contact with the safety switch lever. Or the juicer will not work normally.
5. Lift the interlocking arm up properly to activate the safety switch.
6. Put the food pusher in.
7. Put the juice container next to the motor base. Press the juice outlet down at the lower position. Make sure this operation has been down before you start the juicer, otherwise leakage will occur.
8. Install the juice container lid properly.
9. Turn off the juicer and take the juice container lid
10. Take the juice container
11. Lift the juice outlet up to the upper position in case that the juice drip down the table.
12. Complete.

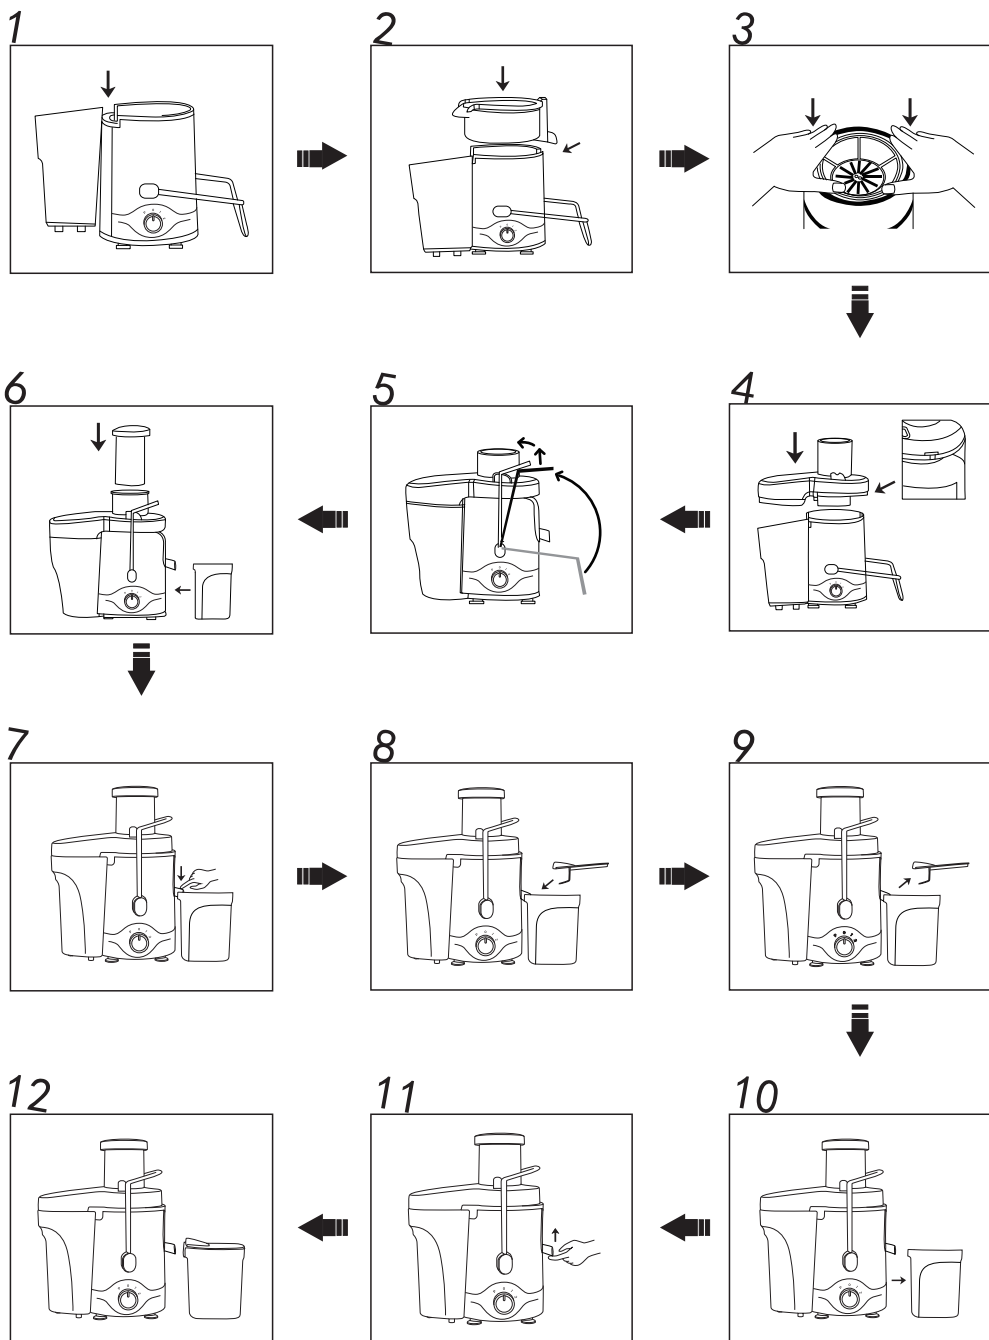

Problem and Solution

Problem	Solution
The appliance does not work.	The appliance is equipped with a safety system. If the parts have not been assembled properly, the appliance does not work. Switch off the appliance and check if the parts have been assembled in the right way.
The appliance slows down during use.	The integrated pulp container has reached its maximum capacity. Switch off the appliance and remove the pulp from the integrated pulp container.
The appliance makes a lot of noise, gives off an unpleasant smell, is too hot to touch, gives off smoke etc.	It is very common for a new appliance to give off an unpleasant smell or emit some smoke the first few times you use it. This will stop after you have used the appliance a number of times. The appliance may also give off an unpleasant smell or emit some smoke if you process too many ingredients, if you process very hard ingredients (e.g. leeks) or if you let the appliance operate too long. In these cases, switch off the appliance and let it cool down for 60 minutes.
The filter touches the feeding tube or vibrates strongly during processing.	Switch off the appliance and unplug it. Check if the filter is placed properly in the juice collector. The ribs in the bottom of the filter have to fit properly onto the driving shaft. Check if the filter is damaged. Cracks, crazes, a loose grating disc or any other irregularity may cause malfunction.
The filter is blocked	Switch off the appliance, clean the feeding tube and the filter and process a smaller quantity.

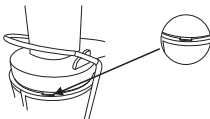Situation arises	Solution
The machine doesn't work	Make sure the transparent lid has been installed correctly so that the safety switch can be activated completely. 
Why does juice leakage occur?	1. Make sure the transparent lid and pulp container has been installed correctly. 2. Make sure the juice outlet sits at the lower position before you start the machine. 
What speed will be suitable for different fruit & veges ?	1 is a low-speed gear for processing soft fruits and vegetables such as watermelon, tomato, cucumber and strawberry . 2 is a high-speed gear for processing all fruits and vegetables. High yield fruit & veges recommended are apples, oranges, pears, pineapple, watermelon, carrots, celery, cucumber.
Fruit & veges are not recommended	Bananas, durians, fruit with less water content are not suitable for juicing, and mangoes need to be juiced after pitting.

Cleaning

⚠ Do not immerse the motor base, cord or mains plug in water or any other liquid. The stainless steel sieve and feed chute contain sharp parts. Do not touch these parts when handling or cleaning.

- For easy cleaning - immediately after each use rinse removable parts under running water (to remove wet pulp). Allow parts to air dry.
- After disassembling the unit all removable parts may be washed in hot soapy water.
- The juicer cover, bowl, large pulp container, stainless steel sieve and juice jug are dishwasher safe. Only use the top shelf of your dishwasher
- Wipe the motor base with a damp cloth. Do not immerse the motor base in any liquid.
- Before washing the juice jug, remove the froth separator by lifting it up and out of the jug. Rinse the jug and separator under running water
- Discolouration of the plastic may occur with strongly coloured fruit and vegetables. To help prevent this, wash parts immediately after use
- If discolouration does occur, the plastic parts can be soaked in 10% lemon juice and water or they can be cleaned with a non abrasive cleaner.

Made In China

