



KAISER[®]

MODEL: MSA-7515MX

Rechargeable Portable Speaker with FM Player

CHARGE
FOR
5 HOURS
BEFORE
FIRST
USE



Images are for illustrative purposes only; colors and design may vary.

Read the entire manual before using this product for the first time.

mitzu.com

[@mitzu.official](https://www.instagram.com/mitzu.official)

[MitzuCorp](https://www.youtube.com/MitzuCorp)

[mitzu.official](https://www.spotify.com/artist/mitzu.official)

[Mitzu.Corp](https://www.facebook.com/Mitzu.Corp)

WELCOME

Thank you for purchasing the new KAISER® product. We are confident that you will be very satisfied with your purchase.

CONTENTS



1



2



3



4



5

1. Rechargeable Speaker (1 unit).
2. Power Cable (1 unit).
3. Remote Control (1 unit).
4. Wired Microphone (1 unit).
5. Tripod (1 unit).

HOW TO TURN ON?



- Set all switches to OFF.
- Check that the volume is set to the lowest level.
- Verify that the voltage of the power source is compatible with the equipment's required voltage.

1. Connect the power cable to the speaker and then to the power outlet. Allow it to charge for 5 hours before turning it on for the first time.
2. Press the power switch (ON) to turn on the equipment after charging the battery for the first time.
3. Connect the product to the power outlet when the battery is low for up to 4 hours in order to maximize battery life. The unit can continue to be used while connected.



If the device is used intermittently, it is recommended to fully charge the battery at least every 30 days.


GENERAL DESCRIPTION



- A) CONTROL PANEL
- B) WOOFER
- C) WIRED MICROPHONE
- D) REMOTE CONTROL

OPERATION

A CONTROL PANEL

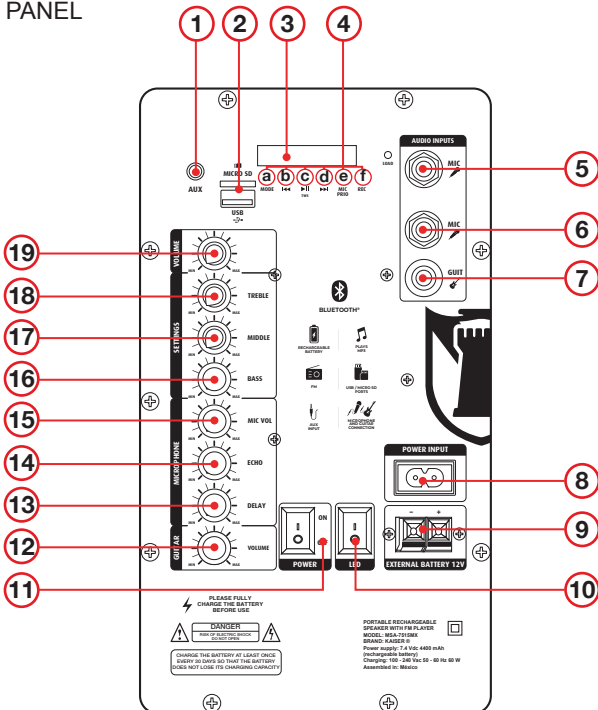

1) 3.5 mm AUXILIARY INPUT

2) USB / MICRO SD INPUT

3) DISPLAY

4) BUTTONS

a) MODE

Switches between USB / FM / AUX / Micro SD / BLUETOOTH® modes.

BLUETOOTH®

Enable Bluetooth on your mobile phone. Search for and connect to the unit named "MSA-7515MX". After successful pairing, you can play music. You will not need to reconnect Bluetooth® when switching modes.

b) Previous Track Button

c) PLAY / PAUSE Button / Press and hold to enter TWS function

TWS

- Only 2 speakers can be connected at the same time.
- Both speakers must be in BLUETOOTH® MODE to use TWS.
- Press and hold the PLAY / PAUSE button for 3 seconds.
- The speakers will connect automatically. To listen to music via BLUETOOTH®, you must pair your mobile phone with the main device.
- Press and hold the PLAY / PAUSE button for 3 seconds to exit TWS function.

d) Next Track Button

e) MIC PRIO Button

- To turn the microphone priority function on and off, press and hold the "MIC PRIO" button.
- Insert the microphone before using this function and ensure the microphone is turned on.
- Gives priority to the microphone.

f) RECORD Button

- Insert a USB / Micro SD card into the slot, then connect the wired microphone and ensure it is working.
- Press and hold "RECORD" to start audio recording.
- Press "RECORD" briefly to play the recorded file.
- Press again to exit the recording function.

5) 6.3 mm MICROPHONE INPUT

6) 6.3 mm MICROPHONE INPUT

7) 6.3 mm GUITAR INPUT

8) POWER INPUT

9) 12 V DC EXTERNAL BATTERY CONNECTION INPUT

10) LED LIGHT SWITCH


NOTE: In FM mode, the LED light should be turned off to improve radio signal reception.

11) POWER SWITCH

12) GUITAR VOLUME KNOB

- 13) DELAY KNOB
- 14) ECHO KNOB
- 15) MICROPHONE VOLUME KNOB
- 16) BASS KNOB
- 17) MIDRANGE KNOB
- 18) TREBLE KNOB
- 19) MASTER VOLUME KNOB

D REMOTE CONTROL

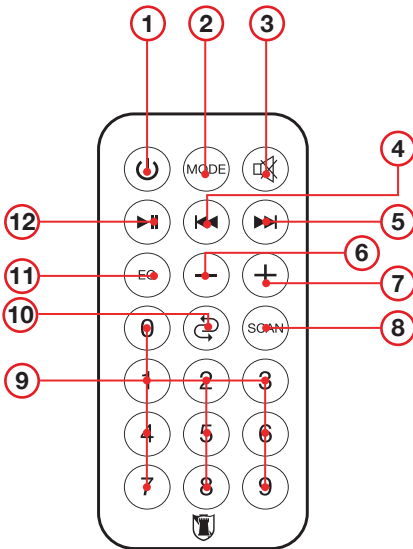

1) STANDBY BUTTON: Puts the unit into Standby Mode.

2) INPUT MODE BUTTON: Switches between USB / Micro SD Card / FM / AUX / BLUETOOTH®.

3) MUTE BUTTON: Mutes the track.

4) PREVIOUS TRACK BUTTON: Selects the Previous Track / Channel.

5) NEXT TRACK BUTTON: Selects the Next Track / Channel.

6) VOL-: Decreases the main volume.

7) VOL+: Increases the main volume.

8) SCAN FM CHANNELS: Scans channels in FM Mode.

9) NUMERIC KEYS: For selecting a specific track from the USB Flash Drive or Micro SD Card.

10) REP. (REPEAT): Repeats the currently playing track.

11) EQ: Selects the EQ mode.

12) PLAY / PAUSE BUTTON.

SPECIFICATIONS

Model: MSA-7515MX

Product Name: Rechargeable Portable Speaker with FM Player

FCC ID: TBD

Power supply: 7.4 Vdc 4400 mAh (rechargeable battery)

Charging: 100 - 240 Vac 50 - 60 Hz 60 W

Woofers: 15" (38.1 cm)

Impedance: 3 ohms

Frequency response: 45 Hz - 8 kHz

Sensitivity: 92 dB

Tweeter: 1.5" (3.81 cm)

Bluetooth® version: 5.3

Bluetooth® frequency range: 2.4 GHz

Bluetooth® operating range: Up to 32.8 ft tested in an unobstructed line of sight under optimal conditions



Volume level	Battery duration
25% volume	3.5 hours
50% volume	2.5 hours
100% volume	1.5 hours



IMPORTANT



During use, keep other devices at least 30 cm away from this equipment.



This equipment has no ventilation slots.



Do not place the device on flammable sources such as lit candles.



The device should not be exposed to dripping or splashing water, and objects filled with liquids (such as glasses) should not be placed on the device



CAUTION



Installed batteries should only be replaced by qualified personnel.



Risk of explosion if the battery is not replaced correctly.



Replace only with the same type or equivalent.



Batteries (installed) should not be exposed to excessive heat such as sunlight, fire, or similar.

This device must not be exposed to dripping or splashing liquids.



Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device should be installed and operated with a minimum distance of <1 cm between the radiator and your body.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions regarding operation or compliance, contact:

MITZU GLOBAL, LLC
828 Hallmark Dr.
Laredo Tx 78045
contact@mitzu.com
+1 (956)740-7746