


2.4G DC Ceiling Fan Light Controller Specifications

(2.4G APP + Tmall Genie)

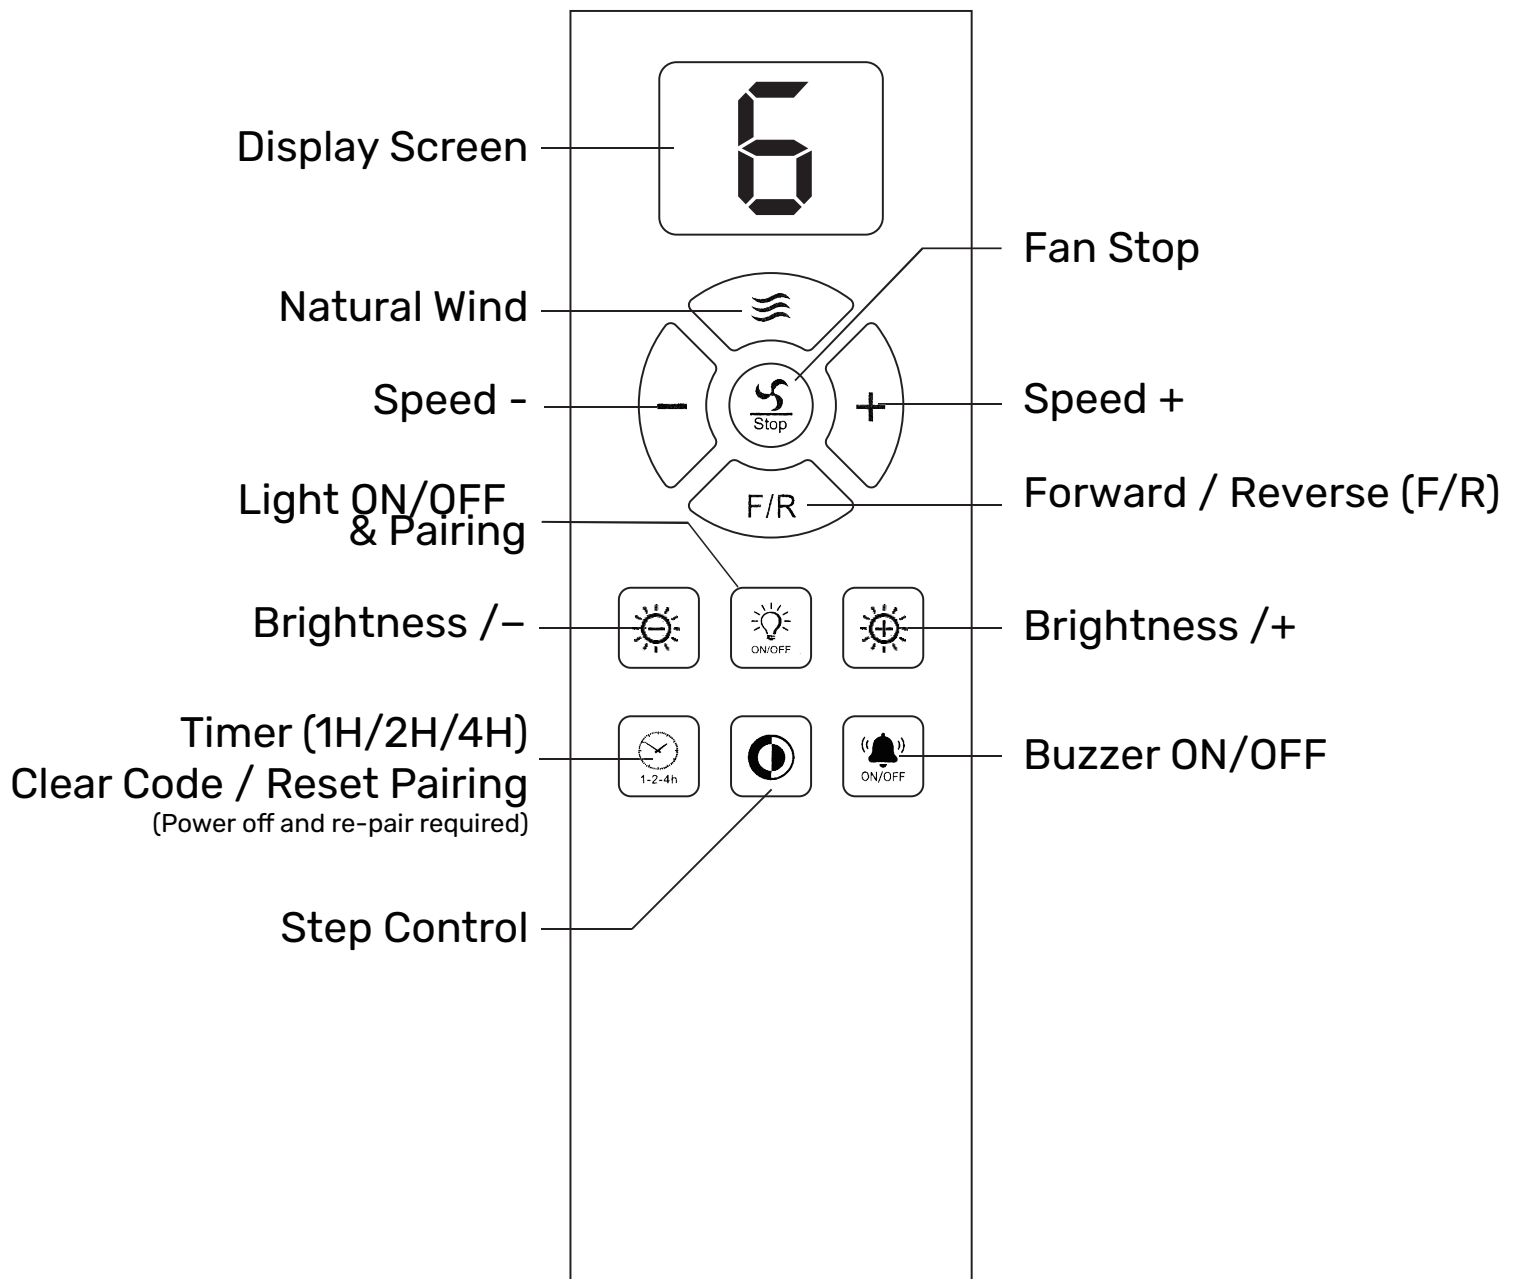

Display Area

- Display Screen: Shows the current fan speed level (1–6) and operating status.

Fan Control Buttons

- **Natural Wind:** Activates natural wind mode. The fan speed will vary automatically to simulate a natural breeze.
- **Speed –:** Decreases the fan speed level.
- **Speed +:** Increases the fan speed level.
- **STOP (Fan Stop):** Stops the fan immediately.
- **F/R (Forward / Reverse):**

Switches the fan rotation direction:

- a. **Forward (Summer Mode):** Produces a downward airflow for cooling.
- b. **Reverse (Winter Mode):** Circulates warm air by pushing air upward.

Light Control Buttons

- **Light ON/OFF:** Turns the light on or off. Press and hold to pair the remote control (if applicable).
- **Brightness + / –:**
Adjusts light brightness:
 - a. **Short press:** Step-by-step adjustment.
 - b. **Long press:** Stepless dimming.
- **Color Temperature + / –:** Adjusts the light color temperature (Warm / Neutral / Cool).

Timer & Additional Functions

- **Timer (1H / 2H / 4H):** Sets the fan auto-off timer. Press repeatedly to cycle through 1 hour → 2 hours → 4 hours.
- **Clear Code (Reset Pairing):** Used to clear the pairing code after power cycling. Refer to the main product manual for detailed reset steps.
- **Segment Button:** Used for segmented control of light or fan functions (depending on model configuration).
- **Buzzer ON/OFF:** Turns the operation beep sound on or off.

Operating Instructions

- Ensure the ceiling fan is powered on before use.
- Point the remote control toward the fan receiver.
- Replace the batteries if the remote becomes unresponsive.
- Re-pair the remote if the fan does not respond correctly.

Safety & Maintenance

- Use only the specified battery type.
- Do not mix old and new batteries.
- Remove batteries if the remote will not be used for an extended period.
- Keep the remote away from heat, moisture, and direct sunlight.

Troubleshooting

- Remote not responding: Check battery installation or replace batteries.
- Fan or light not working properly: Confirm power supply and re-pair the remote if necessary.

FCC Warning Message

- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - -- Reorient or relocate the receiving antenna.
 - -- Increase the separation between the equipment and receiver.
 - -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.