

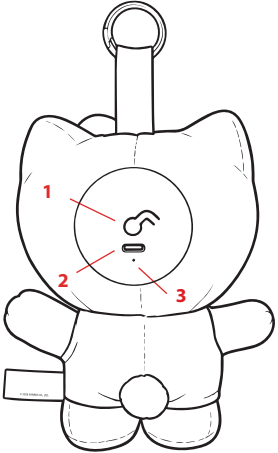
HKCLPSPKR01 : User Manual

03/26

FRONT

Compliance Information FCC Information This device complies with Part 15 of the FCC Rules. Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Radiation Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in 0mm exposure condition, compliance with exposure requirements. Only in the stated conditions, the device is shown to fully comply with the FCC RF Exposure requirements of KDB 447498. WARNING Li-ion Battery Inside This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F). Recycling Label Definitions - Direct current symbol. - This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. - This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency. - This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license. - This symbol represents FCC Declaration of Conformity and compliance.	Warranty Information 60-Day Limited Warranty Territory: United States LIMITED WARRANTY TO ORIGINAL CONSUMER This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows: To obtain warranty service: • Visit our customer support portal: www.customersupport123.com and select "Support". • Select the brand, fill out the corresponding form (exchanges require dated proof of purchase from an authorized retailer) then submit your request. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier. Warranty service not provided This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT	WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE. Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.  SIL-35047 Southern Telecom Inc. 5601 1st Ave. Brooklyn, NY 11220  © 2026 SANRIO CO., LTD. ™ and ® denote U.S. Trademarks Used Under License. www.sanrio.com Designed in US Printed in China 05-2026	 User Manual HKCLPSPKRPLSH
---	--	---	--

BACK

Before You Begin... ⚠Caution To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies. • THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device. • Do not disassemble, modify, or repair the device. • Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions. • Do not submerge in water. • Low power may cause poor Bluetooth connection or sound distortion. • Do not overcharge battery. • If using with a USB adapter, make sure the adapter is not damaged. • Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, water, or come into contact with any conductive materials such as liquids, metallic powders, etc. • The earbuds & case contain built-in batteries and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.	Location of Controls Mark 1: Power Button Mark 2: Charging port Mark 3: LED Indicator  Maintenance and Care: This product contains a built-in electronic speaker and cannot be submerged or soaked in water. • Spot clean only — use a slightly damp cloth to gently wipe the surface. • Keep all electronic components dry at all times. • Do not machine wash, hand wash, tumble dry, or iron. • Do not use bleach or harsh cleaning agents.	Getting Started Powering the Speaker • Using a Type-C USB cable (included), insert the jack into the hole on the bottom part of units and then plug the USB connector in to the USB port on a computer or 5V/1A (MAX 2A) adaptor (not included). • The LED indicator will light up RED while charging and turn off when fully charged Button Control • Long press the power button to power ON the speaker • Hold and press the power button for 2s and release to switch FM mode. • Long press the power button to power OFF the speaker • Short press to power button to adjust the volume, each press increase the volume to the maximum level, then gradually decrease it to the minimum, after which the volume will cycle back up again. • 2x press quickly the power button to skip the track when on the FM radio mode. Playing Music via Bluetooth • Long press the power button to power on the speaker. • A tone will be heard and the speaker will enter Bluetooth pairing mode. The LED indicator will flash quickly. • Make sure the Bluetooth function on your device is turned on. • Search the speaker named "HKCLPSPKRPLSH". • When connected successfully, a tone will be heard and the LED indicator will be solid BLUE. • The Bluetooth device does not find the Bluetooth device automatically sleeps after 5 minutes, the Bluetooth light is off, if you want to use Bluetooth, you must restart the boot. • Start playing music on your device. Make sure that you keep your device within a 33 feet range of your Bluetooth speaker. • Adjust the volume of your device to a comfortable level. • Turn off the unit when not in use. Using the FM Radio • Insert the small connector of the supplied charging cable into the hole on the back of the speaker as the radio antenna. • Long press the power button to power the speaker ON. • Hold and press the power button 2 seconds, then release to switch to FM radio mode, the unit will automatically track the found stations as it scans. • When starting to search for FM radio stations, the blue light flashes rapidly, and when once a station is found, the blue light flashes slowly. • Double click quickly the button to select an FM radio station. • Short press the power button to adjust the volume, each press increase the volume to the maximum level, a tone will be heard, then gradually decrease it to the minimum, after which the volume will cycle back up again. • Long press the button to power off the speaker.
--	---	--