

Safety and Precautions

Symbols	02
Warning	03
Caution	04
Note	04

Product Introduction

Product Introduction	05
----------------------	----

Product Usage

How to Attach	06
How to Pair	08
Function Chart by Press Duration	10
How to Replace the Battery	11

Troubleshooting

Troubleshooting	13
-----------------	----

Product Specifications

Product Specifications	14
------------------------	----

Symbols



Warning

Provides important information related to the safety of the user. Failure to comply may lead to death or serious injury.



Caution

Information provided for the safety of the user and the proper use of the product. Failure to comply may result in personal injury or property damage.



Note

Information provided for user convenience.



- FINEDIGITAL INC. assumes no liability for any accidents or damages occurring while driving.
- This product is designed to record and store video footage only. It does not automatically contact emergency services such as 119 or 112, nor does it prevent or detect accidents.
- Before use, please read all precautions carefully and use the product correctly.

Safety and Precautions



Warning

Failure to comply with the following instructions may result in death or serious injury of the user.

- Safety**
- Keep out of reach of children, as swallowing the battery can lead to serious injuries such as esophageal damage.
 - Do not disassemble, heat, or strike the battery, or place it near open flames. This may cause rupture or fire.
- Usage**
- Do not take your eyes off the road to operate the buttons while driving.
 - Do not attempt to disassemble or modify the product.



- Product specifications and the contents of this user manual are subject to change without notice to improve product performance.
- No part of this user manual may be reproduced without permission.
- We are not liable for any damages resulting from data loss or product loss caused by product malfunction in the event of an accident or any other circumstances.



Caution

Failure to comply with the following instructions may cause personal injury or property damage to the user.

- Attach**
 - Do not install within the airbag deployment range, in locations that obstruct the driver's view, on vehicle sensors, or on the instrument panel.
 - Do not expose to direct sunlight, high temperatures, or high humidity for extended periods.
- Usage**
 - Do not drop the product or subject it to strong impacts.
 - Do not use batteries other than those specified.
 - Avoid use in wet or humid environments.
- Connect**
 - Bluetooth connectivity with the dash cam may not be stable depending on internal vehicle structures or obstacles.



Information

Information provided for user convenience.

- Attach**
 - The attachment location may vary depending on the vehicle environment.
- Usage**
 - The battery features a power-saving design with a standby time of up to approximately 4 months; actual usage time may vary depending on the environment.
 - If the buttons are unresponsive, try removing and reinserting the battery.
- Connect**
 - The effective Bluetooth range is approximately 10m.

Product Introduction

Quick Button is an auxiliary device for vehicle dash cams that connects via Bluetooth, allowing you to instantly record and save footage of critical moments with just the press of a button. With this product, you can capture important moments without missing them — no additional software installation required.

Button

Press briefly to start emergency recording.

LED

Indicates the operating status by flashing.



Ring

Used to detach or attach the battery cover.

Battery Cover

Covers and protects the battery.



Battery Holder

Holds the battery in place.

Attachment Surface

The side with double-sided tape.
Remove the protective film before use.

How to Attach

1. Select the attachment location.

- Choose a spot that is within easy reach while driving and does not obstruct your view.
- The tape does not adhere well to uneven or absorbent materials such as leather or fabric. Attach to a flat, smooth plastic surface. (e.g., center fascia, between the instrument cluster and the infotainment screen)




2. Prepare the attachment surface.

- Use a dry cloth to wipe away any dust, moisture, or oil from the surface. Any remaining contaminants may reduce adhesive strength.



3. Attach the product.

- Remove the protective film from the 3M double-sided tape on the battery cover, place it on the selected location, and press firmly for 3 to 5 seconds.
- Since it connects via Bluetooth, it operates normally regardless of the direction or angle of attachment.
- The adhesive may not be fully set immediately after attachment. Avoid applying excessive force or removing and reattaching the product for approximately 24 hours.
- Repeated repositioning or removal may reduce adhesive strength. If this occurs, replace with new tape.

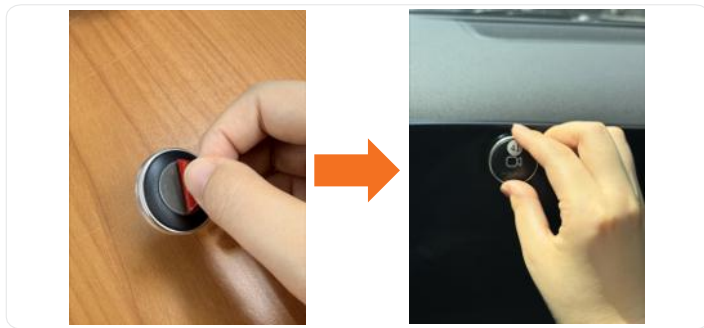

How to Pair

1. When the dash cam is on in driving mode, press and hold the button for 5 seconds, then release.

- Check that your dash cam model supports the Quick Button function. If not, the button will not connect.
- Check that the dash cam's Wi-Fi is turned on. If Wi-Fi is OFF, the button will not connect.
- The button will not connect when the vehicle ignition is off (parking mode).




2. Wait briefly until a voice prompt is heard from the dash cam.

- When successfully connected, a voice prompt saying "Quick Button connected" will play.
- If no voice prompt plays, the button's battery may be dead. Check if the LED at the bottom of the button flashes when pressed. If the LED does not light up, replace the battery.



3. While driving, briefly press the button whenever recording is needed to start emergency recording.

- Emergency recording lasts 20 seconds and is saved automatically.
- Pressing the button again during emergency recording will not extend or stop the recording.

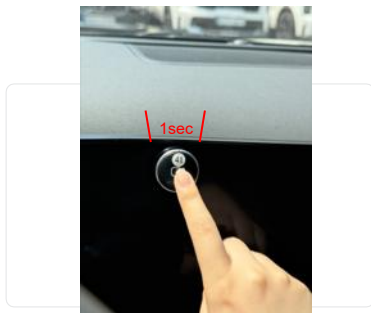


4. Recorded footage can be viewed after connecting to the smartphone app.

- For LCD models, footage can be viewed directly in playback mode on the dash cam screen.

5. To disconnect the button from the dash cam, press and hold the button for 10 seconds, then release.

- When successfully disconnected, a voice prompt saying "Quick Button disconnected" will play.

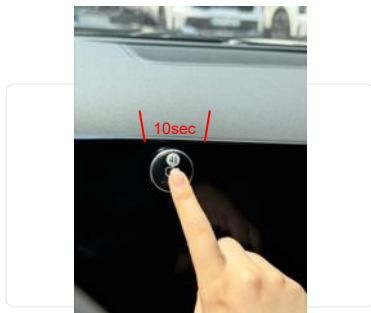

Function Chart by Press Duration

Button Operation	Function	Confirmation
Press briefly and release	Start Emergency Recording (automatically records and saves for 20 seconds)	Voice Prompt (Start) "Starting emergency recording." Voice Prompt (Complete) "Emergency recording is complete."
Press and hold for 5 seconds, then release	Pair (Connect) with Dash Cam	Voice Prompt "Quick Button connected."
Press and hold for 10 seconds, then release	Disconnect from Dash Cam	Voice Prompt "Quick Button disconnected."

How to Replace the Battery

1. Hold the ring and rotate it clockwise (right) to detach it.


- If the product is not attached to a surface, hold the battery cover and rotate it to detach.
- Take care when removing the battery cover, as the battery may fall out.

2. Remove the battery and replace it with a new one.

- When inserting the new battery, ensure the "+" symbol faces upward.
- Gently push the new battery into the battery holder to secure it.




· This product operates on a lithium coin battery (CR2032). Using a battery that does not meet the specifications may cause the product to malfunction.

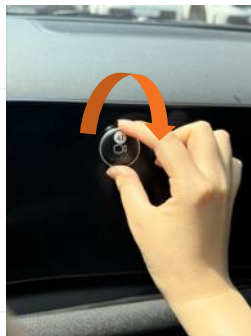

12 Product Usage

3. Align the product body with the battery cover, then rotate it counterclockwise (left) to reassemble.

- The ring has a groove that must align with the cover before it can be locked. If the groove is difficult to locate, place the front of the cover against the body and rotate it slowly until you feel it click into place, then rotate left to lock.
- The battery may fall out during reassembly. Hold the battery in place while attaching the cover.

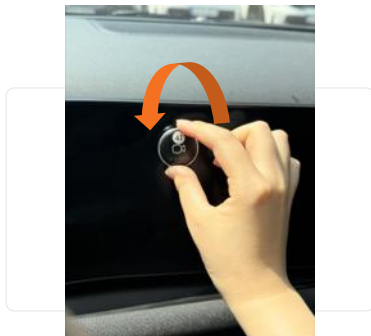

Troubleshooting

The dash cam is not connecting.

- First, check if your dash cam model supports the Quick Button function. If not, the button will not connect.
- If the model supports it, the button's battery may be dead. Check if the LED at the bottom of the button flashes when pressed.
- If the LED does not light up, replace the battery by referring to the [How to Replace Battery] section.

Emergency recording does not start when the button is pressed.

- The dash cam may be off, or out of Bluetooth range (approx. 10m). Check and try again. If the connection to the dash cam has been lost, reconnect by following the [How to Pair] instructions.

The button is frequently triggered unintentionally.

- The button may be attached in a location where hands or clothing frequently brush against it. Reattach it to a location that is easily accessible but less prone to accidental contact.

A new button was purchased to replace a lost one, but it is not connecting.

- This occurs when connection information from the previous button remains on the dash cam, preventing it from pairing with the new button.
- Refer to the user manual for your dash cam model to format the device, then attempt to reconnect. (Formatting will delete all saved footage. Back up any necessary videos beforehand.)

Product Specifications

Item	Specification	Remarks
Model Name	Quick Button	
Size / Weight	Diameter 30mm x Thickness 10mm / 7g	
Operating Temperature	-45℃ ~ 85℃	
Operating Humidity	80% RH or less	
Material	ABS+PC	
Battery	CR2032	
Bluetooth Version	5.3	
Bluetooth Effective Range	10m	
Button Lifespan	Approx. 200,000 times or more	
Warranty	1 Year	
Regulatory Compliance	R-R-FDK-FineA086 Model Name : Quick Button Year of Manufacture: Marked separately Name : Bluetooth Remote control Distributor: FINEDIGITAL INC. Manufacturer : DONGQIXING TECHNOROGY CO.,LTD Certification Holder : FINEDIGITAL INC. Country of Manufacture : China	

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.