

 
Can't connect?
Need help?

**WE
CAN
HELP**

DO NOT
RETURN THIS
PRODUCT TO
THE STORE

•

DR-S1969N, MI-WW138-199W

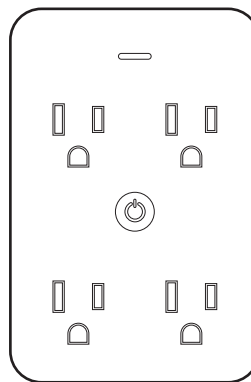


Wireless Plug-In Remote Control Adaptor

Scan code for the
latest manual online



START GUIDE

 What's in the Box



- Wireless Plug-In Remote Control Adaptor



- User Manual

Get Ready



- Know your Wi-Fi network and password



2.4GHz

- Make sure you're connected to a 2.4GHz Wi-Fi network (**Outlet can't connect to 5GHz networks**)



iOS

 


Android

- Make sure your device is running the latest version or previous two versions of iOS and Android


03

- Choose from the list of Home Control partners.

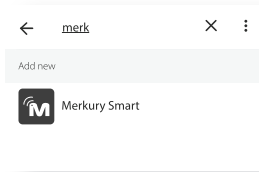

04

 - Authorize your account with Google Assistant using the username and password from your app.

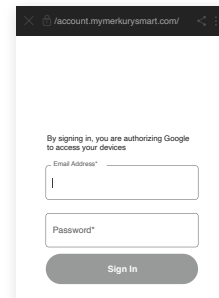

Now your Google Home app and Mercury devices are linked!

You're now able to say "Hey Google" and control your Mercury devices.

- At any time, go into the "Home Control" section of the Google Home app to set nicknames and rooms for your devices. **You can rename your devices in the app, and Google Assistant will refer to them by the same name.**

So if you rename a smart plug to "Living Room" or a nickname like "Blossom," then Google Assistant will use that same name later on. You can always give it a nickname using the Google Home app as well. **You can also assign plugs to a specific room, like "Bedroom" or "Kitchen."**

 
Google Assistant will be able to control devices by room.



To control your bulbs, plugs or surge protectors, just say "OK Google," or "Hey Google," and ask. Make sure your devices are already set up using the app.

Things you can say*:


"Hey Google, turn on all the lights in my bedroom."
 "Hey Google, turn off fan."
 "Hey Google, set the bedroom light to orange."
 "Hey Google, turn off the coffee machine."
 "Hey Google, set the living room to 50%."
 "Hey Google, dim porch light."



*Some commands require compatible devices.


01

 - Open the Google Home app and go to Home Control in the menu.

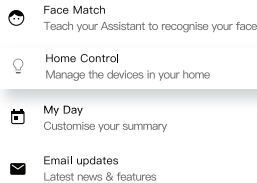


02

 - Tap the "+" button.

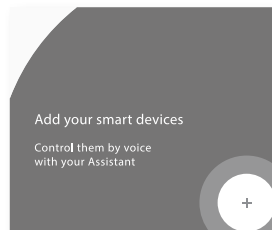


STEP 1

 - Download the App from App Store or Google Play.

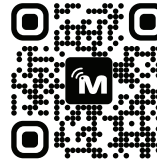

- Register an account on your App.

 01. Enter your email address.
02. Enter the verification code and create a password.
03. Log in to the App.

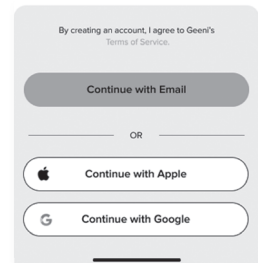


STEP 2

■ Plug In

Plug the device into the wall. Make sure the reset button on the device is flashing rapidly blue, indicating the device is ready to connect.

 *see reset instructions on p. 4

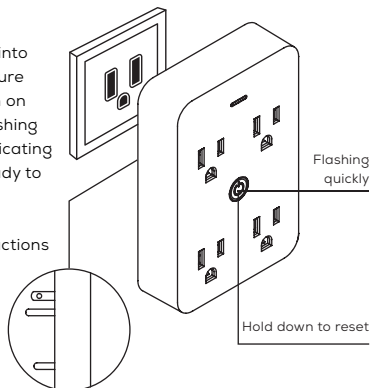


STEP 3

■ Add device: Easy Mode


01.

 In the app, on the top corner of the Devices screen, click Choose + "Smart Power".

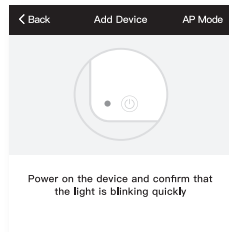

02.

 Make sure the reset button on the device is flashing rapidly blue, indicating the device is ready to connect using Easy Mode. If not, press and hold the button for 10 seconds until the reset button is flashing rapidly, then press "Next Step".

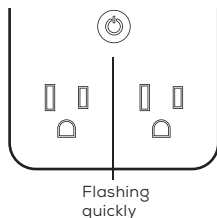

VOICE CONTROL GUIDE

Thank you for purchasing your home product. Make sure your devices are already set up using the app, then follow these steps.

Control each outlet of your Smart Wi-Fi Outlet Extender using the app and your voice assistant will recognize and follow instructions to control that Smart Wi-Fi Outlet Extender.

Name and Control Each Device by Voice



Contents

■ Voice Control Guide

Google Assistant	08
Amazon Alexa	10

■ What's the Wireless Range?

The range of your home Wi-Fi is heavily dependent on your home router and the conditions of the room. Check with your router specifications for exact range data.

■ If my Wi-Fi/Internet goes down, will my device still work?

Merkury products need to be connected to Wi-Fi in order to use them remotely.

Troubleshooting

■ Cannot connect to your Wi-Fi network.

Make sure you entered the correct Wi-Fi password during the Wi-Fi setup. Check whether there are any Internet connection problems. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.

Reset the device

To Reset plugs, press and hold the power button for 3 seconds.

- Reset one time (press and hold) to reach Easy mode (Fast blinking blue)
- Reset two times (press and hold) to reach AP Mode (Slow blinking blue)

System Requirements

 
- A mobile device running the latest version of iOS® or Android™, or its two previous versions.
- 2.4 GHz Wi-Fi network (Note: You may need to activate this frequency through your Wi-Fi account settings.)

Technical Specifications

- Input voltage: 125V
- Input frequency: 60Hz
- Wi-Fi: IEEE 802.11n, 2.4 GHz
- (not compatible with 5GHz Wi-Fi networks)

03.

Enter your Wi-Fi network and password.

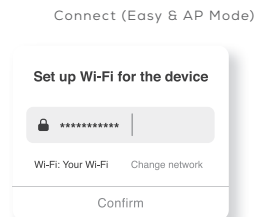


This app is supported only on 2.4GHz Wi-Fi channels

04.

The app will try to connect your device.

NOTE: can't connect to 5GHz networks.

 "If the connection fails, try to connect using AP Mode.

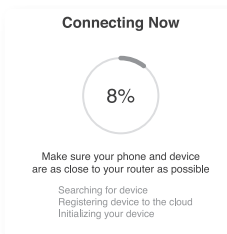

Add dedvice: Backup AP Mode

01.

 
 
Make sure the device is in AP Mode, blinking slowly *see reset instructions on p. 4

02.


In the app, on the top corner of the Devices screen, click Choose "Smart Power" Choose "AP Mode" in the top corner.

03.

Click Next and enter your Wi-Fi details.

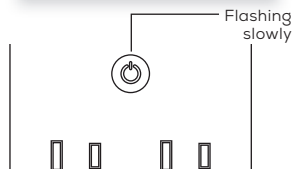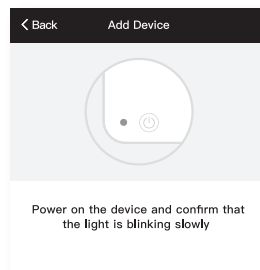


 04.
Follow the instructions to choose the device from your Wi-Fi list.

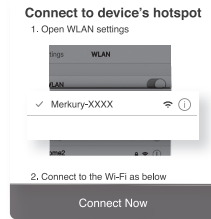

05.
The device will connect.

 NOTE:
can't connect to 5GHz networks.

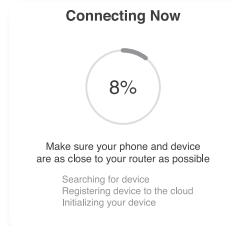


***How do I reset the device and what does the blinking light mean?**

Reset the plug by pressing and holding the button for 10 seconds until the indicator light is flashing rapidly.

- Reset one time (press and hold) to reach Easy mode (Fast blinking, 2x per second)

 - Reset again (press and hold) to reach AP Mode (Slow blinking, every 3 seconds)

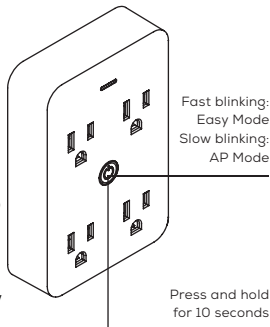

Frequently Asked Questions

■ Can I control each outlet individually?

Yes, each outlet can be named and controlled individually. On the app, each will have a on/off button, with a little pencil icon next to it. Press the on/off button to toggle the outlet power, and press the pencil icon to rename the outlet.

■ Can I group multiple Merkury devices together?

Yes, you can group multiple devices of the same type together, by room, location, or however else you want. The same devices can be in multiple groups. (For example, create a group for "Bedroom" and another group for "Entire House", and your Bedroom lights can be included in both groups). From your main device list, click on one of the devices you want to group. Press the "... " button on the top right for advanced settings, and click Create Group. You'll then be able to choose which devices you'd like to group together and will be able to rename them.

■ My Merkury device has a funny name. How do I rename it?

From your main device list, click on one of the devices you want to rename, press the "... " button on the top right for advanced settings, and click Modify Device Name (or Modify Group Name, if applicable). You'll then be able to choose a more familiar name.

■ How do I customize my dashboard?

Select the "Edit" option on the top of "Home" page. Create additional pages on your dashboard by dragging tiles to the right and organize devices to fit how you use them.

■ How Many Devices Can I Control?

The app can control an unlimited amount of devices in an unlimited amount of locations. Your router may have a limit of how many devices can be connected to one router.

■ How do I rename my device?

From your main device list, click on the device you want to rename, then click "Device Settings", then click on "Device Name". Rename your device to a more familiar name like "Bedroom" or "Living Room" and then click Save.

■ The device appears offline or unreachable, what should I do?

Make sure your Wi-Fi router is online and in range. Make sure you have the latest functionality by clicking "Check for firmware update" in your device settings.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2.4G Wi-Fi:

2412~2462 MHz(802.11b/g/n20)

802.11b: 21.32 dBm

802.11g: 18.25 dBm

802.11n20: 18.28 dBm

Company: Deer Electric Appliance Co.,LTD

Add: 119 Moo 5 Soi 12, Highway 36, Makhamkoo, Nikompattana Rayong, 21180, Thailand CHINA