



11.3 cft, No Frost, French Door Refrigerator-Freezer

User Manual

Models:

FDRD12PL | LFD123PL

**BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND
OPERATING INSTRUCTIONS.**

Models:	Serial Number:
----------------	-----------------------

Felix Storch, Inc.

An ISO 9001:2015 registered company

770 Garrison Ave

Bronx, New York 10474

www.summitappliance.com

Table of Contents

Safety Information.....	1-4
Overview	5
Installation	6-7
Daily Use.....	8-15
Troubleshooting.....	16
Limited Warranty.....	17

Safety information

In the interest of your safety and to ensure the correct usage, before installing and first using the appliance, read this user manual carefully, including its tips and warnings. To avoid any unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it throughout its life will be properly informed on the appliance's use and safety. Please follow the precautions detailed in this user manual, as the manufacturer is not responsible for damages caused by not doing so.

Children and Vulnerable People's Safety

- This appliance can be used by children aged 8 years and above. Persons with reduced physical, sensory, or mental capabilities or lack of experience can operate it if they are being supervised or instructed on how to use the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be done by children unless they are of age 8 and above and are supervised.
- Keep all packaging away from children, they are at risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the cord (as close to the appliance as possible), and remove the door to prevent children from suffocating, being electrocuted, or locking themselves in it.
- If this appliance features a magnetic door seal to replace an older appliance having a spring lock (latch) on the door or lid, make sure to make that spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

General Safety

 **WARNING!** Keep ventilation openings, in the appliance's enclosure or in the built-in structure, clear of obstruction.

 **WARNING!** Do not use mechanical devices or other methods to accelerate the defrosting process, other than those recommended by the manufacturer.

 **WARNING!** Do not damage the refrigerant circuit.



Safety Information

⚠ WARNING! Do not use other electrical appliances (such as ice cream makers) inside refrigerating appliances unless they are approved by the manufacturer.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is flammable.
- During transportation and installation of the appliance, make sure that none of the components of the refrigerant circuit become damaged.
- avoid open flames and sources of ignition
- thoroughly ventilate the room in which the appliance is situated
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire, and/or electric shock.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices, and other working environments.
 - Farmhouses and clients in hotels, motels, and other types of residential environments.
 - bed and breakfast type of environments.
 - catering and similar non-retail applications.

⚠ WARNING! Any electrical components (plug, power cord, compressor, etc.) must be replaced by a certified service agent or qualified service personnel.

- Power cord must not be lengthened.
- Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire.
- Make sure that you can reach the main plug of the appliance.
- Do not pull the main cable.
- If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
- You must not operate the appliance if the lamp inside the refrigerator does not turn on.
- This appliance is heavy. Care should be taken when moving it.
- Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Avoid prolonged exposure of the appliance to direct sunlight.



Safety information

Daily use

- Do not put anything hot on the plastic parts of the appliance.
- Do not place food products directly against the rear wall.
- Frozen food must not be re-frozen once it has been thawed out.
- Store pre-packed frozen food in accordance with the frozen food manufactures instructions.¹
- The appliance's manufacturer's storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.¹
- Ice cubes can cause frost burns if consumed straight from the appliance.¹

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the main plug from the main socket.
- Do not clean the appliance with metal objects.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.¹
- Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain. If the drain is blocked, water will collect at the bottom of the appliance.²

Installation

Important! For electrical connection carefully follow the instructions given in specific paragraphs.

- Unpack the appliance and check if there are damages to it. Do not connect the appliance if it is damaged. Report damages immediately to the place you bought it. In that case, retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the refrigerant to flow back into the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the spacers of the product should be against a wall to avoid touching warm parts (compressor, condenser to prevent burns).
- The appliance must not be located close to radiators or cookers.
- Make sure that the main plug is accessible after the installation of the appliance.

¹) If there is a freezer compartment.

²) If there is a fresh-food storage compartment.



Safety Information

Service

- Any electrical work required to do with servicing of the appliance should be carried out by a qualified electrician or competent person.
- This product must be serviced by an Authorized Service Center, and only genuine spare parts must be used.

Energy saving

- Do not put hot food in the appliance.
- Do not pack food close together as this prevents air circulation.
- Make sure food does not touch the back of the compartment(s).
- If the electricity goes off, do not open the door(s).
- Do not open the door(s) frequently.
- Do not keep the door(s) open for too long a time.
- Do not set the thermostat to exceedingly cold temperatures.
- Some accessories, such as drawers, can be removed to get a larger storage volume and lower energy consumption.

Environment Protection

 This appliance does not contain gasses that could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and/or municipal solid waste. The insulation foam contains flammable gases: the appliance shall be disposed of according to the appliance regulations as obtained from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used in this appliance marked by the symbol ♻ are recyclable.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council, your household waste disposal service or, the shop where you purchased the product.

 
Packaging materials

The materials with the symbol ♻ are recyclable. Dispose of the packaging in suitable collection containers to recycle it.

Disposal of the appliance

1. Disconnect the main plug from the main socket.
2. Cut off the main cable and discard it.

Overview

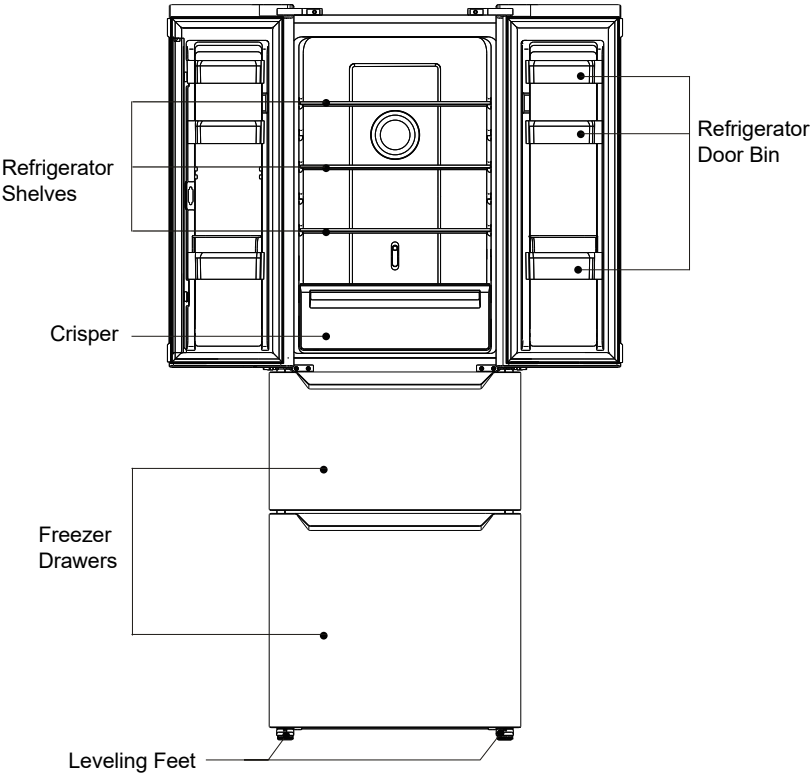


Note: Above picture is for reference only. The actual appliance may be slightly different.



Installation

Space Requirement

 
- Ensure doors can swing open at least
- Ensure at least 2" (50mm) of clearance on the sides and back

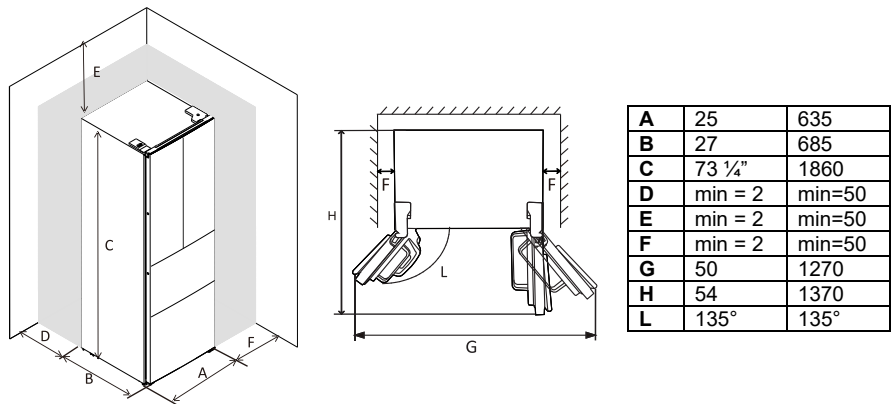

Leveling the unit

To level the unit, adjust the two leveling feet at the front of the unit.

 If the unit is not leveled, the doors will not seal properly.

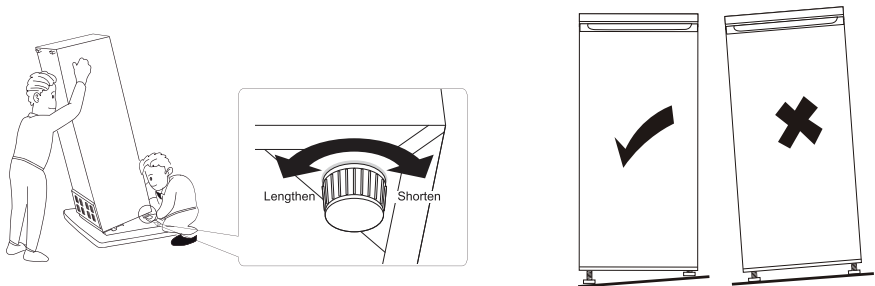

Installation

Positioning

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

For refrigerating appliances with climate class:

- Subnormal Temperate (SN): This refrigerating appliance is intended to be used at ambient temperatures ranging from 50°F – 90°F (10°C – 32°C).
- Normal Temperate (N): This refrigerating appliance is intended to be used at ambient temperatures ranging from 61°F – 90°F (16°C - 32°C)
- Subtropical (ST): This refrigerating appliance is intended to be used at ambient temperatures ranging from 61°F – 100°F (16°C - 38°C)
- Tropical (T): This refrigerating appliance is intended to be used at ambient temperatures ranging from 61°F – 109°F (16°C - 43°C)

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 2" (50mm). Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate leveling is ensured by one or more adjustable feet at the base of the cabinet.

This refrigerating appliance is not intended to be used as a built-in appliance.

Warning! It must be possible to disconnect the appliance from the mains power supply, the plug must be easily accessible after installation.

 
Electrical connection

Before plugging in, ensure that the voltage and frequency shown on the rating plate corresponds to your domestic power supply. The appliance must be grounded. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not grounded, connect the appliance to a separate ground in compliance with current regulations, consulting a qualified electrician.

The manufacturer declines all responsibility if the above safety precautions are not observed. This appliance complies with the E.E.C. Directives.

Daily Use

Using the Control Panel

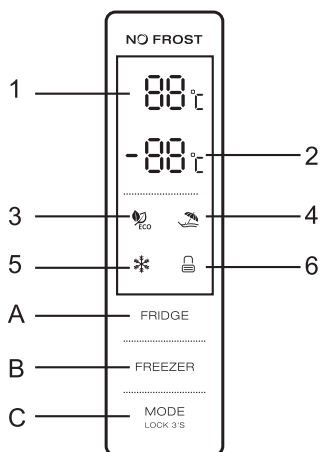

1.0 CONTROL PANEL BUTTONS

- A. Refrigerator Compartment Temperature Control
- B. Freezer Compartment Temperature Control
- C. Mode Selection and Locking/Unlocking Selection

1.1 LED DISPLAY

- 1. Refrigerator Compartment Temperature
- 2. Freezer Compartment Temperature
- 3. ECO Mode
- 4. Vacation Mode
- 5. Super Mode
- 6. Locking/Unlocking

2.0 OPERATING CONDITION

- a. The control panel will light up for 3 seconds. The mode and temperature settings will lock after 25 seconds of inactivity. The control panel light will go out after 2 minutes of inactivity.
- b. Both preset temperatures of refrigerator and freezer compartments will appear on the display.

2.1 DISPLAY

- The panel will light up for 2 minutes when the refrigerator door is opened.
- The panel will light up when a button is pressed, then go out after 2 minutes of inactivity.
- The refrigerator and freezer temperatures will appear on the display during normal operation.

3.0 USING THE CONTROL PANEL BUTTONS

There will be a beep when a button is pressed, and the panel is in the Unlocked Mode. The buttons do not activate during Lock Mode.

3.1 REFRIGERATOR COMPARTMENT TEMPERATURE CONTROL (A)

While in User Defined Mode & Super Mode, press the FRIDGE button to enter the temperature control of the refrigerator compartment. The button will begin to flash. Press the button continuously, to cycle through the temperatures:

°F: 36, 37, 39, 41, 42, 45, 46

°C: 2, 3, 4, 5, 6, 7, 8

The display will flash for 5 seconds to confirm the selection.

3.2 FREEZER COMPARTMENT TEMPERATURE CONTROL (B)

While in User Defined Mode & Super Mode, press the FREEZER button to enter the temperature control of the refrigerator compartment. The button will begin to flash. Press the button continuously, to cycle through the temperatures **6.8°F to -7.6°F** (-14°C to -22°C).

The display will flash for 5 seconds to confirm the selection.

3.3 MODE (C)

Press MODE consecutively to cycle through the refrigerator operation modes: ECO Mode, Vacation Mode, Super Mode, and User Defined Mode. The display will flash for 5 seconds to confirm the selection.

4.0 MODE SELECTIONS

4.1 ECO MODE (3)

Press MODE repeatedly to select ECO Mode. The ECO icon will flash for 5 seconds and remain on to confirm the selection.

In ECO mode, the refrigerator will automatically set a temperature. The only functioning button in this state is MODE.

To exit ECO mode press MODE.

4.2 VACATION MODE (4)

Press MODE repeatedly to select Vacation Mode. The vacation icon will flash for 5 seconds and remain on to confirm the selection.

In Vacation Mode, the refrigerator temperature will be set to 62.6°F (17°C). The FRIDGE button will remain inactive.

Press MODE to exit Vacation Mode.

4.3 SUPER MODE (5)

Press MODE repeatedly to select Super Mode. The super icon will flash for 5 seconds and remain on to confirm the selection.

In Super Mode, the FREEZER button will remain inactive.

To exit Super Mode, press MODE once. Otherwise, the unit will exit Super Mode automatically after 50 hours and the unit will return to the previous settings.

Helpful hint: If you plan to freeze a large amount of food at once, set Super Mode 24 hours ahead.

Warning: Super Mode may increase noise levels due to high-intensity cooling.

4.4 LOCK / UNLOCK (6)

To lock the control panel, press and hold the MODE button for 3 seconds. There will be a beep, and the lock icon will illuminate on the display.

To unlock the control panel, press and hold the MODE button for 3 seconds. There will be a beep to confirm the settings are unlocked.

In the unlock mode, all the buttons can be used while the control panel is unlocked. After 25 seconds of inactivity, the display will lock. Press MODE to unlock the display.

5.0 DOOR OPEN ALARM

If the refrigerator compartment (upper) door keeps open for 90 seconds, The alarm will sound periodically till the doors are closed properly.

Daily Use

First use

Cleaning the interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly.

Important! Do not use detergents or abrasive powders, as these will damage the finish.

Daily use

Position different food in different compartments according to be below table

Refrigerator compartments	Type of food
Door or balconies of fridge compartment	• Foods with natural preservatives, such as jams,juices, drinks, condiments. • Do not store perishable foods.
Crisper drawer (salad drawer)	• Fruits, herbs and vegetables should be placed separately in the crisper bin. • Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf – middle	• Dairy products, eggs
Fridge shelf – top	• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Freezer drawer(s)/shelf	• Foods for long-term storage. • Bottom drawer/shelf for raw meat, poultry, fish. • Middle drawer/shelf for frozen vegetables, chips. • Top drawer/shelf for ice cream, frozen fruit, frozen baked goods.

Daily Use

Temperature setting recommendation

Temperature Setting Recommendation		
Environment Temperature	Temperature Setting	
Summer (Above 38°C)		Fridge set on 4°C
		Freezer set on -18°C
Normal		Fridge set on 4°C
		Freezer set on -18°C
Winter (Below 16°C)		Fridge set on 4°C
		Freezer set on -18°C

- Information above give users recommendation of temperature setting.

Impact on Food Storage

- Under Recommended setting, the best storage time of fridge is no more than 3 days.
- Under Recommended setting, the best storage time of freezer is no more than 1 month.
- The best storage time may reduce under other settings.



Daily Use

Fresh Zone Temperature Control

- Temperature of the fresh can be adjusted according to the type of storage food.
- Push the knob upward from the bottom, temperature in the fresh zone will be gradually decreased.
- When the knob is placed at the "CRISPER" position, the fresh zone can be functioned as a crisper zone and maintain the appropriate temperature and humidity for fruits and vegetable.
- When the knob is placed at the top position, it is suitable for short-term storage of fish or other fresh food. The food will keep fresh but not frozen which makes it the best choice for storing fresh food.
- Tips: When the knob is placed at the top position, it is recommended to set the refrigerator temperature below 4°C . and preserved lead-time no more than 3 days , in order to keep the best freshness.



Freezing fresh food

- The freezer compartment is suitable for freezing fresh food and storing frozen and deep-frozen food for a long time.
- Place the fresh food to be frozen in the freezer compartment.
- The maximum amount of food that can be frozen in 24 hours is specified on the rating plate.
- The freezing process lasts 24 hours: during this period do not add other food to be frozen.

Storing frozen food

When first starting-up or after a period out of use, before putting the product in the compartment let the appliance run at least 2 hours on the higher settings.

Important! In the event of accidental defrosting, for example the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooked).

Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in the fridge compartment or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

Ice-cube

 
This appliance may be equipped with one or more ice-cube to produce ice.

Daily Use

Accessories


Movable shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

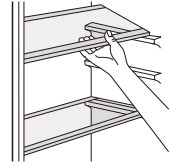

Positioning the door balconies

 To permit storage of food packages of various sizes, the door balconies can be placed at different heights. To make these adjustments proceed as follows: gradually pull the balcony in the direction of the arrows until it comes free, then reposition as required.

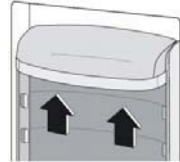

Helpful hints and tips

To help you make the most of the freezing process, here are some important hints:

- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required;
- wrap up the food in aluminium foil or polythene and make sure that the packages are airtight;
- do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter;
- lean foods store better and longer than fatty ones; salt reduces the storage life of food;
- water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

Hints for storage of frozen food

To obtain the best performance from this appliance, you should:

- make sure that the commercially frozen foodstuffs were adequately stored by the retailer;
- be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time;
- not open the door frequently or leave it open longer than absolutely necessary.
- once defrosted, food deteriorates rapidly and cannot be re-frozen;
- do not exceed the storage period indicated by the food manufacture.

Hints for fresh food refrigeration

To obtain the best performance:

- Do not store warm food or evaporating liquids in the refrigerator
- Do cover or wrap the food, particularly if it has a strong flavour
- Make (all types): wrap in polythene bags and place on the glass shelves above the vegetable drawer.
- For safety, store in this way only one or two days at the most.
- Cooked foods, cold dishes, etc...: these should be covered and may be placed on any shelf.
- Fruit and vegetables: these should be thoroughly cleaned and placed in the special drawer(s) provided.
- butter and cheese: these should be placed in special airtight containers or wrapped in aluminum foil or polythene bags to exclude as much air as possible.
- Milk bottle: these should have a cap and should be stored in the balconies on the door.
- Bananas, potatoes, onions and garlic, if not packed, must not be kept in the fridge.

Daily Use

Cleaning

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.



Caution! The appliance may not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse. Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapors can lead to the damage of plastic parts. The appliance must be dry before it is placed back into service.

Important! Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker of fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- After everything is dry place appliance back into service.

Defrost Description (No Frost)

It is a total no frost refrigerator-freezer which will be defrosted automatically.

Troubleshooting



Caution! Before troubleshooting, disconnect the power supply. Only a qualified electrician or competent person must do the troubleshooting that is not in this manual.

Important! There are some sounds during normal use (compressor, refrigerant circulation).

Problem	Possible cause	Solution
Appliance does not work	Mains plug is not plugged in or is loose	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Mains malfunctions are to be corrected by an electrician.
Appliance freezes or cools too much	Temperature is set too cold or the appliance runs at SUPER modes.	Turn the temperature regulator to a warmer setting temporarily.
The food is not frozen enough.	Temperature is not properly adjusted.	Please look in the initial Temperature Setting section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Heavy build up of frost on the door seal.	Door seal is not air tight.	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed door seal by hand such that it sits correctly.
Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
Water on the floor	Water drain hole is blocked.	See the Cleaning and Care section.

If you have checked the table below and find that you still need help with your appliance, call our Customer Service facility at **800-932-4267 (Ext. 513)** between 9:00 AM and 5:00 PM ET or visit **summitappliance.com/support**. We will do our best to answer your questions.

To order replacement parts, visit our website: **summitapplianceparts.com**

NOTES

CALIFORNIA CARB/SNAP DISCLOSURE

This product uses eco-friendly hydrocarbon refrigerant and fully complies with California CARB regulations.

However, we are required by California Law to provide the following disclosure statement in every product sold in California.

"This equipment is prohibited from use in California with any refrigerants on the 'List of Prohibited Substances' for that specific end-use, in accordance with California Code of Regulations, title 17, section 95374. This disclosure statement has been reviewed and approved by Felix Storch, Inc. and Felix Storch, Inc. attests, under penalty of perjury, that these statements are true and accurate."

LIMITED WARRANTY

ONE-YEAR LIMITED WARRANTY

Warranty coverage is available within the 48 contiguous United States, along with select areas of Alaska, Hawaii, and Canada. For locations not covered, consumers can either contact a local provider or coordinate with Felix Storch, Inc. to find nearby service options, which may qualify for partial reimbursement.

The warranty for this appliance is valid for one year from the date of purchase, provided the appliance is operated and maintained according to the instructions included with the product. The warrantor will cover the cost of factory-specified parts and repair labor needed to correct defects in materials or workmanship. Service must be performed by a designated service company.

All parts, except the compressor, are warranted for one year against manufacturing defects. Plastic parts, shelves, and cabinets are produced to commercially acceptable standards but are not covered for damages incurred during handling or for breakage.

5-YEAR COMPRESSOR WARRANTY

1. The compressor is covered for 5 years.
2. Replacement does not include labor.

ITEMS WARRANTOR WILL NOT PAY FOR:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for units operated outside the 48 contiguous United States, along with select areas of Alaska, Hawaii, and Canada.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. Expenses for travel and transportation for product service in remote locations.
7. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.



WARNING: This product can expose you to chemicals including Nickel (Metallic) which is known to the State of California to cause cancer.

For more information go to www.P65Warnings.ca.gov

Note: Nickel is a component in all stainless steel and some other metallic compositions.



Felix Storch, Inc.
An ISO 9001:2015 registered company
770 Garrison Ave
Bronx, New York 10474
www.summitappliance.com

Revised: 2026-04-02