

VIVITAR®

SMART SECURITY

WIRELESS SMART LIGHT SWITCH



SET MULTIPLE
TIMERS



SELECT YOUR
LOCATION



AUTO SUNSET
TO SUNRISE
OPTION




WIFI



TM

1.

WHAT'S INCLUDED

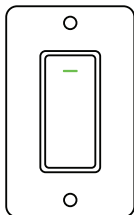

SW-1001
Wireless Smart Light Switch



Quick Start Guide
with Warranty Information

2.

A QUICK LOOK

Power Button



Neutral Wire
(white)

Ground Wire
(green/bare)

Live Wire
(black)

Load Wire
(black)



3.

SETUP

The following tools can be used to help you install your light switch (not included)




IMPORTANT WARNING

Before installing your light switch, power must be turned OFF. You can turn off the power by either switching the corresponding circuit breaker to the OFF position, or removing the corresponding fuse in your fuse box.

To ensure safety, we recommend using a voltage tester to ensure that all electrical power is off.

Attempts to install wiring when there is active electrical power can lead to serious injury or death. If you are not comfortable with electrical work, contact a qualified electrician for assistance.

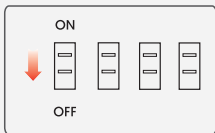

CIRCUIT BREAKER

OR



FUSE

REMOVING YOUR CURRENT LIGHT SWITCH

Before installing your Wireless Smart Light Switch, you must remove your currently installed light switch.

First, unscrew and remove the faceplate from the old light switch. Do not detach the wires yet.

SAFETY RECOMMENDATION: Use a voltage tester to test around the old light switch, and flip your light switch on and off a few times to make sure that the power is OFF. The voltage tester should not light up, and the light should not turn on.

Unscrew and pull out the old light switch, detaching the wires.



4.

INSTALLATION

After removing your old light switch, you can go ahead and install your Wireless Smart Light Switch.



Loosen screws.

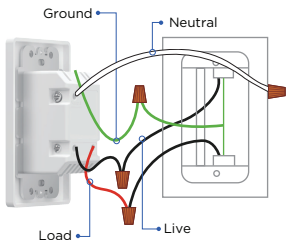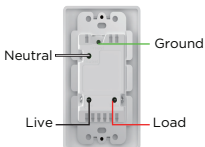

Connect the wires.

(Contact a qualified electrician for assistance if necessary.)



Screw the light switch in and then screw on the faceplate.

5.


APP INSTALLATION

In order to use your light switch with your smart phone, you will first need to download the Vivitar Smart Security 2 App, which is available on the Google Play Store and on the iPhone App Store.



iPhone

OR

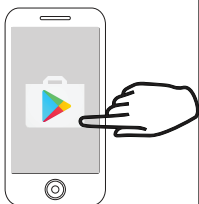

Android




**Install
Vivitar
Smart
Security 2
App**


6.

APP REGISTRATION

To successfully use the Vivitar Smart Security 2 App, you will first need to create an account. To do so, follow the steps below.

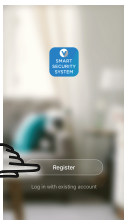

Open the Vivitar Smart Security 2 App and press "Register."

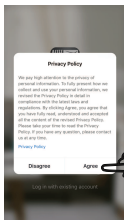


Agree to the terms of the privacy policy.



Enter your e-mail address or phone number to create an account.




You will receive a verification code over email or text message. Enter it here.

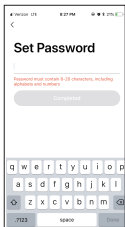

Setup a password for your account. Once finished, you can login to your account.

7.

LIGHT SWITCH SETUP

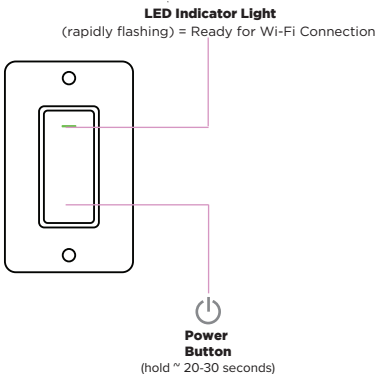

Press and hold the power button for approximately 20-30 seconds until the LED Indicator Light begins to flash rapidly. Your light switch is ready for Wi-Fi connection.


If the LED indicator light flashes slowly, it indicates that you are in AP Mode. Use AP Mode only if you want to use your light switch with your phone, but do not have access to a Wi-Fi network. Press and hold the power button for 20-30 seconds to switch between AP mode and standard Wi-Fi quick connect mode.

8.


WI-FI CONNECTION




Go to your phone's settings menu, and make sure that your phone is connected to a 2.4GHz Wi-Fi network.

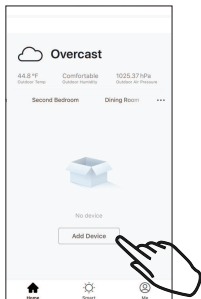

Select "Add Device" in order to choose a device to add to your home network .

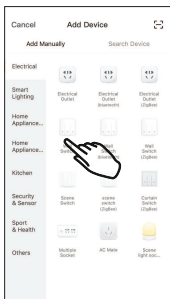


In the Add Device screen, select to add a Switch.

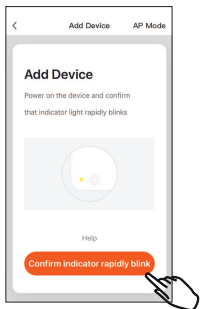


Confirm that the LED Indicator Light on your Light Switch is still blinking rapidly.

9.

Wi-Fi CONNECTION

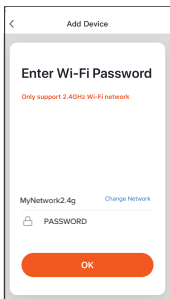

Enter your Wi-Fi network name and password.

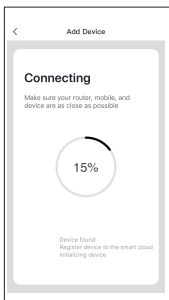

Wait as the Wi-Fi connection is established.

Once the connection is established, you can use the App to control your smart light switch.

10.

SPECIFICATIONS

ELECTRICAL RATING: MAX1200W Resistive, 400W, Incandescent 1/2 HP at 120V AC

WORKING TEMPERATURE: -20-50 °C

Wi-Fi FREQUENCY: 2.4GHz only

NOTE: Screen shots displayed in this user's guide of the Smart Security 2 software application may appear differently than those currently featured in your app as frequent updates and improvements are being made to the software.

11.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Keep manual and all relevant information for future reference.

12.

WARRANTY CARD

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or Visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.



TM