



PORTRONICS



BEEM 540

SMART LED PROJECTOR

User Manual

INTRODUCTION



Thank you for choosing the Beem 540 Smart LED Projector. This manual will guide you through the setup, operation, and maintenance of your projector to ensure optimal performance and longevity. Please read the instructions carefully before using the device.

SAFETY INFORMATION



 
To prevent damage or injury, follow these safety guidelines:

- Keep the projector in a dry, cool place away from direct sunlight and extreme temperatures.
- Ensure proper ventilation by not blocking the air vents to prevent overheating.
- Do not look directly into the projector lens when it is operating, as the strong light may harm your eyes.
- Always place the projector on a stable, flat surface to prevent it from falling.
- Avoid operating the projector near flammable materials or in damp environments.
- Allow the projector to cool down before moving it after extended use.
- Use only the provided power cable and accessories, and connect to a surge protector to avoid voltage fluctuations.
- Keep the projector out of reach of children unless supervised by an adult.
- Do not attempt to disassemble or repair the projector yourself, as this may void the warranty.



Package Contents

- ⇒ Projector 1 N
- ⇒ Power Cable 1 N
- ⇒ Remote Control 1 N
- ⇒ User Manual 1 N




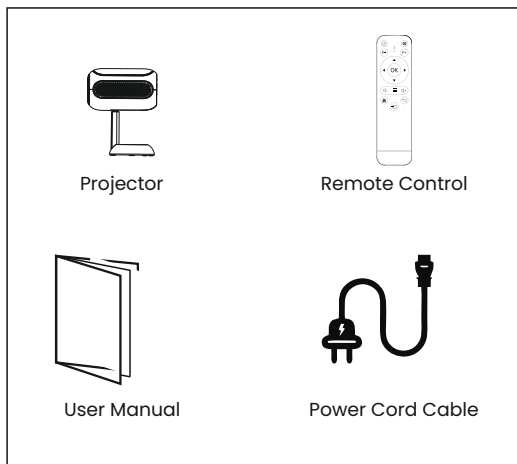


Please check whether the physical products received are complete; If the products and accessories you receive are not complete, please contact the Customer Care in a timely manner. (For specific items, please refer to the actual package.)


Placement & Installation

- Position the projector at least 5 feet away from the projection surface and 2 feet away from the wall.
- Maintain a height of 5 feet from the ground for the best viewing experience.
- Use a flat surface or ceiling mount for stable placement.

    
UNDERSTANDING THE PROJECTOR

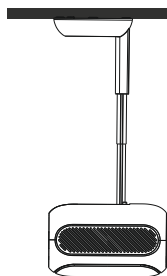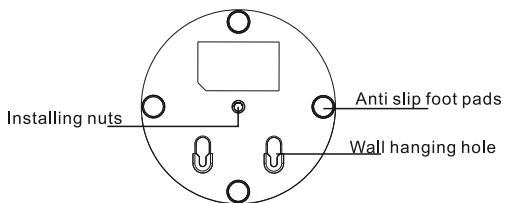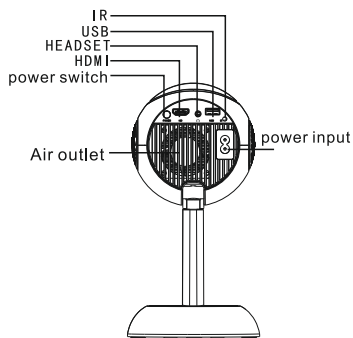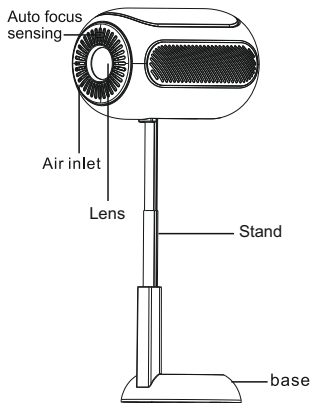

Adjustable Height
upto 10 inches

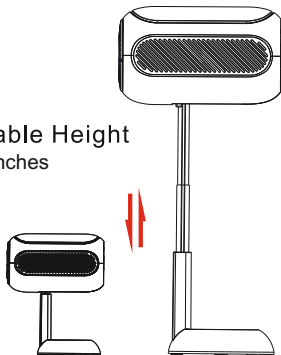 


Adjustable Angle

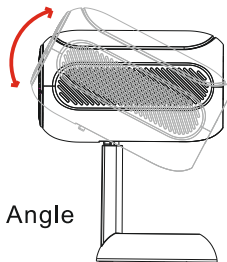 



Remote Control Functions

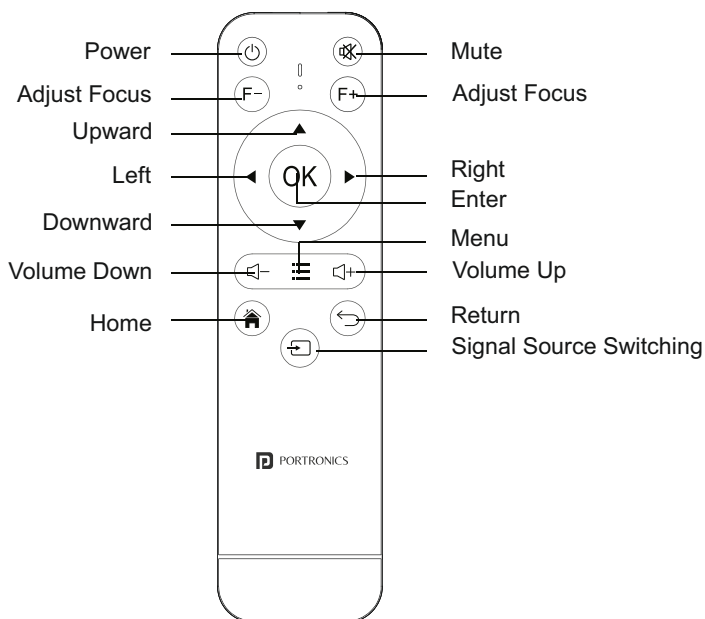 


Remote Control Description


- 1 Power: Turn The Projector ON/OFF
- 2 Mute: Mute or unmute the projector speaker
- 3 Adjust the lens focus backwards
- 4 Adjust the lens focus forwards
- 5 Direction Keys: Up, down, left and right navigation
- 6 Enter: Performs accept action
- 7 Volume +/-: Increase / decrease speaker volume
- 8 Menu: Open the menu of applications or files
- 9 Home: Go to homepage
- 10 Return: Back to previous menu or close current applications
- 11 Signal Source: Switch between projection sources

Adjusting Focus

 - Auto Focus: Enable the auto focus option in the settings. The device will automatically adjust the focus for you.
- Manual Focus: You can also fine-tune the focal length using the remote control (as shown in the figure below), whether in manual or auto focus mode.

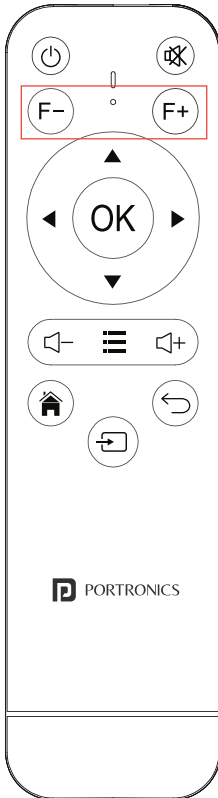


Blurry Image

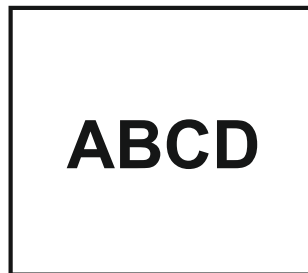 

Keystone Correction

 - Auto Keystone Correction: The Projector automatically adjusts screen alignment for an optimal viewing experience as per your projector placement.
- Manual Keystone Correction: Adjust screen alignment manually through settings for better projection angles.

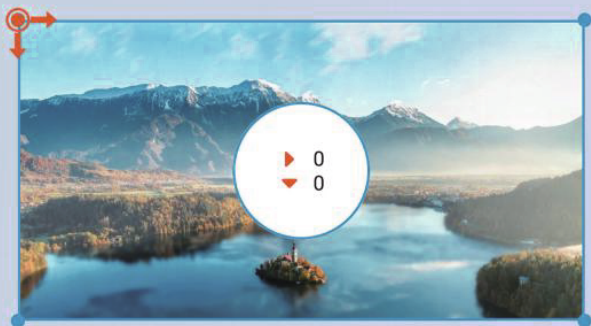

Press the OK button to select the correction point.
Press the direction buttons to adjust the image.
Press the menu button to restore.

 


Manual Keys...




Software Settings

1 Home Page

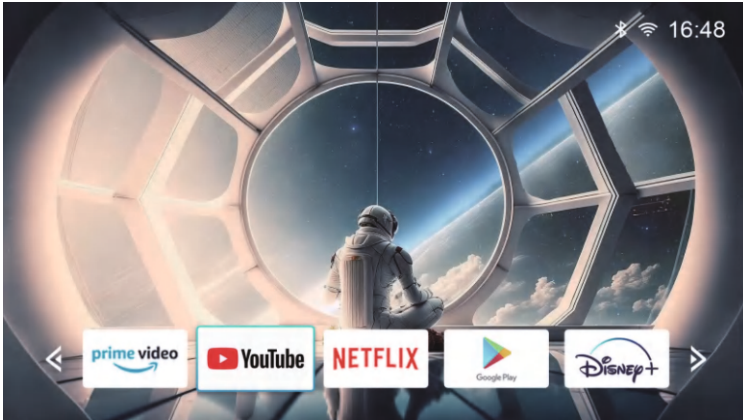

2 Projection Setting

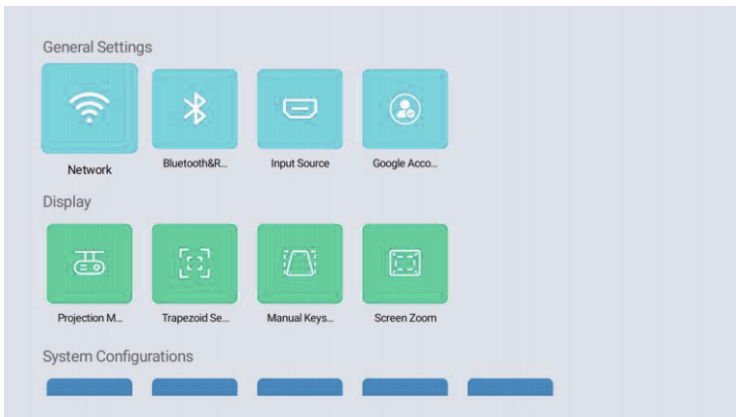 


Note: With the system version update, there may be differences from the actual interfaces. Please refer to the displayed interfaces as the final version.




3 Language setting

 Settings - Select the appropriate language in System configuration.

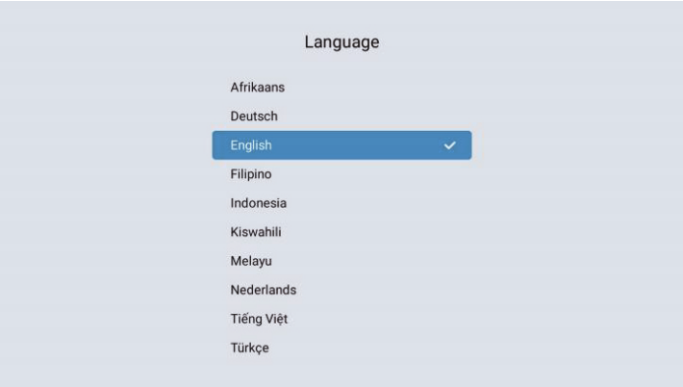

4 Time setting

 Settings - Select the appropriate time Settings for you in System Configuration

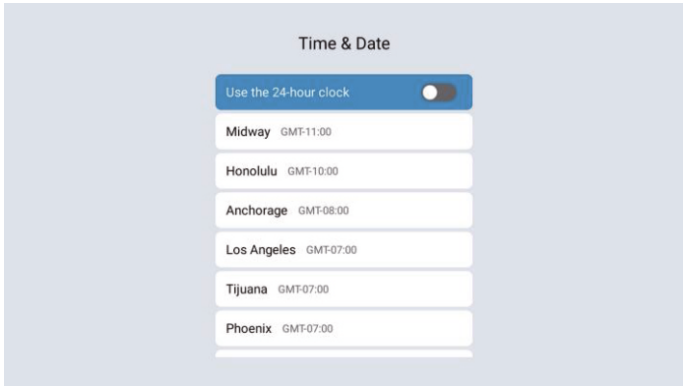

Note:With the system version update, there may be differences from the actual interfaces. Please refer to the displayed interfaces as the final version.

 
5 Wi-Fi Setting

Select the network and enter the password to connect



6 Bluetooth Settings

Open Bluetooth and select a device to pair

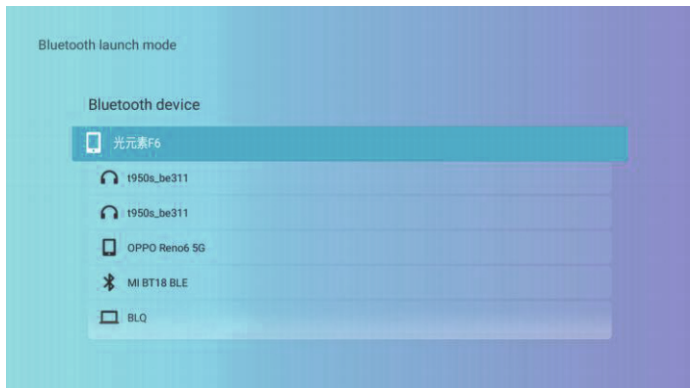


Note: With the system version update, there may be differences from the actual interfaces. Please refer to the displayed interfaces as the final version.



Software Settings


1 Projection mode

 Select the projection method that suits you in the Settings screen.

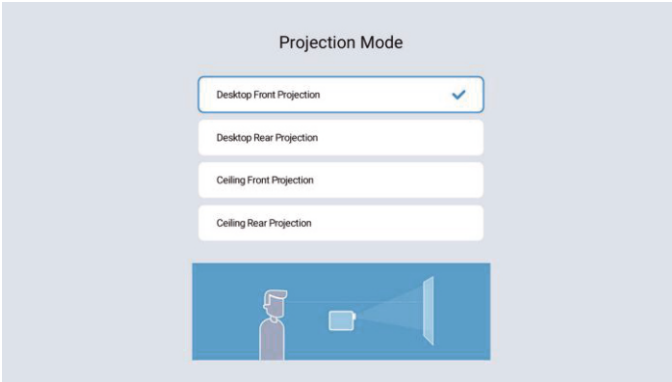

2 Screen Sharing

 For screen sharing function, please use Cast for Apple Phones, and Miracast for Android phones.

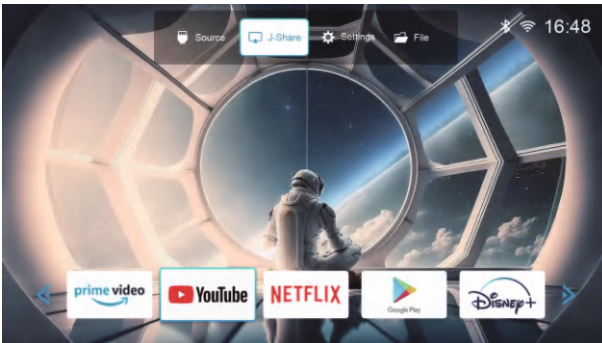


Note: With the system version update, there may be differences from the actual interfaces. Please refer to the displayed interfaces as the final version.



1 Media Player

You can play videos, music, or pictures from a storage device in the following ways.

 - (1) After the projector is turned on, insert a USB flash drive, and the system will detect the external device by itself, and a pop-up prompt will pop up. Select the type of file you want to play, and press the "OK" button on the remote control panel to enter.

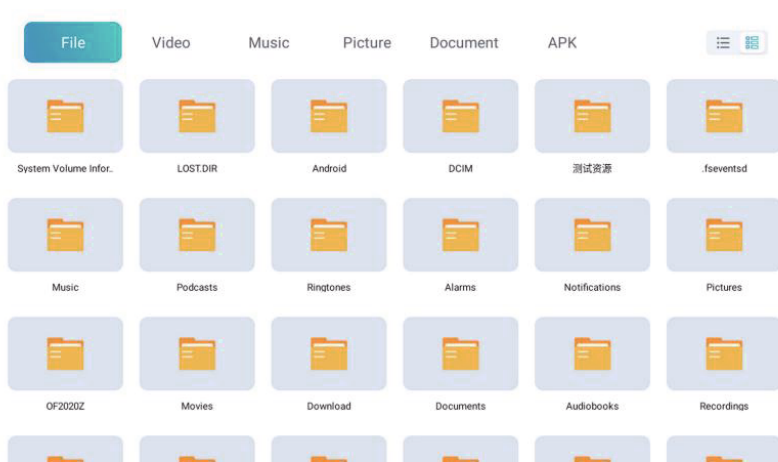

- (2) Press the signal input button on the remote control and select USB device to turn it on.

Note: With the system version update, there may be differences from the actual interfaces. Please refer to the displayed interfaces as the final version.

Cleaning the Projector

Proper maintenance of your projector will enhance its performance and longevity. Follow these guidelines for cleaning:

1. Cleaning the Lens

Use a soft, dry microfiber cloth to gently wipe the lens.

If necessary, apply a small amount of lens-cleaning solution to the cloth—never directly on the lens.

2. Cleaning the Exterior

Wipe the projector body with a soft, dry cloth.

Avoid using abrasive cleaners or solvents that could damage the surface.

3. Cleaning the Ventilation Openings

Use a small brush or compressed air to remove dust from the ventilation grilles. Ensure vents remain unobstructed to prevent overheating.

4. Cleaning the Remote Control

Use a slightly damp cloth to clean the remote.

Avoid direct moisture contact with buttons or the battery compartment.

General Maintenance Tips

- Store the projector in a cool, dry place when not in use.
- Keep all cables properly organized to prevent damage.
- Ensure the power cord is unplugged before cleaning or relocating the projector.



Issue	Possible Cause	Solution
No Power	Loose connection	Check and secure power cable
No Image	Wrong input source	Select the correct source via remote
Blurry Image	Improper focus	Adjust focus using remote
No Sound	Mute is ON	Unmute via remote

For further assistance, contact customer support.

WARRANTY INFORMATION

- The warranty covers defects in materials and workmanship.
- Damage due to physical impact, liquid exposure, or misuse is not covered.
- Repairs, not replacements, are provided under the warranty period.



www.portronics.com

For Support

Visit : www.portronics.com

E-mail : help@portronics.com

Contact No.: +91 9555245245

(Working Hours: Monday – Saturday, 10:00am – 6:00pm)



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste