

# SENCOR®

SWK 0850GY



## DOUBLE WALL U-SHAPE VARIABLE TEMPERATURE ELECTRIC KETTLE

Transtation of the original manual




**SENCOR®**


**SWK 0850GY**



# A

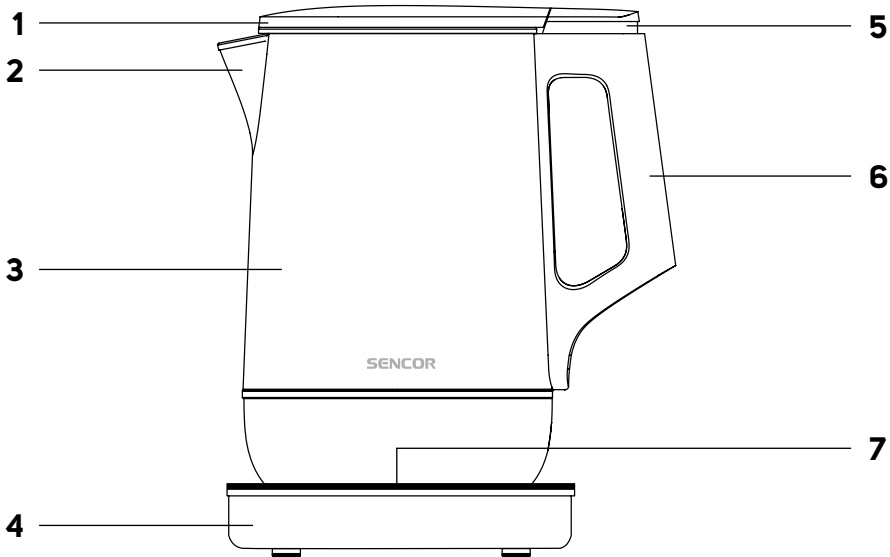

# B

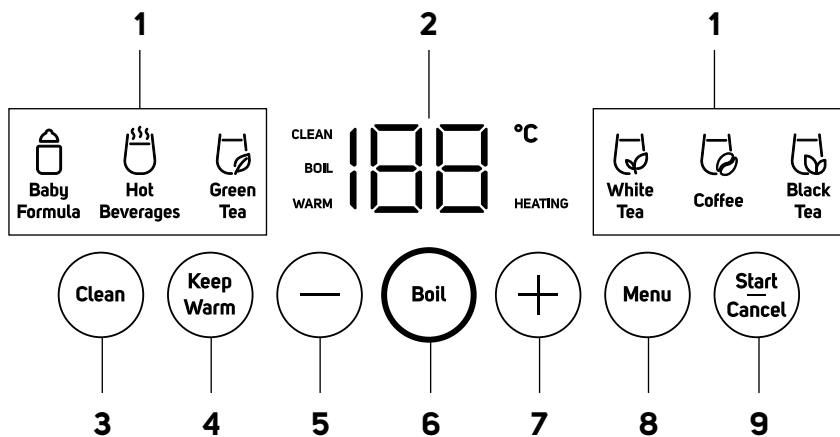

# Double Wall U-Shape Variable Temperature EN Electric Kettle User Manual

## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance must not be carried out by children unless they are older than 8 years of age and under supervision.
- Keep the appliance and its power cord out of the reach of children under 8 years of age.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cord is damaged.
- This appliance is intended for household use. It is also suitable for personal non-commercial use in spaces such as:
  - kitchenettes in shops, offices and other workplaces;
  - agricultural premises;
  - hotels, motels, and other residential areas where the appliance will be used by guests;
  - bed and breakfast establishments.

- Do not submerge the kettle or its base in water or another liquid.
- If the kettle is overfilled, hot water may splash out.



**WARNING:**

Do not open the lid while the water is boiling.



**CAUTION:**

Position the lid so that the steam is directed away from the handle.

- Use the kettle only with the supplied base. Do not use the base with other types of appliances.



**CAUTION:**

Make sure the appliance is switched off before removing it from the base.



**CAUTION:**

Make sure the appliance is switched off before removing it from the base.



**WARNING:**

Prevent the plug from getting wet.

- • Rinse the inside of the kettle with clean water. Follow the cleaning instructions in the “Cleaning and Maintenance” section.



**WARNING:**

Incorrect use may lead to injury.

- The surface of the heating element contains residual heat after use. Do not touch the hot surface.

- Before connecting the kettle to power, make sure that its power ratings match those of the wall socket.
- Connect the kettle only to a properly grounded socket.
- Do not place the kettle on windowsills, sink drain trays or unstable surfaces. Always place it on a stable, flat and dry surface.
- Do not place the kettle on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.
- Never use the kettle in the near vicinity of a bath, shower or swimming pool.
- Only use the kettle to heat up drinking water. Do not use it to warm up other liquids or food.
- Do not fill the kettle with water when placed on the base. Remove the kettle from its base before filling. When filling, make sure that the water level covers at least the minimum mark and does not exceed the maximum mark.
- Before turning the kettle on, make sure that the lid is closed properly.
- Do not turn on the kettle when it is empty. Incorrect use may negatively affect the appliance's lifetime. In case of accidental start-up without water, the kettle is equipped with a safety lock to protect it from damage.
- Use the handle for lifting and carrying the kettle.
- Take great care to avoid scalding with boiling water or steam while pouring out water from the kettle.
- Do not pour ice-cold water into the kettle when it is hot.
- Always turn off the kettle and disconnect it from the power socket if it's not to be used or if it's to be left unattended or before moving or cleaning it.
- Unplug the kettle from the power socket by pulling the plug, not the cord. Otherwise, damage to the power cord or the socket could occur.
- To avoid the risk of electric shock, do not repair and/or make any adjustments to the electric kettle by yourselves. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

---

### Prevention of Household Accidents

Hot or boiling liquids pose a significant risk to children, and even minor burns can be serious. Observe basic household injury prevention rules and exercise increased caution when children are near hot or boiling liquids. If necessary, explain to children the risks associated with hot or boiling liquids. In the event of burns or scalds, immediately rinse the affected area under a stream of cold water and seek medical assistance if required.

---

### EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.



The product meets all the basic requirements of the applicable EU directives.

---

# Double Wall U-Shape Variable Temperature EN Electric Kettle User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

## DESCRIPTION OF THE KETTLE

<b>A1</b> Lid	<b>A4</b> Base with a central connector
<b>A2</b> Spout	<b>A5</b> Lid open button
<b>A3</b> Body of the kettle with a watermark inside	<b>A6</b> Handle
	<b>A7</b> Control panel

## CONTROL PANEL

<b>B1</b> Beverage icons	<b>B6</b> <b>Boil</b> button
<b>B2</b> Display (shows the current or set temperature)	<b>B7</b> <b>+</b> button to increase temperature
<b>B3</b> <b>Clean</b> button	<b>B8</b> <b>Menu</b> button for selecting automatic programs
<b>B4</b> <b>Keep Warm</b> button	<b>B9</b> <b>Start/Cancel</b> button
<b>B5</b> <b>-</b> button to decrease temperature	

## INTENDED USE

- The SWK 0850GY kettle is designed to heat up drinking water to your chosen temperature. At the same time, it is possible to activate the keep warm function, where the kettle will maintain the set temperature for a maximum of 30 minutes.
- The double-walled design of the kettle provides increased safety against burns.

## BEFORE FIRST USE OF THE KETTLE

- Remove all wrapping material from the kettle and its base. Check that the kettle and its accessories are not damaged. Remove the protective foil from the control panel.
- Fill the kettle with clean water up to the maximum water mark. Boil the water and empty the contents of the kettle. To boil water in the kettle proceed according to the instructions in the chapter "Using Your Kettle". Repeat this process 2 to 3 times.
- Now the kettle is ready for use.

## USING YOUR KETTLE

### Heat water to 100 °C

1. Place the base on a stable, even and clean surface. Fully unwind the power cord.
2. Press the button to open the lid and lid will open. Fill the kettle with the required amount of water. The water level must reach at least the minimum mark, but must not exceed the maximum mark. The marks are placed inside the kettle. After filling, close the kettle lid.



#### Caution:

Do not fill the kettle when placed on the base, not even through the pour.



#### Note:







Do not fill the kettle above the maximum level as water may splash out of the spout while it is boiling. Check that the lid is properly closed before plugging the fork into the power socket.

3. Place the kettle on the base. Insert the power plug into a power socket. A beep will sound and temperature of the water in the kettle will appear on the display.
4. Press the **Boil** button and then press the **Start/Cancel** button to start the kettle. The "BOIL" will start flashing on the display and the temperature on the display will gradually increase as the water in the kettle heats up.
5. As soon as the water in the kettle reaches the required temperature, the kettle will automatically turn off and three sound alerts will sound.
6. Pour the boiled water into a prepared container, cup or mug. Make sure that it remains in a vertical position when it is carried, particularly if it is filled all the way up to the maximum mark.

### Heating water to a desired temperature and function maintaining that temperature

- This function makes it possible to maintain the set temperature in the kettle after boiling the water for a maximum of 30 minutes.
  - When the temperature sensor detects that the water temperature inside the kettle has dropped, the kettle switches on and reheats the water to the temperature you set. The kettle will then turn off.
1. Perform steps 1 to 3 from previous part "Heating water to 100 °C".
  2. Press the **Keep warm** button.
  3. Press the **Menu** button repeatedly to select one of the preset temperatures – see table below. The indicator light of the selected temperature will light up and "WARM" will start flashing on the display.
  4. You can still adjust the selected temperature using the **+/-** buttons. In such a case, the indicator light of the selected temperature will turn off.
  5. Press the **Start/Cancel** button and the kettle will start.
  6. "WARM" will appear on the display and "HEATING" will flash. The temperature on the display will gradually increase as the water in the kettle is heated.
  7. As soon as the water in the kettle reaches the required temperature, the kettle will automatically turn off and three sound alerts will sound. The temperature and "WARM" will appear on the display.
  8. After boiling the water, the kettle will keep the temperature for 30 minutes.
  9. After the set time has elapsed, the kettle automatically switches off.

## Temperature table

Icon	Temperature	Usage
 <b>Baby Formula</b>	40 °C	Infant milk, baby porridge, etc.
 <b>Hot Beverages</b>	60 °C	Special types of tea, instant soup, etc.
 <b>Green Tea</b>	70 °C	Green tea
 <b>White Tea</b>	80 °C	White tea
 <b>Coffee</b>	90 °C	Instant coffee
 <b>Black Tea</b>	95 °C	Black tea



### Note:

The keep warm function is not active for a temperature of 100°C to prevent the water from boiling out and consequently damaging the kettle.



### Note:

If you need to cancel the keep warm function, press the **Keep Warm** button. The "WARM" on the display will go out. It is important to press the Keep Warm button before starting the kettle with the **Start/Cancel** button.



### Note:

If the water temperature inside the kettle is higher than the set temperature, the kettle will beep and not start. The actual temperature in the kettle will appear on the display.



### Caution:

Do not turn on the kettle when it is empty. The incorrect use of the kettle may negatively affect its lifetime. If you accidentally turn on the kettle without water, the thermostat will, after reaching a certain temperature, interrupt the electric circuit and turn off the kettle. It will be possible to run it again after several minutes, until the heating bottom has cooled down.



### Note:

The operation of the kettle can be interrupted at any time by pressing the **Start/Cancel** button. When heating water to 100 °C, press the button twice. Or lift the kettle to switch it off. When the kettle is lifted from the base, all programs will stop, and once it is placed back on the base, it will return to the standby mode.



### Note:

A sound is made each time a button is pressed. This is normal.

## POWER-SAVING MODE

- The display automatically turns off after 1 minute of inactivity. Press any button to light up the display.
- You can also turn off the display manually by pressing the **Start/Cancel** button.

## CLEANING AND MAINTENANCE

Before cleaning, make sure that the kettle is unplugged from the mains socket and let it cool down.



### Caution:

Do not immerse the kettle, base, power cord or plug in water or any other liquid.



### Caution:

Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface. None of the components of this appliance are dishwasher safe.

- To clean the external parts of the kettle use a dry cloth or a cloth dipped in a weak solution of neutral kitchen detergent.
- After applying the kitchen detergent, wipe the surface with a lightly damp cloth and then wipe dry.
- To clean the base use only a dry cloth.

## Removing Limescale Deposits

- As the lime scale deposited in the kettle may adversely affect its lifetime, remove it regularly depending on the kettle use frequency.
- In addition, by removing the lime scale, you can save electricity and shorten the water boiling time without affecting the drink taste.
- During standard use (3 to 5 times per day), we recommend water scale deposits be removed:
  - once per month in areas with hard and very hard water;
  - once every two to three months in areas with soft and medium hard water.
- Scale build-up increases the noise level of the kettle.
- To remove the scale, we recommend the Sencor SESXD 001 liquid agent. Follow the dosage and procedure instructions which you can find on the packaging of the descaling agent.

## Procedure

- The kettle is equipped with a special program for descaling.
- Pour the diluted solution of water and descaling agent into the kettle.
- Place the kettle on the base and press the **Clean** button. 100°C will appear on the display and "CLEAN" and "BOIL" will blink.
- Press the **Start/Cancel** button and the kettle will start. "HEATING" will start flashing on the display and the temperature on the display will gradually increase as the water in the kettle heats up.
- As soon as the water temperature reaches 100°C, the kettle will remain in operation and will turn on and off regularly. "CLEAN" will remain on the display and "HEATING" will flash. Regular switching removes lime scale thoroughly.
- The descaling time is approximately 3 minutes. After this time has elapsed, the kettle will turn off and the current water temperature inside the kettle will be shown on the display.
- Then empty the kettle and before further use boil clean water in it 4 to 5 times.

### Cleaning the filter (Fig. C)

- The kettle is equipped with a removable limescale filter. This filter is very fine and captures the limescale pieces that might come loose during the water boiling. In order to ensure proper functioning, it is necessary to clean the filter regularly.
1. Open the lid and remove the filter from the inner wall of the spout.
  2. Wash the appliance under running water. For heavier soiling, wipe the filter with a soft sponge.
  3. Put it back on the inner wall of the spout.
- .....

### STORAGE

- If you are not going to use the appliance for an extended period of time, disconnect the plug from the mains socket, allow the appliance to cool down, and clean it according to the instructions in the "Cleaning and Maintenance" section.
  - Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
  - Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.
- .....

### TECHNICAL SPECIFICATIONS

Rated voltage range..... 220–240 V-  
Rated frequency..... 50–60 Hz  
Rated input..... 1800 W  
Capacity..... 1.7 l

#### Values Provided according to Commission Regulation

#### EU 2023/826

Off Mode	
Power consumption in off mode	–
Time needed for the equipment to automatically reach off mode	–
Standby Mode	
Power consumption in Standby mode	0.4 W
Time needed for the equipment to automatically reach standby mode	0min *
Networked Standby Mode (Wi-Fi)	
Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–

\* The kettle will immediately switch to the stand-by mode after the water has been boiled or the temperature maintenance function has ended.

.....

### INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

.....

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

### For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

### Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

Changes to text and technical parameters are reserved.

FAST ČR, a.s.  
U Sanitasu 1621  
CZ-251 01 Říčany  
[www.sencor.com](http://www.sencor.com)  
[info@sencor.cz](mailto:info@sencor.cz)