

# SENCOR®

## SRC 136



USER'S MANUAL

Alarm Radio Clock

EN

# Radioclock

Thank you for purchasing this product. Please read this manual carefully to ensure that you learn how to optimally operate this appliance.

## IMPORTANT


- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the clock radio.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this clock radio during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the clock radio has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the clock radio, the clock radio has been expose to rain or moisture, does not operate normally, or has been dropped.
- This clock radio shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.
- Minimum distances around the apparatus for sufficient ventilations( exact distance of e.g.5 cm should be mentioned);
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the apparatus;

- Attention should be drawn to the environment aspects of battery disposal;
- The use of apparatus in tropical and /or moderate climates.

Electrical products should not be disposal of with household waste. Please recycle where facilities exist. Check with your Local Authority of retailer for recycling device.

(Batteries pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## Location of control

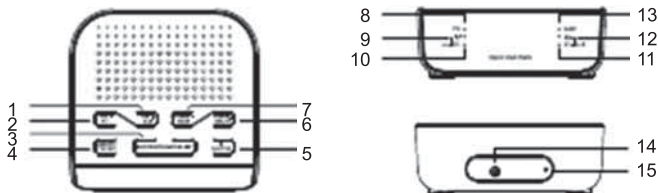

1. VOLUME +/AL2
2. VOLUME -/AL1
3. SNOOZE/DIMMER / SLEEP
4. MEMORY/TIME SET
5.  $\text{⏻}$ /FUNCTION
6. TUNING +/MINUTE
7. TUNING -/HOUR
8. PM INDICATOR
9. ALARM
10. AL1 INDICATOR
11. AL2 INDICATOR
12. ALARM
13. SLEEP INDICATOR
14. AC OUT
15. FM ANTENNA WIRE

## Connect power

### CAUTION

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underneath the clock radio.
- Risk of electric shock! When you unplug the unit, always pull the plug. Never pull the cord.


**Bottom of set:** Battery compartment for 1.5 volt (LR2, AA) battery 2 pcs. (not included) for temporary time setting storage.

## Set time

1. Press and hold TIME SET for two seconds.
2. The 24/12-hour time format will flash on the display. Use HOUR or MIN to select a format.
3. Press the TIME SET button again to set the time.  
Press HOUR and MINUTE to set hour and minute respectively.
4. Press TIME SET again to confirm setting or the setting will be confirmed automatically if no button is used within 3 seconds.

## Listen to FM radio

For better reception, fully extend and adjust the position of the FM antenna wire.

1. Press /FUNCTION to turn on FM radio.  
> [FM frequency] is displayed.
2. Press TUNING +/- for two seconds.  
> The FM Tuner tunes to a station with strong reception automatically.

### To search for a radio station manually:

Press TUNING +/- repeatedly to tune to a radio station.

## Store FM radio stations manually

1. Tune to an FM radio station.
2. Press MEMORY and hold to activate the storing mode.
3. Press TUNING +/- to select the preset number.
  - > [P 01 ~ P 20] is preset station numbers.
  - > If this position is occupied, the previous stored frequency will be displayed.
  - > To remove a pre-stored FM radio station, store another station in its place.

## Listen to a preset FM radio station

Press MEMORY to select a preset number.


**Note:**

The digit display returns to clock display if no buttons is pressed for 5 seconds.

## Set alarm timer

Make sure that you have set the clock correctly.

You can set two separate alarm timers. For the alarm sound, you can select the radio or the buzzer.

1. Press /FUNCTION to Clock mode.
2. Press and hold AL1/AL2 for two seconds.
  - > [0:00] Hour digit is blink.
3. Press HOUR to set the alarm hour and MINUTE to set the alarm minute.
4. Press AL1/AL2 to confirm.
5. Press AL1/AL2 again to select a sound source: RADIO or BUZZER.
  - > The Radio indicator is blink if radio source is selected and AL1 / AL2 indicator is light up.
  - > The buzzed indicator is blink if the buzzer sound is selected and AL1 / AL2 indicator is light up.
  - > Press AL1/AL2 to off alarm function and AL1/AL2 indicator is off.


## Snooze alarm

When alarm sounds, press SNOOZE to activate the snooze time for 9 minutes.

- The AL1 / AL2 indicator keeps blinking.

 
## Set sleep timer

This clock radio can switch to standby mode automatically after a preset period.

1. Press /FUNCTION to radio mode.
2. Press SNOOZE/DIMMER/SLEEP multi-function button repeatedly for 2 seconds to select the sleep timer period (in minutes)

To deactivate the sleep timer, press SNOOZE/DIMMER/SLEEP multi-function button repeatedly until back to OFF.

Sleep Timer period circle as follow :



## Adjust volume

While listening, press + VOLUME – to adjust volume.

## Adjust display brightness

Press DIMMER repeatedly to select high or low brightness levels.

## Battery back-up

(For Temporary Time Storage Only)

Install 2 x LR06, AA or EU-3 battery (not included) according to polarity shown inside the battery compartment. In the event of a power interruption, your set will not work normally from the mains supply but there is now the advantage that your clock will continue to work. The clock display will not light up, as the clock time will be held in the memory. This also enables you to move the set from place to place without re-setting the clock every time. The battery back-up system is only meant to be used from short temporary power interruption. For longer durations, the battery may become exhausted or there may be some deviation in accuracy. When the battery is exhausted, it should be removed from the set to prevent leakage. If you do not wish to take advantage of the battery back-up system, your set will work normally without a battery.

However, if disconnected from the mains, the clock figures will flash when the mains are re-connected and you must re-set the clock as described in the Electronic Clock Operation paragraph.

Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.

Attention should be drawn to the environmental aspects of battery disposal. Electrical products should not be disposal of with household waste. Please recycle where facilities exist. Check with your Local Authority of retailer for recycling device.

(Batteries pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## Specification

Power source:	AC 230 V ~ 50 Hz
Backup batteries:	2 × 1.5 V AA (not included)
Tuner Range:	FM 87.5–108.0 MHz
Power Consumption:	3.5 W
Dimensions:	120 × 50 × 120 mm
Weight:	360 g

Product specification is subject to change without prior notice.

## **INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of packaging material at a public waste disposal site.

## **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES**



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes..

# SENCOR®

## EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.