



A24 Clip On Earbuds

 
 
User Manual

1. Read Before Use

Thank you for purchasing with Hmusic. Please read the user guide carefully and use the product properly.


- 1) Please peel off the plastic sticker on the charging pins of the earbuds.
- 2) Please fully charge the earbuds and the charging case for first usage; To ensure battery longevity, timely charge the earbuds before the battery completely drains. The working hours and charging time vary due to many factors, such as playback environment, volume, and sound source.
- 3) Please use qualified 5V-1A charger (5V2A, 10W MAX) to charge this product. Do not charge the product with car chargers, seat chargers, USB wall chargers, USB power strips and fast charging power banks with unstable or overload voltage/current output, which may affect the battery life or damage the battery.
- 4) Keep the product away from Wi-Fi routers and other high-frequency transmitting devices, as they may affect with the signal reception of this device, causing sound interruptions and disconnections.
- 5) Please use the product in a open area of 10 meters and ensure no physical obstacles between the Bluetooth device and the headphones.
- 6) Please ensure the product is not used or stored in high-temperature or humid environments to avoid affecting product performance.
- 7) Prolonged use of earphones at high volume may cause hearing loss. Please manage the usage time reasonably.
- 8) This product has been inspected by our company's quality control department and its performance parameters meet technical standards. Do not disassemble or attempt to repair the product privately. If there is any issue, please contact Hmusic (support@h-sound.com) for support.

2. About the Earbuds

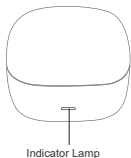

3. Inside the Package

 
- 1) Charging Case and Earbuds
- 2) USB C Charging Cable
- 3) User Manual

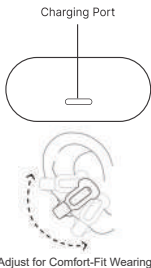

4. Specifications

Model Number	A24	Input	DC5V=300mA
Bluetooth Version	V6.0	Speaker Frequency	20~20kHz
Connection Distance	10 meters (Open Area)	Impedance	16Ω ±15%
Speaker Size	13mm	Waterproof	IPX5
Earbud Battery Capacity	50mAh	Case Battery Capacity	280mAh
Earbud Charging Time	About 1.5 Hours	Case Charging Time	About 2 Hours
Earbud Playtime	About 6 Hours	Total Playtime with Case	About 18 Hours
Talk Time	About 5 Hours	Standby Time	About 80 Hours

 5. Touch Control Operation

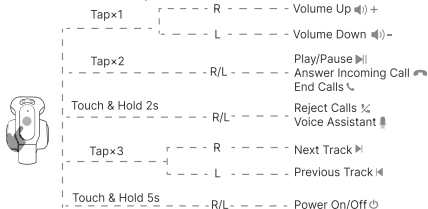


6. Indicator & Prompt Tone

Status	Indicator	Prompt Tone
Touch Control Sound	NA	De (every tap/touch)
Power On for Pairing	Flashes in orange and white	Ding Dong Dang
Connected	Goes off	Ding Dong Dang
Disconnected	Flashes in orange and white	Di Di
Power Off	Blinks in orange for 3 Times	Ding Dong
Incoming Call	Flashes in white color	Phone Ring Tone
Voice Assistant	NA	Du
Maximum Volume	NA	Ding Dang
Low Battery	Earbuds: Blinks in orange for twice every 3 mins Case: Blinks in orange	Dang~ (in every 3 mins)
Standby By	Goes off	NA
Earbuds Pairing	The main earbud blinks in white and orange while another earbud goes off	NA
Charging	Earbuds: Solid orange Case: Solid orange	NA
Fully Charged	Earbuds: Light goes off CASE: Light goes off	NA

7. Charging


- 1) Place the earbuds inside the charging case to charge the earbuds.
- 2) Please use the included USB-C charging cable and qualified 5V1A (5V2A, 10W MAX) charger to charge the case.

 *Note: Non-branded chargers may affect the battery life or damage the charging case. The charging will be unsuccessful for chargers that exceeds 10W(5V-2A).



8. Power On/Off

- 1) Take out the earbuds from the charging case and the earbuds will power on automatically. Put the earbuds back to the case, and they will power off.
- 2) Touch on the touchpad of any earbud and hold for 5s, both earbuds will power off; Touch on the touchpad of the earbud and hold for 5s, the the earbud will power on. Touch on the other earbud and hold for 5s, and the other earbud will power on.

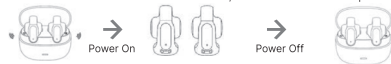

9. Bluetooth Connection

- 1) Take the earbuds out from the case. The indicators of both earbuds blinks in orange and white, one earbud goes off after 3s, and another earbud (the main channel) will continue blinks in orange and white.
- 2) Go to "Bluetooth" settings on your device, turn on Bluetooth function and search for 'A24' and connect.



10. Connection with Two Devices

- 1) Connect the earbuds with first device; then turn off the Bluetooth function on the first device(A). The earbuds will blink in orange and white and available for pairing.
- 2) Connect the earbuds with the second device;
- 3) Turn on the Bluetooth function of your first device and tap on "A24" under the connection records and reconnect the earbuds. Now the earbuds will be connected with two devices simultaneously.

11. Force Pairing

The earbuds automatically connect to latest connected device by default. To ignore the current connection, please follow below step and force the earbuds into pairing mode:

Step1: Take out both earbuds, press on the touchpads of both earbuds for 5s to power off (orange light flashes 3 times then turns off) then release.

Step2: Press on the touchpads again for 6s until both earbuds will flash in orange and white, then one light turns off.

Step3: Search for "A24" and connect the earbuds to your target device.

12. Factory Reset

If the left and right earbuds fail to pair with each other or unable to connect with the current device, please reset to factory settings and reconnect:

Step1: Take out one earbud, when the indicator blinks in orange and white lights, quickly tap on its touchpad 4 times, you will see the orange and white lights turn on then go off.

Step2: Take out the second earbud and repeat step 1.

Step3: Put both earbuds back to the charging case. And the earbuds are restored to factory settings.

Step4: Take out the earbuds, the indicators on both earbuds blink in orange and white then one goes off. Search for "A24" in your device's Bluetooth list and connect.

*Note: After factory reset, previous "A24" connection records will no longer support auto/manual re-connection. You may manually delete/ignore the previous connection records.

13. Warranty

The product is covered by a 12-month warranty from the date of purchase. For any issue regarding the purchase or the product, please contact us by email (support@h-sound.com).

The following situations are not covered by warranty.

- 1) Damage caused by self disassembly;
- 2) Failures caused by water ingress or falling from the heights are considered mechanical damage;
- 3) Failure or damage caused by force majeure.

Scan the QR code to download
PDF User Manual

