


THE*R*UN

TREADMILL FITNESS GUIDE

W2 BASIC

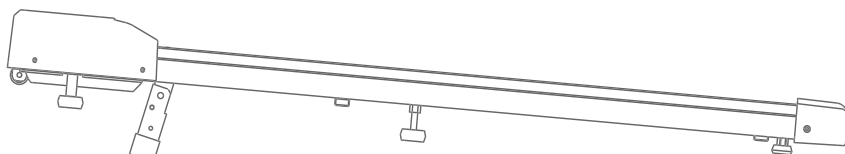

USER MANUAL

IMPORTANT SAFETY INSTRUCTION, SAVE THESE INSTRUCTIONS

If any problems, please contact our After-sales E-mail:

customerservice@therun.info

CONTENTS

Warning Message	01-02
Important Safety Instructions	02-03
Safety Precautions	04
Packing List	05
Technical Parameters	06
Assembly Steps	07-09
Product Operating Instructions	10-12
Error Message Prompt Explanation	12-13
Exercise Recommendations	14
Product Cleaning & Maintenance	15-16
Treadmill Belt Adjustment	17
How to Connect to the APP	18

Warning Message

CAUTION – To Reduce The Risk Of Injury From Moving Parts - Unplug Before Servicing.

WARNING – To Reduce the Risk of Electric Shock – Unplug Before Cleaning or Servicing.

CAUTION! Risk of Injury to Persons – To Avoid Injury, use extreme caution when stepping onto or off of a moving belt. Read Instruction Manual Before Using.

WARNING – Risk of personal injury – Keep children under the age of 13 away from machine.

WARNING! Connect this appliance to a properly grounded outlet only. See Grounding Instructions.

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this machine.

IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using.

DANGER – To reduce the risk of electric shock:

1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.

2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.

4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

6) Do not carry this appliance by supply cord or use cord as a handle.

7) Keep the cord away from heated surfaces.

- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.
- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.

SAVE THESE INSTRUCTIONS


Important Safety Instructions

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-V circuit and has a grounding plug that looks like the plug illustrated in sketch A in Figure 86.1. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

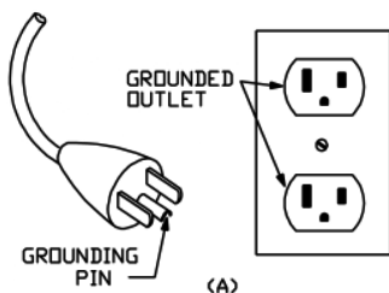

AA200