


# BEVERAGE REFRIGERATOR

## Beverage Refrigerator Merchandiser

Models: KM-BR25SS, KM-BR45SS

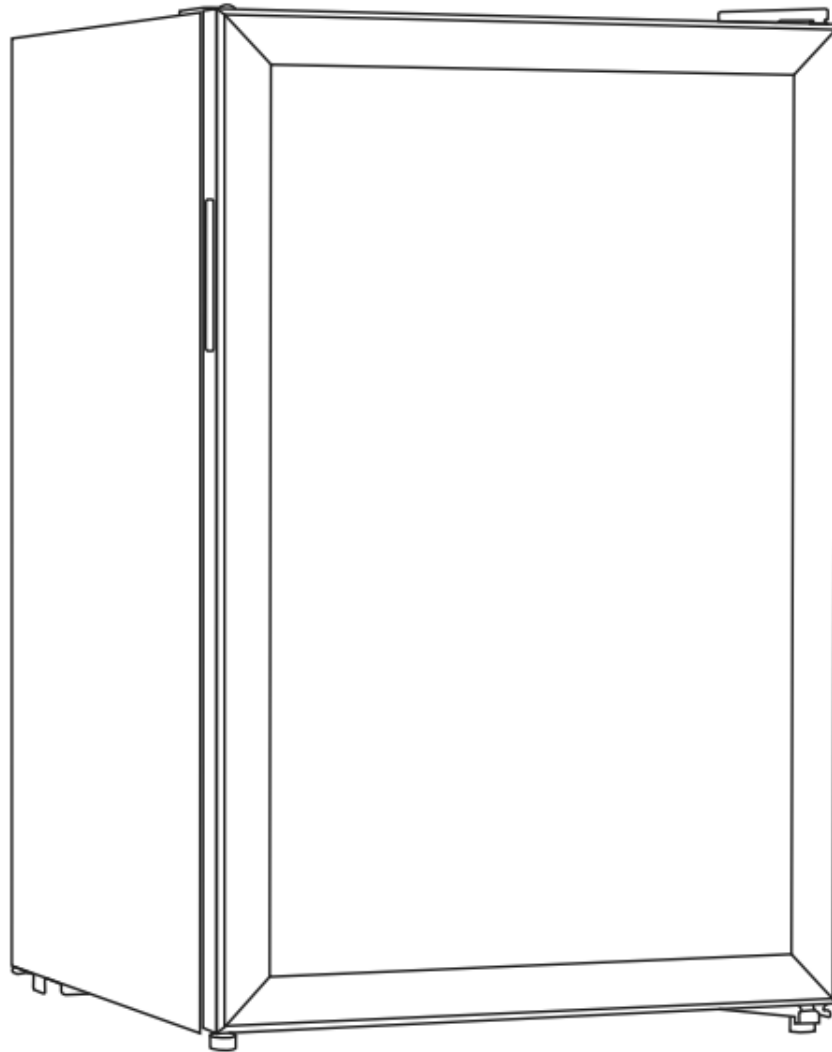


*Please read this manual carefully to ensure proper installation and safe operation of your appliance.*

For any service related issues, please contact us:

☎ 718-576-6342    ✉ [support@koolmore.com](mailto:support@koolmore.com)

## Stay informed with the latest information for your KoolMore appliance.

Scan the QR code below to access the most recent User Manual on our website, which is constantly being updated and improved.

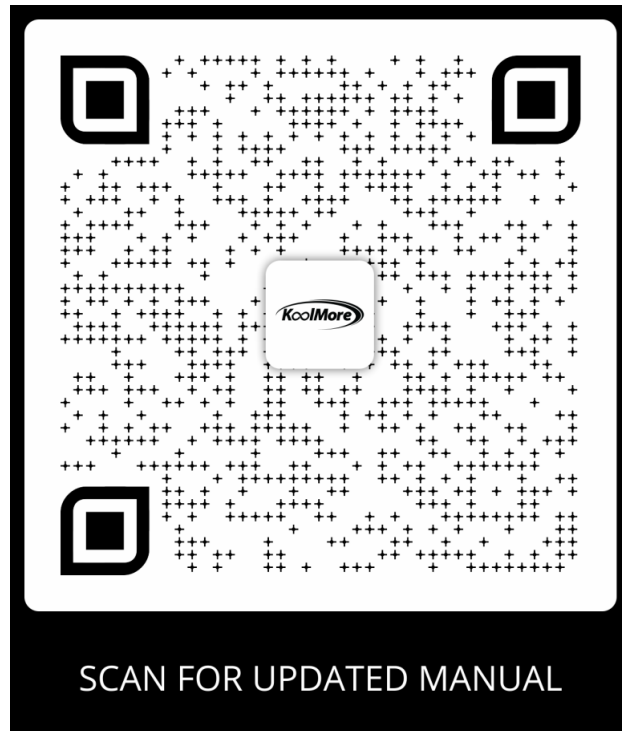

**If you need any assistance or have questions, our customer support team is here to help.**

**Phone: 718-576-6342 Email: [support@koolmore.com](mailto:support@koolmore.com)**

Please write down the model number and serial number below for future reference. Both numbers are located on the rating label on the back of your unit or inside of the unit and are needed to obtain warranty service. You may also want to staple your receipt to this manual as it is your proof of purchase and may also be needed for service under warranty.

Model Number: \_\_\_\_\_  
Serial Number: \_\_\_\_\_  
Date of Purchase: \_\_\_\_\_

To better serve you, please do the following before contacting customer service:

If you received a damaged product, immediately contact the retailer or dealer that sold you the product.


Read and follow this User Manual carefully to help you install, use, and maintain your unit.


Refer to the Troubleshooting section of this manual as it will help you diagnose and solve many common issues.


# Contents


Safety .....	4
Product Overview .....	6
Installation and Transportation .....	7
Reversing the Door Swing .....	8
Operation .....	9
Maintenance .....	10
Troubleshooting .....	11
Warranty .....	12


# Safety

 **Warning:** Wrong operations will cause users damaged or even dead.

 **Attention:** Wrong operations will cause users or the appliance damaged.

 The wrong operations should be prohibited.

 The right operations should be performed strictly.

 It is a high temperature danger warning.

- **Electrical Requirements**

The rated voltage is 110-120, and the rated frequency is 60Hz.

If the voltage is too low or too high, the compressor may be damaged.

- **Grounding (Earthing)**

Always use a properly grounded (three-prong) outlet.

Ensure the outlet can handle the required electrical load.

Do not use damaged outlets or cords.

Make sure the plug is fully inserted into the outlet to prevent overheating or fire.

In case of emergency, unplug the unit immediately.

- **Power Cord Safety**

Do not damage or modify the power cord.

Always grasp the plug when unplugging; do not pull on the cord.

Use caution when moving the unit to avoid damaging the cord.

- **Handling and Transport**

Avoid applying pressure to the glass doors, as they may break.

Handle the unit carefully during transport to prevent damage.

- **When Not in Use**

If the unit will not be used for an extended period, unplug it.

Keep the appliance in a secure location and prevent children from playing with it.

Place the unit in a stable, fixed position.

- **Gas Safety**

If you detect a gas leak, turn off the gas supply first, then ventilate the area by opening doors and windows.

Do not unplug the unit during a gas leak.

- **Intended Use**

This unit is designed for refrigeration only.

Do not store frozen food, as this may affect product quality.

- **Fire and Hazard Prevention**

Do not store gasoline or other flammable liquids near the unit.

Do not place hazardous materials such as explosives, chemicals, acids, or corrosive substances inside the unit.

- **Child Safety**

Supervise children to prevent injury.

Do not allow children to climb into or play inside the unit.

Keep hands and feet away from the compressor area and rear openings.

- **Service and Modifications**

Do not attempt to modify or repair the unit yourself.

Repairs and maintenance must be performed only by qualified technicians.

### **Additional Safety Precautions**

- **Water Protection**

Do not spray or wash the unit with water.

Do not install the unit in damp or wet locations, as this may pose an electrical hazard or cause a fire.

- **Disconnecting Power**

Always unplug the unit before cleaning, servicing, or during a power failure.

After unplugging, wait at least 5 minutes before reconnecting power to protect the compressor.

- **Shelf Installation**

Install shelves securely and correctly.

This unit is intended for food storage only.


Do not use it to store chemicals, medical supplies, or other non-food items.

### **Warnings**

- **WARNING:** Keep ventilation openings clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, unless recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the storage compartment unless recommended by the manufacturer.

# Product Overview

The below picture is for your reference. There maybe some differences from your appliance.

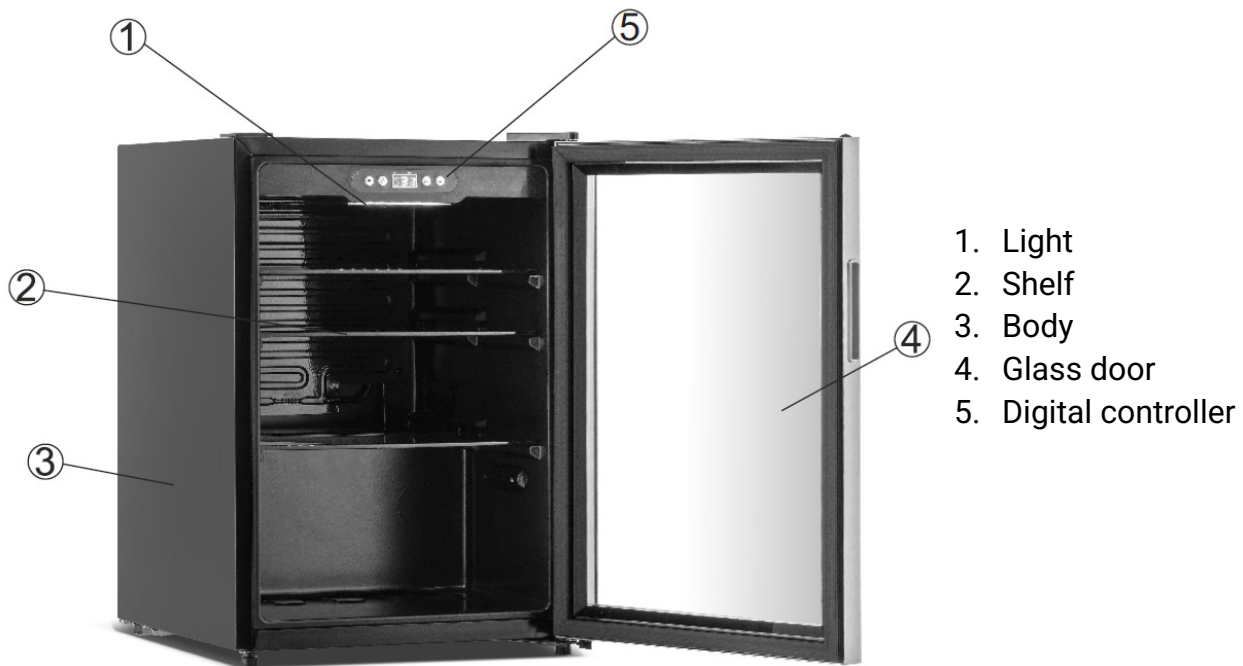

## Product Overview

- **Energy-Efficient Cooling:** Advanced cooling system enhances performance while reducing energy consumption.
- **Quiet Operation:** Designed for ultra-quiet performance, making it ideal for homes, offices, or commercial spaces.
- **Durable Glass Door:** Sleek, sturdy glass door provides clear visibility of contents while maintaining insulation.
- **Adjustable Feet:** Easily level the unit on uneven surfaces for stable placement.
- **Rapid Cooling:** Powerful refrigeration system ensures fast and consistent temperature control.


# Installation and Transportation

- When unpacking, ensure all accessories are included. Repack securely before transporting if needed.
- Handle the unit with care during transport. Avoid strong impacts or tilting the unit more than 45° to protect the cooling system.
- Leave at least 4 inches (10 cm) of clearance on the sides and back during installation to ensure proper airflow and operation.
- Before connecting to power, remove all protective packaging, including the plug cover. Let the unit run for a short time before loading food or beverages.
- Place the unit on a flat, stable surface. If elevation is needed, use a solid base—do not use soft or flammable materials, and remove all packaging from underneath.
- Keep the unit dry. If water is present, wipe it immediately with a soft cloth to prevent damage and maintain insulation.
- Do not install the unit in extremely cold environments or outdoors where it may be exposed to rain.
- Avoid placing the unit near heat sources or in direct sunlight, as this may affect performance.

# Reversing the Door Swing

This appliance has the capability of the door opening from either the left or right side. The unit is delivered to you with the door opening from the left side. The following instructions are for your reference only.

1. Remove top hinge cap. Unscrew and remove the top hinge. Keep the screws so they can be used on the opposite side.
2. Remove the right adjustable leg, unscrew the bottom hinge and hinge shim. Save the screws.
3. Lift the door up and away from the appliance.
4. Remove top cap from opposite corner (left) and cover exposed holes (right).
5. Remove left adjustable leg, affix bottom hinge shim and bottom hinge with reserved screws. Screw on the left adjustable feet.
6. Place the door on the left bottom hinge. Ensure that the door is aligned horizontally and vertically before attaching the top hinge.
7. Attach the top hinge and snap on the top hinge cap.

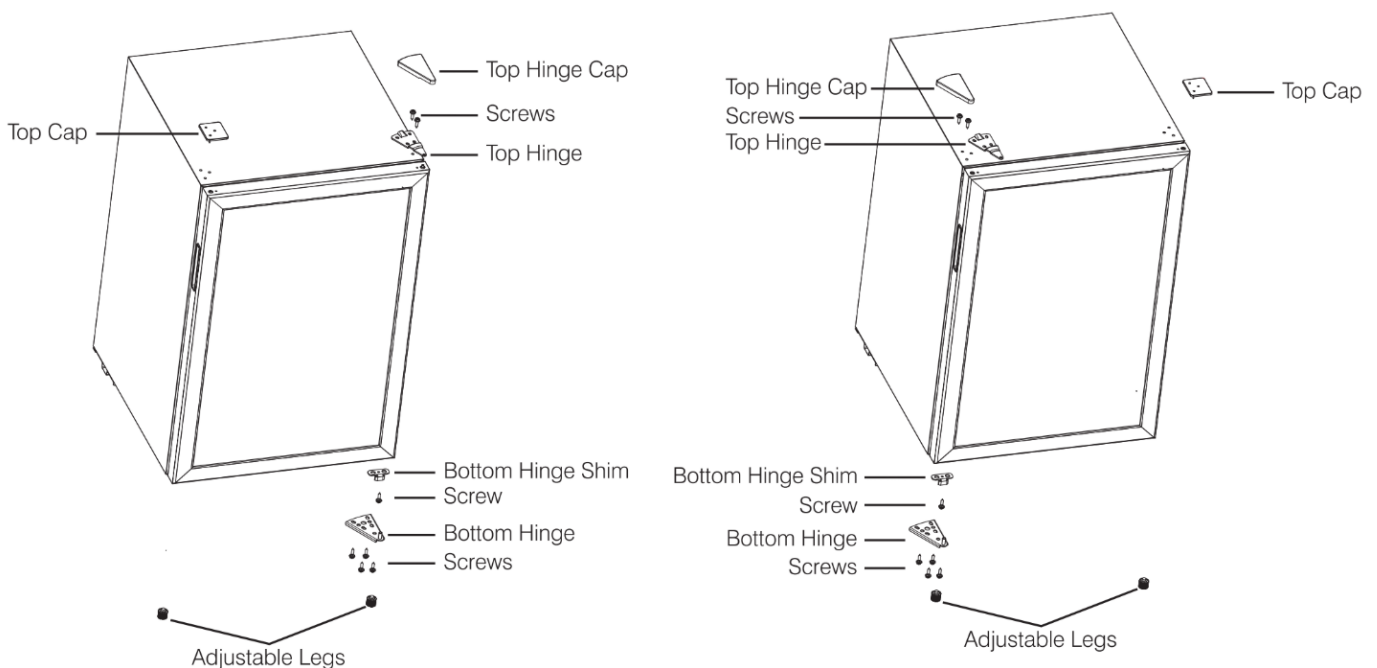


# Operation

## First-Time Operation



- Place the unit in a proper, level position and open the door briefly to allow ventilation.
- Although the unit is cleaned at the factory, we recommend cleaning it again before first use.
- Run the unit empty and set the thermostat to begin cooling. The compressor may operate longer than usual during the initial startup.
- Once the internal temperature has reached the desired level, the unit will cycle automatically. For best results, wait until the interior is fully cooled before loading beverages or products.
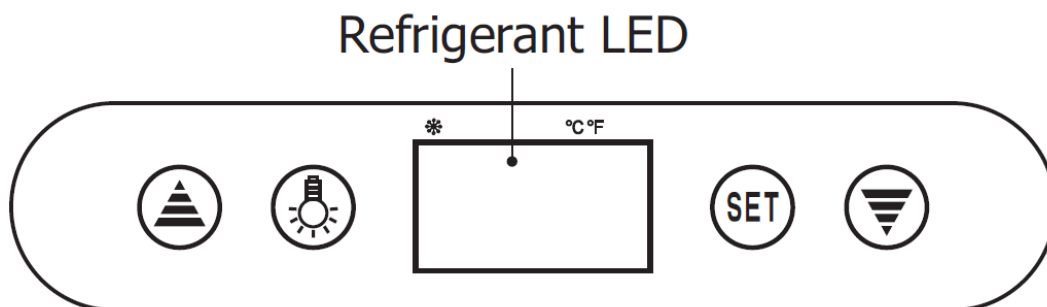
## Control Panel




### 1. Setting the Temperature

Press the  button to display the current set temperature.

Use the  /  buttons to adjust the temperature.


Press  again to save the selected value.

Press  to exit and return to the current internal temperature display.

If no buttons are pressed for 10 seconds, the display will automatically return to the internal temperature.

Adjustable temperature range: **32°F – 60°F**

### 2. Light Function

Press the  button to turn the light on.



Press it again to turn the light off.

### 3. Refrigerant LED Indicator

The LED remains on during active cooling.

When the internal temperature is stable, the LED will flash.

### 4. Digital Controller Reset

- If the display shows "Disorder":
  1. Press and hold the  button for 2 seconds until you hear a beep.
  2. Then press and hold the  button for 6 seconds until it beeps again.
  3. The display will flash for 3 seconds and reset to factory settings.

# Maintenance

## Cleaning

- Always unplug the unit before cleaning.
- Use a soft cloth or sponge with clean water or mild soap.
- Do not use harsh chemicals, such as acidic or alkaline solutions, or hot water.
- Avoid using water directly inside the compressor compartment. After cleaning, dry all surfaces thoroughly to prevent rust.
- Allow hot food or beverages to cool before placing them inside, as this can affect cooling performance.
- Arrange items inside the unit with space between them to ensure proper airflow. Do not block air vents, as this may reduce efficiency or cause damage.
- Minimize how often the door is opened, and keep it closed when not in use to conserve energy.
- After turning off the unit or in the event of a power interruption, wait at least 5 minutes before restarting to protect the compressor.
- If the internal temperature rises due to a power outage or malfunction, unplug the unit and allow it to stabilize before restarting.
- If the unit will not be used for an extended period, unplug it, clean it thoroughly, and store it properly.

## Defrosting

- The unit features automatic defrosting. When the compressor stops, frost will melt and drain into the collection tray.
- Water in the tray will evaporate during normal operation, so manual defrosting is not required.

## Lamp Replacement

- If the interior light is damaged, contact a qualified technician for service. Do not attempt to replace it yourself.

# Troubleshooting

## Faults and Diagnosing

No Cooling	Poor Cooling Performance
<ul style="list-style-type: none"><li>• Check if there is a power outage.</li><li>• Make sure the plug is properly connected to the outlet.</li><li>• Check if the fuse is turned on.</li><li>• If the appliance uses a surge protector, make sure it is working properly.</li></ul>	<ul style="list-style-type: none"><li>• Make sure the thermostat is set correctly.</li><li>• Ensure the appliance is not exposed to direct sunlight or placed near heat sources.</li><li>• Check for dust buildup on the compressor and condenser.</li><li>• Avoid overloading the appliance with too many items.</li><li>• Make sure there is enough space between stored items for proper airflow.</li><li>• Check if any items inside are warm.</li><li>• Avoid opening the door too frequently.</li><li>• Make sure the door is fully closed.</li><li>• Check if there is excessive frost buildup inside the unit.</li></ul>
Appliance Runs Continuously	Excessive Noise
<ul style="list-style-type: none"><li>• Check if the thermostat is set too high.</li><li>• Avoid placing too many items inside.</li><li>• Make sure the room temperature is not too high.</li></ul>	<ul style="list-style-type: none"><li>• Make sure the appliance is placed on a flat, stable surface.</li><li>• Ensure the appliance is not touching walls or other objects.</li><li>• Check that it is not in contact with anything that may vibrate easily.</li></ul>

### **Important**

If the issue cannot be resolved using this guide, please contact KoolMore Customer Service. Do not attempt to repair the appliance yourself.



# WARRANTY

## LIMITED WARRANTY

---

KoolMore Supply Inc. extends a limited warranty to the original purchaser, guaranteeing that this KoolMore product is free from manufacturing defects in material or workmanship for one year from the date of purchase.

Should you discover any such defect within the warranty period, KoolMore Supply Inc. reserves the right to repair or replace the product without charge, or to cover the cost of replacement parts and repair labor needed to correct defects present at the time of purchase or resulting from regular usage, when the appliance has been installed, operated, and maintained as per the instructions provided.

At its sole discretion, KoolMore Supply Inc. may decide to replace the product. In such an event, your replacement appliance will carry the warranty for the remaining term of the original unit's warranty period.

This warranty is valid exclusively to the original purchaser of the product and only applicable within the United States. The warranty commences from the date of original consumer purchase. Proof of the original purchase date will be required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy will be product repair, as outlined above. All services must be provided by a KoolMore designated service company.

KoolMore shall not be responsible or liable for any loss, spoilage, or damage to food, beverages, pharmaceuticals, medical supplies, or any other contents stored in the unit resulting from failure, malfunction, defects, improper installation, improper use, power interruption, or any other cause. Any such losses are expressly excluded from coverage under this warranty.

To claim warranty or request repair service:

Email [support@koolmore.com](mailto:support@koolmore.com). Please include your name, address, phone number, warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit [koolmore.com](http://koolmore.com) and use the Contact Us page. A KoolMore customer service representative will promptly arrange service for your appliance.

We thank you for choosing KoolMore.

## WARRANTY EXCLUSIONS

---

This limited warranty will not cover:

1. Failure of the product to perform during power failures or interruptions, or due to inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accidents, alterations, misuse, abuse, improper installation, repair, or maintenance. This includes using any external device that alters or converts the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs by unauthorized centers, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance not aligned with the user's manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances shall be the responsibility of the consumer.

***KoolMore***