

MAINSTAYS™

6" DESK/CLIP FAN 2 IN 1

Instruction Manual



MODEL NO.: CDF-6

**PLEASE READ, UNDERSTAND AND FOLLOW BEFORE
SAVE THESE INSTRUCTIONS.**

READ AND SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

WARNING: To reduce the risk of electric shock and injury to persons, do not use in a window


WARNING: To reduce the risk of fire or electrical hazard, DO NOT USE THIS FAN WITH ANY SOLID STATE SPEED CONTROL DEVICE.

READ ALL INSTRUCTIONS BEFORE USING

1. Use this unit only as described in this manual. Other uses not recommended may cause fire, hazards or electric shock.
2. This product is intended for HOUSEHOLD use, for indoor, non-commercial, non-industrial, general domestic use in cooling rooms and is not intended for use in windows. Do not use the product outdoors or for any other purpose.
3. To protect against electrical shock, always use on a dry level surface, do not place fan in window, immerse unit, plug or cord in water, or spray with liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug the unit from the outlet if left unattended or not in use, when moving fan from one location to another and before cleaning.
6. Never submerge unit in water.
7. Do not operate the unit in the presence of explosive and/or flammable fumes.
8. Do not place the unit or any parts near an open flame, cooking or other heating appliance.
9. Never insert fingers or any other object through the Fan Guards. Never drop or insert objects into any opening of the product.
10. Never plug this unit in with a wet hand or wet cord.
11. Do not operate the unit with a damaged cord or plug, Discard fan or return to an authorized service facility for examination and / or repair.
12. Avoid contacting with moving fan parts.
13. To disconnect, grip the plug and pull it from the outlet. Never yank the cord.
14. Do not operate if the fan housing is removed or damaged.
15. To maintain operating efficiently, user should not operate the product 24 hours a day, seven days a week.
16. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
17. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

WARNING: This appliance has a polarized plug (one blade is wider than the other).The polarized plug is not intended to be used in non-polarized outlets (having both slots the same size). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug, if it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

ASSEMBLY INSTRUCTIONS

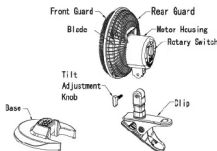

As a clip fan:

1. Place the bottom of the Motor Housing into the top of the Clip, aligning the holes in the bottom of the Housing with the holes in the Clip.
2. Insert the Tilt Adjustment Knob through the holes and tighten the Bolt on the end of the Knob.

As a desk fan:

3. Repeat step 1 and 2, attach the clip fan to the base.

OPERATING INSTRUCTIONS

1. Ensure the rotary switch is at "OFF" position.
2. Plug the unit into a standard 120Vac 60Hz electrical outlet.
3. If Clip fan is in use, attach the Clip to a flat, level, steady and stable surface.
4. To turn on the fan, turn the Power Switch to the desired fan speed setting: "LO" or "HI".



5. To turn off the fan, turn the Power Switch to the "OFF" position.
6. To adjust the fan tilt:
 - a. Loosen the Tilt Adjustment Knob.
 - b. Adjust the fan to the desired angle.
 - c. Securely tighten the Tilt Adjustment Knob.
7. Unplug the product from the electrical outlet when it is not in use or is left unattended.

CLEANING INSTRUCTIONS

WARNING: To avoid the risk of electrical shock, always make sure the product is unplugged from the electrical outlet before disassembling, cleaning, servicing or relocating.

1. The product should be cleaned and checked on a regular basis. Make sure the fan blade is clean at all times, to prevent the fan blade from damage and fading.
 - a. Vacuum the fan blades or use a can of compressed air, or
 - b. Take off the front guard.

2. Wipe the fan blades with a damp cloth dipped in a light solution of water.
3. Make sure that NO WATER gets into the motor while cleaning.
4. The blade must be completely dry when re-securing the guard in place.
5. Wipe front guard and rear guard with a cloth or use a can of compressed air. Make sure the front guard and rear guard are completely dry before securing them back onto the fan.
6. Do not use any chemical cleaners such as acid, alcohol, etc, to clean the fan.

USER SERVICING INSTRUCTIONS

1. Grasp plug and remove from the receptacle or other outlet device. Do not yank the cord to unplug.
2. Select a suitable tool such as a small flat screwdriver or travel scissors.
3. To open the fuse cover. Slide open fuse access cover on top of attachment plug toward blades. (see fig.1)
4. Carefully remove the fuse by prying it out. (see fig.2)
5. Risk of fire can result by using wrong fuse rating. Replace fuse only with 2.5 Amp, 125 Volt rating.(not included)
6. To close the fuse access cover. Slide to close access cover on top of attachment plug. (see fig.3)



Fig.1



Fig.2



Fig.3

WARNING : Risk of fire, Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

CARE AND MAINTENANCE

WARNING: Do not attempt to open any part of the Motor Housing, as a risk of electrical shock may exist. This product has been permanently lubricated at the factory and will not require further lubrication for the life of the product. Additional lubrication of electric motor parts could create a fire hazard.

1. The product must be packaged in its original box and stored in a room with low humidity.
2. Make sure the product is completely dry before using at any time.

NOTE: If you experience a problem, please return the fan to the place of the original purchase. Do not attempt to open the motor housing yourself, doing so may cause damage to the fan or personal injury.

MADE IN CHINA