



 
PORTRONICS

CONCH ONE


Type C Earphone With 4 EQ Modes

User Manual

Packing List



Earphone*1

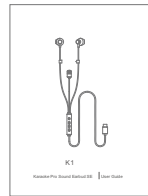


Instruction manual*1

Packing list: earphone*1, instruction manual*1.

Note: The pictures in this user guide are schematic diagrams and may differ from the actual product. Please refer to the actual product.

Product diagram

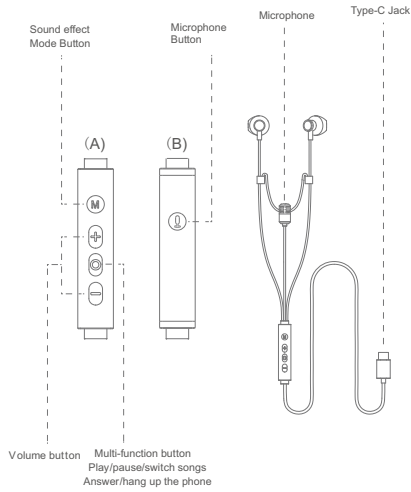

How to Use Sound Modes (M Button)

Switching Modes:

Long press the "M" button to switch between:
Karaoke Mode (for singing with echo)
Listening Mode (for regular music or video)

In Karaoke Mode (For Singing):

- Short press the "M" button to choose from 8 sound effects:
1. Professional Mode – Balanced sound for serious singing
 2. Singer Mode – Brings out the vocals clearly
 3. Theater Mode – Makes it sound like a stage performance
 4. Distant Mode – Adds echo like you're singing far away
 5. Acoustic Mode – Soft, guitar-style room feel
 6. Melody Mode – Adds musical harmony
 7. Rounded Mode – Smooth and warm sound
 8. Vocal Clear Mode – Makes your voice sharper and clearer

In Listening Mode (For Music or Games):

- Short press the "M" button to select from 4 modes:
1. HD Mode – Clean, high-quality sound
 2. Bass Mode – Stronger beats and bass
 3. Cinema Surround Mode – Feel like you're in a movie theater
 4. Game Mode – Better detail for footsteps and effects in games

Note: If you haven't pressed the M button for a few seconds:
The first press will announce the current mode.
The second press will change to the next mode.

Volume & Music Control

"+" and "-" Button :

In Karaoke Mode

Short/Long press = Microphone/Karaoke volume control

In Listening Mode

Short/Long press = Increase/Decrease volume

Microphone Button Function

Double click = Switch between Dry/Wet Recording
Dry Recording: No echo (clear sound)
Wet Recording: With echo (reverb effect)

Multi-Function Button (Middle Button)

Short press = Answer/End a call
Long press = Reject a call
Double click = Next song
Triple click = Previous song

Using the Microphone

Option 1: Hands-Free Mode

Hang the microphone on the connecting line.

Adjust the position of the microphone line up or down until it's at a comfortable distance where it can clearly capture your voice without needing to hold it.


Start singing!

Option 2: Handheld Mode

Detach the microphone from the connecting line.

Hold the microphone and adjust the distance to an appropriate position for clear sound pickup.

Then sing and enjoy!

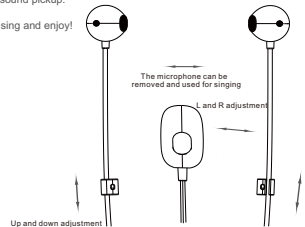

Functions and Parameters

Main Functions

Switching Modes:

- Press and hold the "M" (Sound Effect) key to toggle between Karaoke Mode and Listening Mode.

Karaoke Mode (Earphone Return Enabled)

- Short press the "M" key to cycle through 8 different karaoke reverb effects.
- Use the "+" and "-" volume key to increase or decrease the volume of the karaoke return audio.

Listening Mode (Earphone Return Disabled)

- Short press the "M" key to switch between 4 headphone sound effects.
- Use the "+" and "-" volume key to adjust the music volume.

Product Specifications

Speaker Diameter: 14.2 mm

Frequency Response: 20 Hz – 20 kHz

Microphone: Large-size omnidirectional microphone

Speaker Impedance: 32 Ω

Connection Type: Type-C

Microphone Sensitivity: -40 dB



Frequently Asked Questions

1. After plugging in the earbud, the sound still plays through the phone.

- Ensure the OTG function is enabled in your phone's settings.
- Close all music or media apps completely. Then, plug in the earbud and restart the app.

2. During a call, the sound doesn't play through the earbud but continues through the phone.

- Some mobile phone systems require you to manually pick up the call from the phone to route it through the earbud.

3. No sound from the earbud or microphone.

- Make sure the earbuds are properly inserted into the device.
- Check that the device and media volume settings are not muted.
- Ensure there are no obstructions (e.g., thick phone cases) preventing a full connection.

4. Sound is low or only working in one ear.

- Adjust the angle or position of the left/right earbuds.
- Inspect and clean the earbud sound outlets, earphone plug, and mobile phone jack to ensure there is no dirt or debris.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hrs. : Monday – Saturday 10:00am – 6:00pm)



E-Waste Management
E: info@3recycler.com
For E-Waste & ROHS compliance
refer to www.portronics.com/ewaste