


HORA

WIRELESS SPEAKER

BOC243

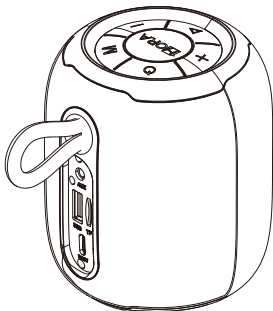

USER MANUAL

PRODUCT SPECIFICATIONS:

- Model: BOC243
- Bluetooth Version: 5.3
- Connection Distance: 10M approx.
- SNR: 85dB
- Battery: 2000mah 3.7V 7.4Wh
- Playing time: 5.6Hrs (At 100% Volume)
- Speaker Size: $\Phi 52\text{mm}$
- Power: 3 Ω /7W RMS
- Frequency: 150HZ-20KHZ
- Dimensions: $\Phi 87.8 \times 101.27\text{mm}$
- Weight: 356g
- Input: 5V=1A

PRODUCT FEATURE:


1. Internationally advanced wireless chip and circuit design technology, supporting all wireless devices.
2. With Hi-Fi speaker, to make sure the clear and bright sound.
3. 10 meters wireless working distance, can connect all external wireless devices (mobile phone/tablet/TV) to play music.
4. With AUX line in, can be directly connected external devices , for example: tablet/TV/mobile phone.
5. Support TF card and USB port, play MP3 format audio.
6. With FM function, it can automatically search for radio stations. Note: In FM mode,

to automatically search for FM stations, please insert a 3.5mm Aux cable before initiating the search.

7. Built-in microphone for hands-free calling.

8. Support True Wireless Stereo Dual Pairing.

KEY AND SLOT FUNCTIONS:

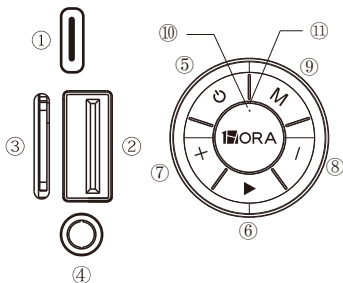

①.DC 5V Slot: Use the standard Type C charging cable to charge.

②.USB Slot: When inserting the U disk into the slot, it can decode and play audio in MP3/WAV format.

- ③.TF Slot: When inserting a TF card into the slot, it can decode and play audio in MP3/WAV format.
- ④.AUX Line in Slot: Use 3.5mm AUX line input through external equipment
- ⑤.Power Switch: Long press for "on/off " to turn on or turn off.

TWS Pairing: After turning on the two speakers, double click the power button of one of the speakers and the speakers will automatically perform TWS pairing.

⑥. Play Button

- 1) Press once: Play or pause;
 - 2) Long press: enter pairing mode;
 - 3) Radio mode: short press to automatically search for radio stations.
 - 4) Call Mode: Short press to answer/end calls. Long press for 2 seconds to reject calls.
- ⑦. During music playback, press the "+" button once to increase the volume, long press the "+" button to skip to the next song.
- In radio mode, press the "+" button once to increase the volume, and press and hold the "+" button to jump to the next station.

- ⑧. During music playback, press the "-" button once to decrease the volume, long press the "-" butt to return to the previous song.

In radio mode, press the "-" button once to reduce the volume and long press the "-" button to return to the previous station.

- ⑨ M Mode Switch Button

Short press to switch modes (BT/USB/T-F/FM/AUX).

Note: In FM mode, you need to insert a 3.5mm Aux cable before automatically searching for FM stations.

- ⑩ Indicator Light

The red light stays on during charging, and turns off when fully charged.

- ⑪ Microphone Location

RESET: Long press ON/OFF for 10 seconds to reset

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARRANTY STATEMENT:

All products are guaranteed to be free from defective materials and workmanship. The warranty period of all equipment provided by our company is 12 months after purchase.

If you have any questions, please contact a customer service representative for assistance.

