



807


INSTRUCTION MANUAL

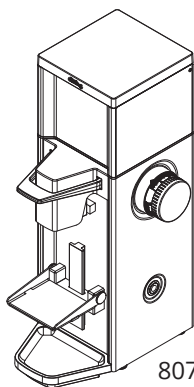

807 LAB SWEET

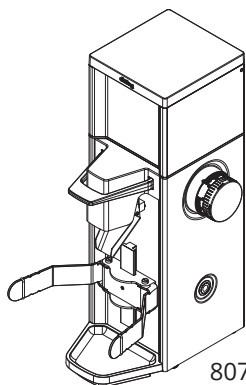

807 FILTER

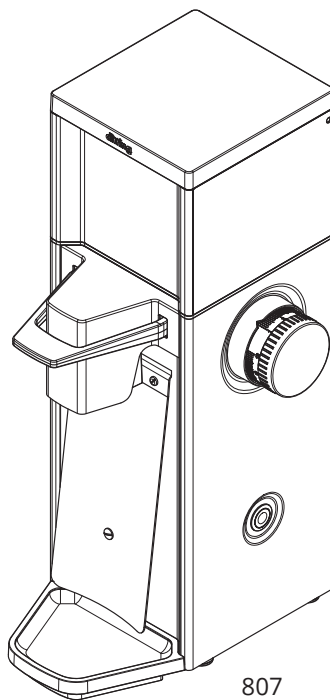




807



ditting



www.dittingswiss.ch

Overview


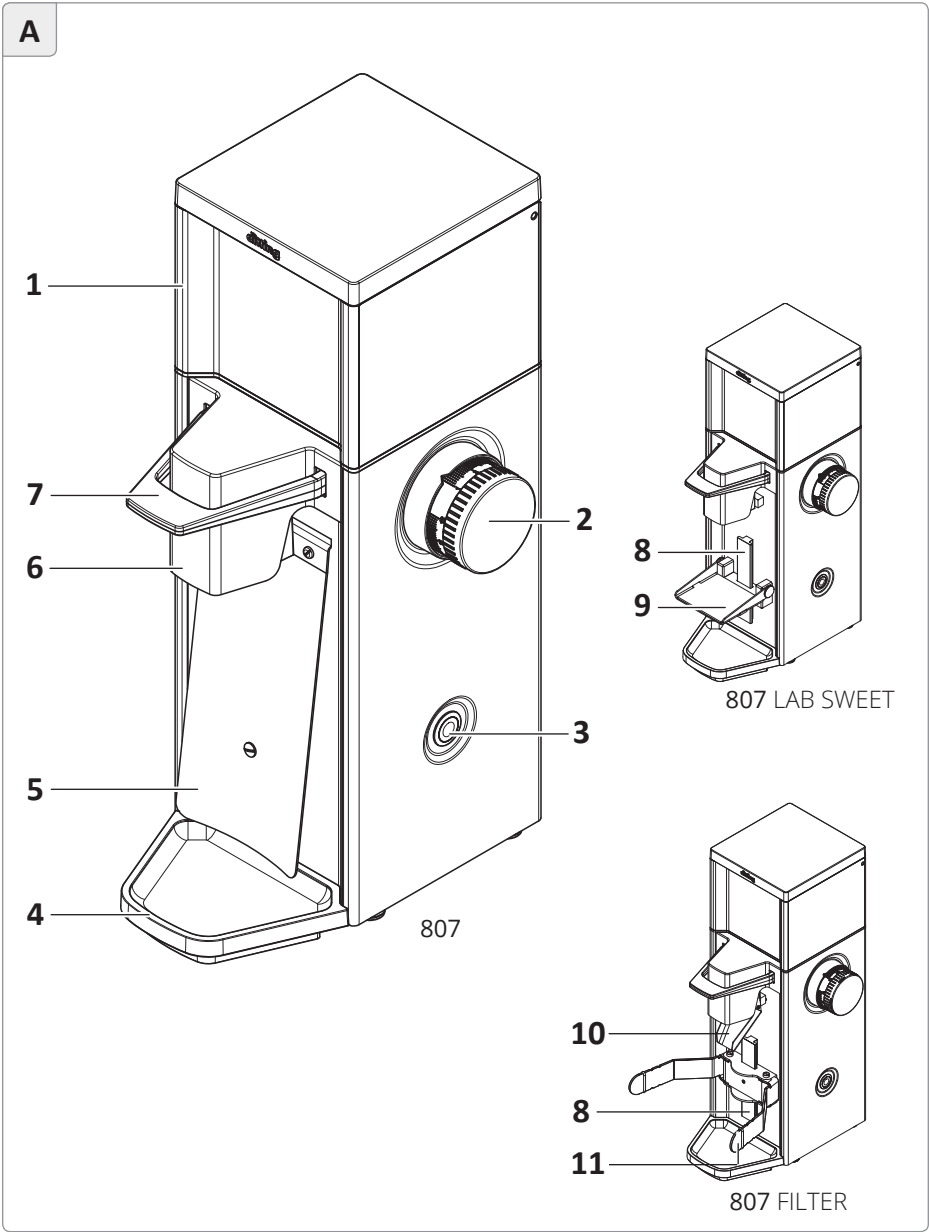


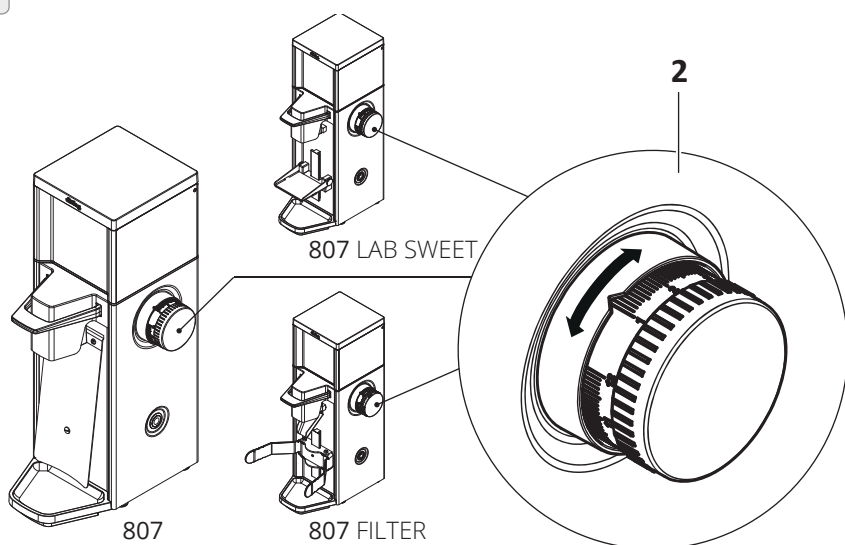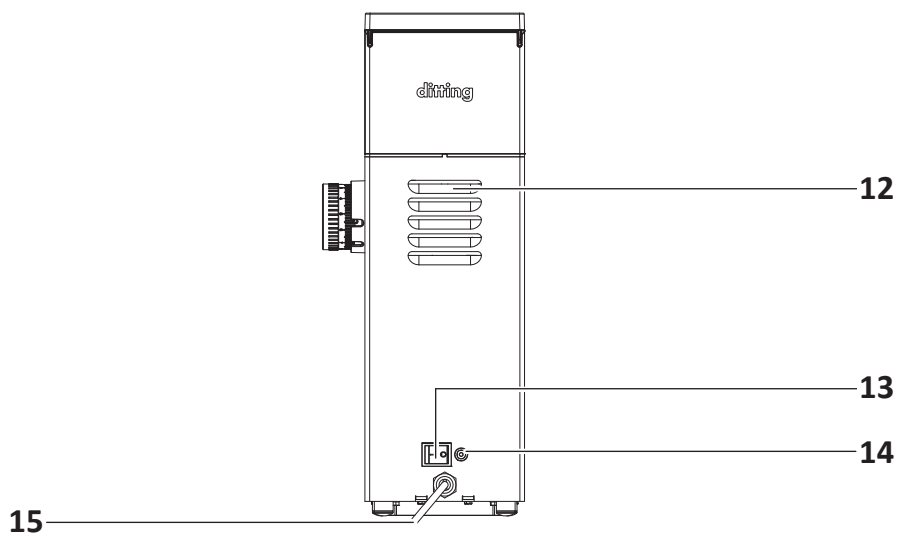B**C**

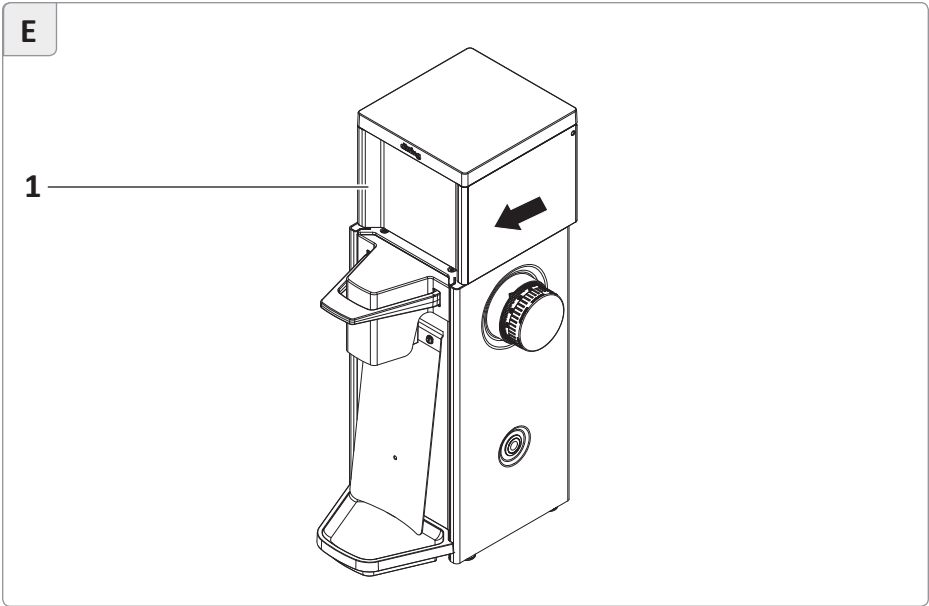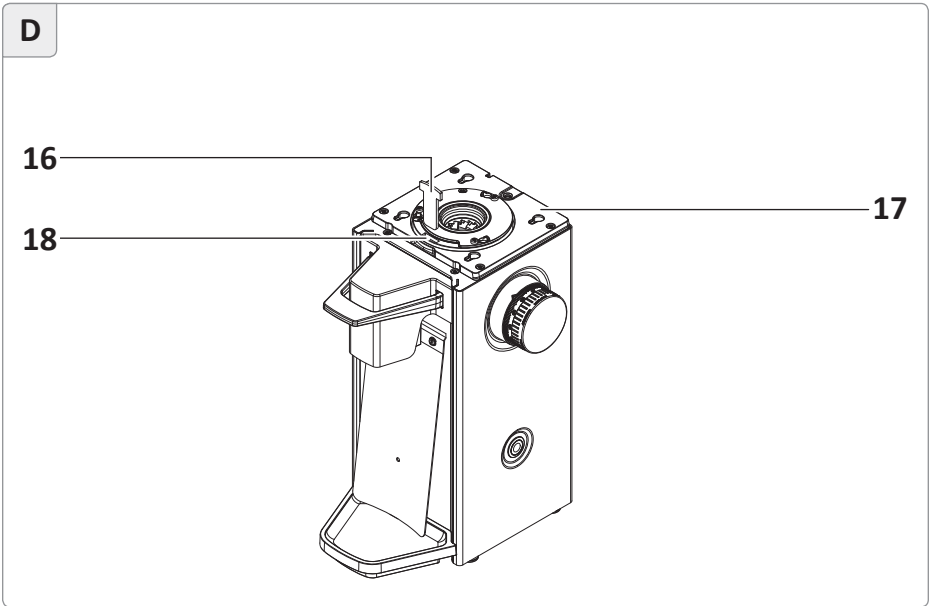

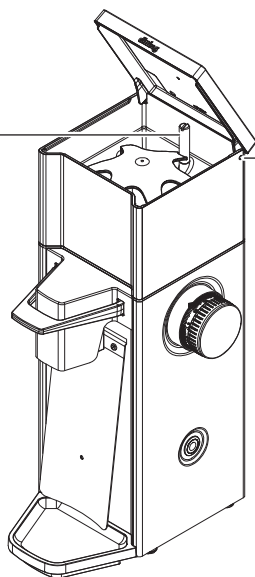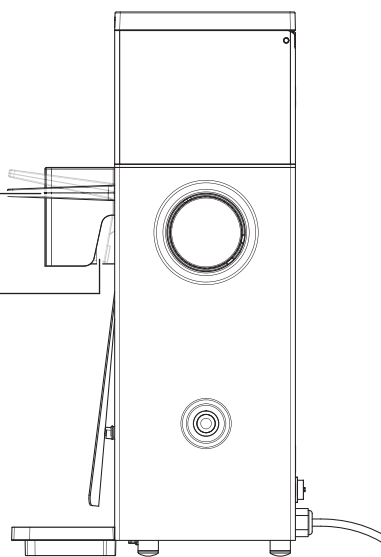F**19****20****G****7****21**

807

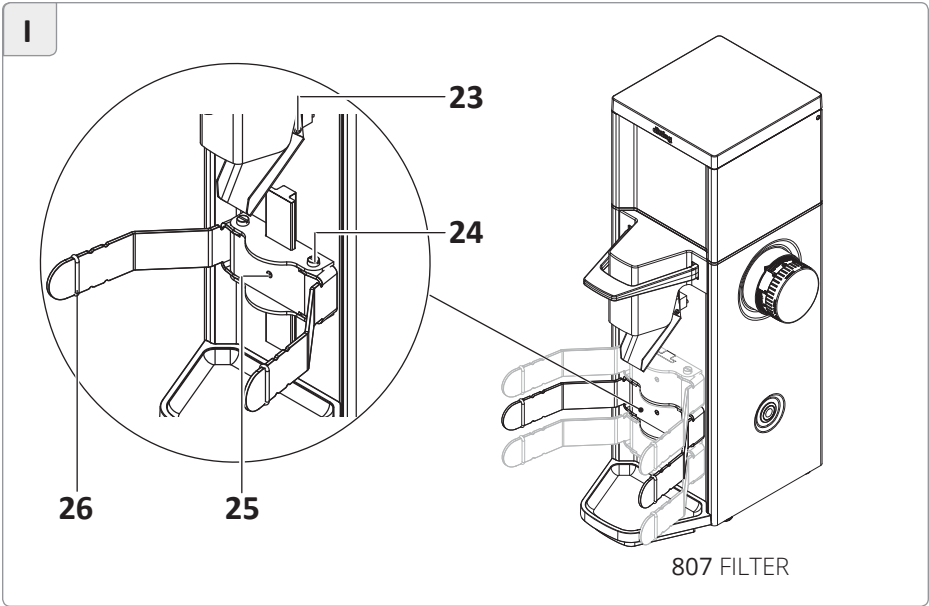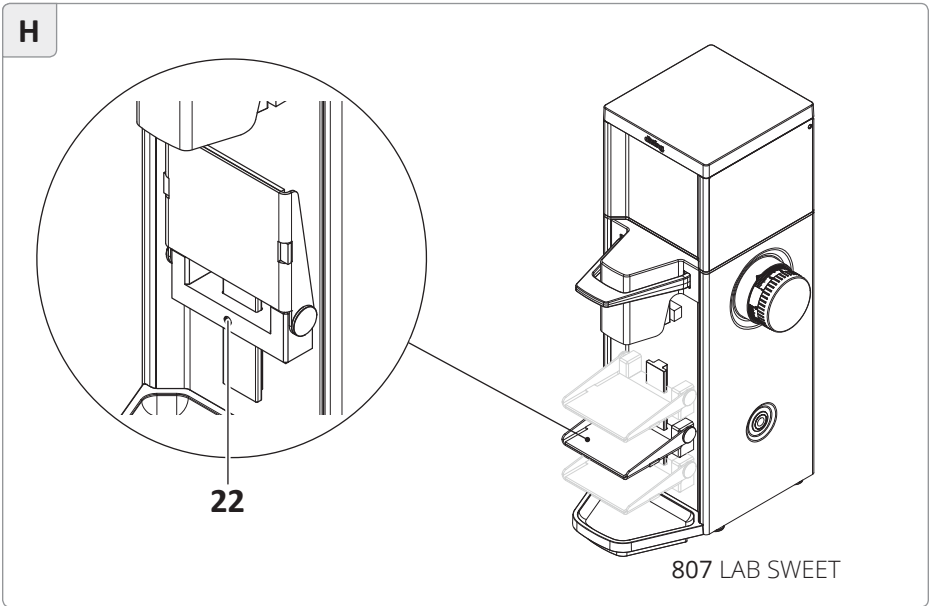

Contents

No. Name

- 1 Bean hopper (with lid)
- 2 Adjusting the degree of grinding
- 3 Start button
- 4 Collecting tray
- 5 Shaker plate
- 6 Spout
- 7 Clamping lever
- 8 Rail
- 9 Folding table
- 10 Spout guide
- 11 Filter basket holder
- 12 Fan slit
- 13 On/off switch
- 14 Release button (thermal overcurrent circuit-breaker)
- 15 Power cable (with power plug)
- 16 Flapper
- 17 Bean hopper intake
- 18 Integrated grinder opening
- 19 Locking screw for bean hopper
- 20 Lid holder
- 21 Bag holder
- 22 Folding table adjusting screw
- 23 Spout guide adjustment
- 24 Filter basket holder arm adjusting screw
- 25 Filter basket holder adjusting screw
- 26 Filter basket holder arm notches

Commercial coffee grinder

Inhalt

Overview	2	Cleaning.....	19
Package contents.....	7	Cleaning the surface underneath the grinder	20
General information	9	Cleaning the casing	20
Reading and storing the instruction manual.....	9	Cleaning the bean hopper	21
Explanation of symbols used	9	Cleaning the flapper/changing the flapper	22
Safety.....	11	Cleaning the grinding mechanism... ..	22
Intended use	11	Troubleshooting	24
Safety information	11	Technical data	28
Before first use	14	Disposal	29
Checking the grinder and scope of delivery.....	14	Disposing of the packaging.....	29
Setting up and connecting the grinder.....	14	Disposing of the grinder	29
Setting the grinding degree	16	Maintenance and service ..	29
Filling the coffee beans.....	17	EC Declaration of Conformity	31
Preparing the grounds container	17		
Starting the grinding process.....	18		
Changing the coffee variety.....	18		

General information

Reading and storing the instruction manual



Before you start using the commercial coffee grinder 807, read through this original operating manual and the safety information carefully. Only then will you be able to use the commercial coffee grinder safely and without danger. The original instruction manual is based on the standards and regulations in force in the European Union. Please also note the guidelines and laws that apply in your country. For greater clarity, the commercial coffee grinder 807 will be referred to below simply as the “grinder.” Please keep this original instruction manual safe for later questions. Please also pass this original instruction manual on to subsequent owners and users of the grinder.

Explanation of symbols used

The following symbols and signal words are used in this original instruction manual, on the grinder and on the packaging.



WARNING!

This signal word/symbol indicates a moderate risk, which, if not avoided, can lead to death or serious injury.



CAUTION!

This signal word/symbol indicates a low risk, which, if not avoided, can lead to minor or moderate injury.

NOTE!

This signal word warns of possible material damage.



This symbol provides you with useful information about operation or handling.



Declaration of Conformity (see “Declaration of Conformity” section):

Products marked with this symbol fulfill all applicable Community directives of the European Economic Area.



ETL Listed seal of approval:

Products marked with this symbol meet the requirements for electrical product safety in the USA and Canada.



Products marked with this symbol meet the required criteria of the NSF (National Sanitation Foundation) in the USA and Canada regarding cleanliness and hygiene in the food industry.



Products marked with this symbol are permitted only for use indoors.



This symbol indicates a risk of electric shock.



This symbol indicates that the grinder conforms to protection class I.

Safety

Intended use

The grinder is suitable exclusively for grinding whole roasted coffee beans. Do not use the grinder to grind other products or objects. It is intended for commercial use and may be serviced by trained personnel only. It may, however, be operated by other persons in a place where its use is supervised.

Any other use is considered unintended and can result in material damage or even personal injury. Do not make any changes to the grinder. Neither the manufacturer nor the supplier can accept liability for any injury or damage resulting from failure to comply with the safety information.

Safety information



WARNING!

Risk of electric shock!

Improper use, incorrect electrical installation or a voltage that is too high can all lead to electric shock.

- Connect the grinder only if the supply voltage of the socket complies with the information indicated on the type plate.
- Connect the grinder only to an easily accessible socket to allow you to disconnect it quickly from the power supply in the event of a malfunction.
- Do not use the grinder if you notice any visible damage or if the power cable or plug is faulty.
- If the grinder power cable is damaged, it must be replaced by the manufacturer or by qualified personnel in order to avoid hazards.
- Do not operate the grinder without a ground connection.
- Connect the grinder only to a power supply with a 16 A-slow fuse. In the event that the power connection at the installation site of the grinder is not secured in this way, have a 16 A-slow back-up fuse fitted by a qualified electrician.
- Install the grinder only in locations where its use can be supervised by trained personnel.
- Do not immerse the grinder, the power cable or the power plug

in water or any other liquids.

- Do not clean the grinder with a water jet.
- Never touch the power plug with wet hands.
- Never unplug the power plug from the wall socket by pulling on the power cable; always grip the power plug.
- Never carry the grinder by its power cable.
- Keep the grinder and power cable / power plug away from open flames and hot surfaces.
- Do not position the power cable in such a way that it could create a tripping hazard.
- Do not bend the power cable and do not place it over sharp edges.
- Use the grinder in indoor areas only. Never operate the grinder in damp areas or in the rain.
- Keep children away from the grinder.
- Make sure that children do not insert any objects into the grinder.
- If you are not currently using the grinder, if you are cleaning it, or if there is a malfunction, switch the grinder off and remove the power plug from the socket.
- Do not open the grinder casing; leave repairs to the experts. If repairs are required, contact a specialist workshop. If unauthorized repairs are carried out, the connection is not made correctly or the grinder is operated incorrectly, all liability and warranty claims are voided. Only parts that comply with the original appliance specifications may be used for repairs. This grinder contains electrical and mechanical parts that are essential for protection against potential hazards.



WARNING!

Danger for children and persons with reduced physical, sensory or mental capacities (e.g. partially disabled persons, elderly persons with limited physical and mental capacities) or a lack of experience and knowledge (e.g. older children).

- This grinder may be used by children older than eight years and by persons with reduced physical, sensory or mental disabilities or a lack of experience and knowledge if they are supervised or instructed on the safe use of the grinder and have understood the resulting dangers. Children are not permitted to play with the grinder. Cleaning and user maintenance may not be carried out by children without supervision.
 - Do not leave the grinder unsupervised when in operation.
 - Do not let children play with the packaging film. Children can become entangled in it and suffocate while playing.
 - Do not let children play with the small parts. They can be life-threatening if swallowed.
-



CAUTION!

Risk of tipping and injury!

Incorrect handling of the grinder can result in injury.

- Lay out the power cable in such a way that nobody can become entangled in it and cause the grinder to fall.
 - Place the grinder on a level and stable surface to prevent it from falling off.
-

Before first use

Checking the grinder and scope of delivery

NOTE!

Risk of damage!

Opening the packaging carelessly with a sharp knife or other pointed objects can damage the grinder.

- Proceed very carefully when opening.

1. Remove the grinder from its packaging.
2. Check that the delivery is complete (see **Fig. A, C, D, F, G, H, and I**).
3. Check for damage to the grinder or any of the individual parts.
If there is any damage, do not use the grinder. Contact your supplier (see “Maintenance and service” section).



Please note that the grinder has undergone a comprehensive functional test prior to delivery and may contain ground coffee residue.

Setting up and connecting the grinder

1. Place the grinder on a level and stable surface that does not vibrate.
2. Position the flapper **(16)** in the opening in the integrated grinder **(18)**. (**Fig. D**)
3. Position the bean hopper **(1)** on the bean hopper intake **(17)**. When positioning the bean hopper intake, ensure that the positioning pin of the bean hopper is located in the corresponding recess in the bean hopper intake.
4. Push the bean hopper down slightly into the bean hopper intake and push the bean hopper forwards to lock it into place on the grinder. (**Fig. E**)
5. Push down the locking screw **(19)** for the bean hopper and tighten it clockwise using an appropriate tool.
6. Insert the power plug **(15)** into a properly installed wall socket.

807 LAB SWEET:

Adjust the folding table **(9)** to the desired height using the adjusting screw **(22)** (see **Fig. H**).

1. To do so, fold open the table vertically upwards.
2. Loosen the adjusting screw underneath the folding table and push the table either upwards or downwards along the rail.
3. The folding table is continuously adjustable.

After adjusting to the desired height, secure the adjusting screw and fold the table downwards.



Please note that the dispersion of the grounds depends on the distance between the spout and the hopper:
The less the spacing, the less the dispersion of the coffee grounds.

807 FILTER:

Move the filter basket holder **(11)** to the desired position using the adjusting screws **(24, 25)** (see **Fig. I**).

1. Loosen the adjusting screw of the filter basket holder in the middle and push the holder **(8)** upwards or downwards along the rail.
The filter basket holder is continuously adjustable.
2. After adjusting to the desired height, secure the filter basket holder adjusting screw.
3. Loosen the adjusting screws on both sides of the arms of the filter basket holder.
4. Adjust the arms symmetrically according to the size of the filter holder and secure the adjusting screw on both sides.
5. If the filter holder has a wide rim, e.g. made of plastic, loosen the adjusting screw of the filter basket holder in the middle and pull up the holder to remove it from the top.
6. Rotate the holder 180° degrees and put it on the rail.
7. After adjusting to the desired height, secure the adjusting screw.



To prevent the filter holder slipping out and/or to reduce vibration noise, place one O-ring in each of the notches **(26)** on the filter basket holder arms.

Move the spout guide **(10)** from the bottom to the top using gentle pressure. The spout guide will lock into the defined position by means of the locking mechanism.

Operation

NOTE!

Risk of overheating!

Exceeding the maximum permissible operating cycle can cause the grinder to overheat.

- Do not exceed the maximum operating cycle (see “Technical data” section).
- Observe the recommended break when the maximum permissible operating cycle is reached (see “Technical data” section).



- The grinder has a thermal overcurrent circuit-breaker which interrupts the electric circuit of the grinder in the event of an electrical overload.

To put the grinder back into operation, first set the On/Off switch **(13)** to switch position **0** (off) and disconnect the power plug **(15)**.

Then push the release button **(14)** in.

You can now plug the power plug back into the socket and put the grinder into operation (see “Setting up and connecting the grinder” section).

- The grinder also has a motor protector, which switches off the grinder when the motor becomes too hot. As soon as the motor has cooled down, the grinder can be put back into operation (see “Troubleshooting” section).

Setting the grinding degree



- The grind adjustment's grinding degree scale **(2)** displays the desired grinding degree.
The finest setting is “1”.

1. Make sure that you have inserted the power plug **(15)** into a properly installed safety socket.
2. Turn the grind adjustment **(2)** towards “1” for fine coffee grinding and in the opposite direction for coarse coffee grinding (see **Fig. B**).

Filling the coffee beans

1. Open the lid of the bean hopper **(1)**.
2. Pour whole roasted coffee beans into the bean hopper from above.
The maximum filling quantity should be approx. 1 cm below the edge of the bean hopper.
3. Close the lid of the bean hopper.

Preparing the grounds container

Depending on the model of your grinder, prepare the right container for collecting the coffee grounds:

807:

1. Clamp a coffee bag in the bag holder **(21)** between the shaker plate **(5)** and the spout **(6)** by pulling up and holding the clamping lever **(7)**.
2. Now put a coffee bag over the spout.
3. Release the clamping lever.
The coffee bag is clamped between the clamping lever and the shaker plate.
4. Continue with the subsection “Starting the grinding process”.

807 LAB SWEET:

1. Fold the folding table **(9)** downwards, if required, and place a grounds container on it.
2. Adjust the height of the folding table to suit the grounds container, if required, using the adjusting screw **(22)** (see “Setting up and connecting the grinder” section).
3. Continue with the subsection “Starting the grinding process”.

807 FILTER:

1. Place a suitable paper filter in the filter basket.
2. Adjust the position of the filter basket holder to suit the filter basket, if necessary using the adjusting screw **(24, 25)** (see “Setting up and connecting the grinder” section).
3. Hang the basket in the filter basket holder **(11)**.
4. Continue with the subsection “Starting the grinding process”.

Starting the grinding process

1. Start the grinding process by pressing the start button **(3)**.
2. The grinding is completed as soon as the grinder is idling and no grinding noises are audible.
3. Now pump the clamping lever **(7)** several times in succession by pulling up on the clamping lever and releasing it.
Remove any grind residue sticking to the grinder.
4. Switch off the grinder by pressing the Start button.
If you do not press the Start button for more than 5 minutes, the grinder will switch off automatically.

Changing the coffee variety

1. Grind the coffee beans that remain in the grinding mechanism until the grinder runs idle.
2. Pour the new coffee beans into the bean hopper **(1)**.
3. Grind 2 grams of the new coffee variety to remove any residues from the old coffee beans and to warm up the machine.

Cleaning



CAUTION!

Risk of injury!

The grinder can fall over and cause injury when it is being moved.

- Always place the grinder on a stable surface that will not tilt.
 - Ask another person for help if the grinder is too heavy.
-

NOTE!

Risk of short-circuit!

Water penetrating the grinder can cause a short-circuit.

- Never immerse the grinder in water or any other liquids.
 - Never clean the grinder with a water jet.
 - Ensure that no water or other liquids enter the casing in any other way.
-

NOTE!

Risk of damage!

Improper handling can damage the grinder.

- Do not use any harsh cleaning agents or sharp or metallic cleaning tools such as knives, metal scouring pads or similar. These can scratch the surface.
 - Do not clean the grinder with compressed air (e.g. with a compressed-air blow gun).
 - Do not put the spill tray or the bean hopper into the dishwasher. Otherwise, the color may fade.
 - Do not lift the grinder by the bean hopper; lift only by the casing and always with both hands.
-

Cleaning the surface underneath the grinder

1. Switch off the grinder and remove the power plug **(15)** from the socket.
2. Lift the grinder by its casing with both hands and place it on another surface that is clean.
3. Use a damp cloth to clean the surface on which the grinder is used and the underside of the grinder (particularly the feet of the unit); then dry both surfaces.
They must be dry and free from oil and grease.
4. Place the grinder back onto the cleaned surface.

Cleaning the casing

1. Switch off the grinder and remove the power plug **(15)** from the socket.
2. Use a brush to clean the following parts:
 - Spout **(6)**,
 - Folding table **(9)**,
 - Spout guide **(10)**,
 - Filter basket holder **(11)**,
 - Adjusting screw Folding table **(22)**, Filter basket holder adjusting screw **(25)** and Spout guide adjustment **(23)**.
3. Wipe the casing and the collecting tray **(4)** with a damp cloth as necessary, but at least once a week.

807 LAB SWEET Cleaning the folding table:

1. Loosen the adjusting screw **(22)** underneath the folding table and pull off the folding table **(9)** downwards from the rail **(8)**.
2. Remove the anti-slip mat from the folding table.
3. Clean the folding table with a brush.
4. Clean the folding table and the anti-slip mat with a damp cloth and then dry them.
5. Clean the rail with a damp cloth and then place the folding table back onto it.
6. After adjusting to the desired height, secure the adjusting screw.
7. Put the anti-slip mat back on the folding table.

807 FILTER Cleaning the filter basket holder:

1. Loosen the adjusting screw **(25)** in the middle of the filter basket holder and pull off the filter basket holder **(11)** upwards from the rail **(8)**.
2. Clean the filter basket holder with a brush.
3. Clean the filter basket holder with a damp cloth and then dry it.
4. Clean the rail with a damp cloth and then reinsert it into the filter basket holder.
5. After adjusting to the desired height, secure the adjusting screw.
6. Push apart the spout guide arms and pull the spout guide off the spout.
7. Clean the spout guide and the spout holes with a damp cloth and then dry them.
8. To assemble, push apart the spout guide arms and place them on the spout. Make sure that the spout guide's locking pins lock in place in the spout holes.

Cleaning the bean hopper



The bean hopper **(1)** must be cleaned daily to remove any coffee oil residue, as this can have a negative effect on taste.

1. Grind the coffee beans that remain in the grinding mechanism until the grinder runs idle.
2. Use gentle pressure to loosen the bean hopper lid from the left and right lid holder **(Fig. F, 20)**.
3. Using an appropriate tool, unscrew the locking screw (see **Fig. F, 19**) for the bean hopper.
4. Push the bean hopper backwards until it reaches the stop to detach it from the grinder, and remove it from the grinder by lifting upwards.
5. Clean the inside and the outside of the bean hopper and the lid with a damp cloth and then dry them.
6. Position the bean hopper on the bean hopper intake (17). When positioning the bean hopper intake, ensure that the positioning pin of the bean hopper is located in the corresponding recess in the bean hopper intake.
7. Push the bean hopper down slightly into the bean hopper intake and push the bean hopper forwards to lock it into place on the grinder.
8. Push down the locking screw for the bean hopper and tighten it clockwise using an appropriate tool.

9. Press the lid of the bean hopper into the left and right lid holder.

Cleaning the flapper/changing the flapper



- The flapper should be cleaned every 2–5 days.
- Change the flapper when it becomes porous, deformed or very dirty.

1. Remove the bean hopper **(1)** and proceed as described in the “Cleaning the bean hopper” section, steps 1–4.
2. Remove the flapper **(16)** through the opening in the integrated grinder **(Fig. D, 18)**.
3. Clean the flapper with lukewarm water and then dry it.
Or change the flapper.
4. Position the flapper in the opening in the integrated grinder.
5. Position the bean hopper on the grinder (see “Cleaning the bean hopper” section, steps 6–8).

Cleaning the grinding mechanism



- The manufacturer recommends using the GRINDZ™ grinder cleaner. For more information about GRINDZ™, visit **www.dittingswiss.ch**.

- The grinding mechanism should be cleaned every 2–5 days.

1. Grind the coffee beans that remain in the grinding mechanism until the grinder runs idle and no coffee beans are left in the bean hopper **(1)**.
2. Use the grind adjustment **(2)** to set the coarsest possible grinding degree (see “Setting the grinding degree” section).
3. Pour the grinder cleaner into the bean hopper.
Use only the quantities indicated by the manufacturer of the grinder cleaner you are using.
4. Place a collecting container underneath the spout **(6)** to collect the grinder cleaner.
5. Press the start button **(3)** to start grinding the grinder cleaner.
The grinding of the grinder cleaner is completed as soon as the grinder begins to idle.
6. Switch off the grinder by pressing the start button once the grinding cleaner has been completely ground.
7. Wipe down the bean hopper with a dry, lint-free cloth.
8. Remove any leftover cleaning particles by grinding the same amount of

coffee beans as the grinder cleaner used. Set the grind to the desired setting during the grinding process.

9. Dispose of the ground grinder cleaner and the ground coffee beans in commercial/domestic waste.

Troubleshooting

Problem	Cause	Remedy
The grinder is not grinding.	• The power plug is not plugged into a socket.	→ Insert the power plug into a properly installed wall socket.
	• The bean hopper is not inserted.	→ Insert the bean hopper (see “Setting up the grinder and inserting the bean hopper” section).
	• The thermal overcurrent circuit-breaker has been triggered.	→ Check whether the circuit breaker release button has popped out. Push it back in if necessary. If the circuit-breaker repeatedly pops out, contact your supplier (see “Maintenance and service” section).
	• The electric fuse has tripped.	→ Check the electric fuse. Return it to its original state or replace it. Check whether other loads are connected to this fuse and if so, pull their plugs. If the fuse trips repeatedly, contact your supplier (see “Maintenance and service” section).



Problem	Cause	Remedy
The grinder is humming but not grinding.	• The spout is clogged.	→ Change the grinding degree setting to the “coarsest grinding degree” and start the grinding process. The grinder will clear itself. Then, during the operation, set the grinding degree to the desired setting. → Pump the grinder’s clamping lever several times to clear the clog.
	• The grinding degree is too fine.	→ Change the grinding degree setting to the “coarsest grinding degree” and start the grinding process. The grinder will clear itself. Then, during the operation, set the grinding degree to the desired setting. Should the problem persist, contact your supplier (see “Maintenance and service” section).
	• A foreign object is in the grinding mechanism.	→ Clean the grinding mechanism as described in the “Cleaning” section and remove the foreign object at the same time. If the foreign object cannot be removed, contact your supplier (see “Maintenance and service” section).

Problem	Cause	Remedy
The grinder is not grinding or buzzing.	• The power plug is not plugged into a socket. • The bean hopper is not inserted. • The thermal overcurrent circuit-breaker has been triggered. • The electric fuse has tripped.	→ Insert the power plug into a properly installed wall socket. → Insert the bean hopper (see “Setting up the grinder and inserting the bean hopper” section). → Check whether the overcurrent circuit-breaker’s release button has popped out. Push it back in if necessary. If the overcurrent circuit-breaker repeatedly pops out, contact your supplier (see “Maintenance and service” section). → Check the electric fuse. Return it to its original state or replace it. Check whether other loads are connected to this fuse and if so, pull their plugs. If the back-up fuse trips repeatedly, contact your supplier (see “Maintenance and service” section).
The grinder’s dispensing accuracy is decreasing.	• The flapper is dirty. • The flapper is faulty.	→ Clean the flapper (see “Cleaning the flapper” section). → Change the flapper (see “Changing the flapper” section).
The grinder is not grinding finely enough.	• The grinding discs are worn out. • The grinding discs are not aligned correctly.	→ Contact your supplier (see “Maintenance and service” section). → Contact your supplier (see “Maintenance and service” section).

Problem	Cause	Remedy
The grinder does not grind continuously or the grinding process stops intermittently.	• The grinder stops automatically after 5 min. • The start button is faulty.	→ Restart the grinding process (see “Starting the grinding process” section). → Contact your supplier (see “Maintenance and service” section).
The bean hopper cannot be put in place.	• There are beans in the bean hopper intake.	→ Remove the beans from the bean hopper intake.
The bean hopper cannot be closed.	• There are beans in the bean hopper lid.	→ Remove the beans from the bean hopper lid.
The folding table cannot be put onto the rail.	• The adjusting screw is screwed in too far.	→ Unscrew the adjusting screw until it is screwed flush in the folding table holder.
The filter basket holder cannot be put onto the rails.	• The adjusting screw is screwed in too far.	→ Unscrew the adjusting screw until it is screwed flush in the filter basket holder.

Technical data

Model:	807, 807 LAB SWEET, 807 FILTER
Voltage / frequency/nominal value:	
807, 807 FILTER	100 V 50/60 Hz; 550 W 110–127 V 60 Hz; 570 W 220–240 V 50/60 Hz; 500 W
807 LAB SWEET	100 V 50/60 Hz; 800 W 110–127 V 60 Hz, 700 W 220–240 V 50/60 Hz; 700 W
Protection type:	IPX1
Protection class:	I 
Back-up fuse:	16 A-slow
Idle speed:	
50 Hz:	1350 rpm
60 Hz:	1650 rpm
Sound emission values:	
Idle:	55 dB
Grinding:	78.8 dB
Grinding capacity:	450 g/min*
Max. grinding time:	180 seconds on and 300 seconds off
Max. daily output:	48 kg per working day (8 h)
Dimensions (W × D × H):	215 × 285 × 536 mm
Weight (net):	
807	17.3 kg
807 LAB SWEET	17.3 kg
807 FILTER	17.8 kg
Max. funnel filling quantity:	0.51 kg

*depending on the coffee beans and the selected grinding degree.

Disposal

Disposing of the packaging



Dispose of the packaging by properly sorting the recyclable materials. Dispose of cardboard as waste paper and film as recyclable materials.

Disposing of the grinder



Used appliances may not be thrown into commercial/domestic waste!

If you can no longer use your grinder, you are **legally obliged** as a consumer to dispose of your old appliance separately from commercial/domestic waste, e.g. at a collection point in your community/district. This ensures that old appliances are recycled correctly and reduces harmful effects on the environment. For this reason, electrical appliances are labelled with the symbol opposite.

Maintenance and service

If service or maintenance is required, contact an authorized customer service center for Ditting products. Customer Service can answer your questions about repairing and maintaining your product and spare parts.

Exploded diagrams and information about spare parts are also available at:

www.dittingswiss.ch

www.dittingswiss.ch/retailers



Our Application Consulting team will be happy to help you with questions concerning our products and their accessories.

 
For all inquiries and spare parts orders, please be sure to include the article and serial number as stated on the grinder type plate.





1 | EG KONFORMITÄTSERKLÄRUNG EU DECLARATION OF CONFORMITY

DE | EN

- 2| Diese EG-Konformitätserklärung wurde in alleiniger Verantwortung von Hemro International AG ausgestellt.
This declaration of conformity is issued under the sole responsibility of Hemro International AG.
- 3| Hersteller: Hemro International AG
Manufacturer: Länggenstrasse 34
 CH-8184 Bachenbülach, Schweiz
- 4| Produktbezeichnung: 5| Kaffeemühle
Product designation: **Coffee grinder**
- 6| Typenbezeichnung: 807, 807 F, 807 LS
Type:
- 7| Der oben beschriebene Gegenstand der Erklärung erfüllt folgende Richtlinien, Verordnungen und Normen.
The object of the declaration described above is in conformity with the following directives, regulations and standards.
- 8| Nummer, Beschreibung; 8a| 2006/42/EG Maschinenrichtlinie
Number, Description: **2006/42/EC Machinery Directive**
 8b| 2014/35/EG Niederspannungsrichtlinie
2014/35/EU Low Voltage Directive
 8c| 2014/30/EG EMV Richtlinie
2014/30/EU Directive relating to electromagnetic compatibility
 8e| 2011/65/EG RoHS-Richtlinie
2011/65/EU RoHS-Directive
 8f| 2012/19/EG WEEE-Richtlinie
2012/19/EU WEEE-Directive
 8g| 1907/2006/EG REACH-Verordnung
1907/2006/EU REACH-Regulation
 8h| 1935/2004/EG Material mit Lebensmittelkontakt
1935/2004/EC Materials in contact with food
 8i| 2023/2006/EG Herstellungspraxis für Materialien mit Lebensmittelkontakt
2023/2006/EC Good Manufacturing Practice (GMP)
- 9| Angewandte harmonisierte Europäische Norm:
Applied harmonised European Standard: EN 60335-1:2012 + A11:2014 + A13:2017
 EN 60335-2-64:2000 + A1:2002
 EN 62233:2008
 EN 55014-1:2017
 EN 55014-2:2015
 EN 61000-3-2:2014
 EN 61000-3-3:2013
- 10| CE-Beauftragter für die technischen Unterlagen:
CE-Representative for Technical Documents: Metin Makinaci Hemro International AG
 Länggenstrasse 34
 CH-8184 Bachenbülach, Schweiz
- 11| Ort, Datum:
Place, Date: Bachenbülach, 2019-07-08
- 12| Rechtsverbindliche Unterschrift:
Legal signature:
- 13| 
 Ilan Maimon
Managing Director
 Innovation & Technology
- 14| 
 Gilbert Zünd
Managing Director
 Operations

307190708MMA-001 01



FI	FR	HR	HU	IT	LT	LV
1	Ei – valmistusasteiden suojakuitut	EZ ligava o salidnost	Ert a megfigyelési nyilatkozat	Dichiarazione di conformità CE	E3 – Atitinkamo sertifikatas	EK – Atbilstības deklarācija
2	Tiimin EY- vaatimus emuloidisuojuksuokuitusen on yleistuomassa vastustalla saatut Henno International AG	Ova je EZ ligava o salidnost i sadama podiskljucom odgovornomocu društva Henno International AG.	Ert a megfigyelési nyilatkozatot Henno International AG vállalat nével adja ki.	La presente dichiarazione di conformità CE è stata rilasciata da Henno International AG sotto la propria esclusiva responsabilità.	Už loio EB atitiktis deklarācija izdota līdzdarīma ya atakaliga tik Henro Internacional AG.	S E K atbilstības deklarācija izdota vienīgi un Henno International AG atbildību.
3	Vaiņatija	Proizvođač	Termék megnevezése:	Prodotore:	Gamintojas:	Rādītājs:
4	Tuotteen nimi:	Oznaka proizvođa:	Termék megnevezése:	Designazione del prodotto:	Kamavald:	Produkta nosaukums:
5	Kāhempjā	Mākslā za hovu	Kétfoldi Ad	MachinafRf	Kamavald:	Kāhija: dāimāhijos
6	Typogimerkats:	Tipiska ozaka:	Tipus:	Model:	Tipa aprāhmas:	Tipa nosaukums:
7	Via laustu kurotu laustu enstaut društva, autdrušt ja standarta.	Gore opadati grndimē laustu udrošlvoja sjiēdēm dēktuama, uredbama i norma.	A nyilatkozatban felt ismertett tutaj megfigyelési követelz iránlyelveknek, mindleteknek és szabványoknak.	L'oggetto della dichiarazione opera mezionato soddisfa i regolamenti, le direttive e le norme segenti.	Pirmais aprāhmas deklarācija nurdzijas garmyja atitiska tolu liardzijas dēktuvas, reglamentus ir standartus.	Aprāhmas deklarācija deklarācija piedoms i atbilst šādm dēktuvm, regulām un standartem.
8	Numero: kuras	Broj: Opk	Szám: Lelőás	Numero o denominazione	Numeris: aprāhmas	Numurs: aprāhks
8a	Penjāmāhiedrektīvi	2006/42/CE Directive machines	2006/42/CE Direktiva o strojevima	2006/42/CE Directive machines	2006/42/EB mašīnu direktīva	2006/42/EK Mašīnu direktīvas
8b	Directive Base tension	Directive Base tension	Direktiva o niskon naponu	Direktiva sulla bassa tensione	Zemoties jampas direktīva	Zemoties jampas direktīva
8c	2014/30/EY EMC-direktīvi	2014/30/CE Directive relative à la compatibilité électromagnétique	2014/30/EK Elektromagneses összeeférfelölőgő sző irányely	2014/30/CE Directive sulla compatibilità elettromagnetica	2014/30/EB EMV nuoroda	2014/30/EK EMS direktīva
8e	2011/65/EY Direktive tiertujen vaarilisten aneiden käytön elektronikkalaituissa (RoHS)	2011/65/EU Directive o ograničenju uporabe određenih opasnih tvari u električnim i elektroničkim aparaturama (RoHS)	2011/65/EK Vesélyes anyagok korlátozása	2011/65/UE Directive RoHS	2011/65/EB Pavojaigi medijaigi naudojimo apribojimo direktīva	2011/65/EK Direktīva par dālu bīstamu vielu izmantošanas ierīkšu un aparātu, kas satur elektroniskās iedatās.
8f	WEEE-direktīvi	Directive WEEE	Direktiva o atpodošu (elektroniču elektronisko) opremi (WEEE)	Direktiva WEEE	EE atitiku direktīva	EPA direktīva
8g	REACH-aktus	Règlement REACH	Úrvedba o registrácii, evaluácii, autorizácii i ograničavanju kemikálija (REACH)	Règlement REACH	REACH reglamentas	REACH regula
8h	Eiņarviekontaktimateriāli	Matériaux entrant en contact avec les produits chimiques	Materialu u dodnu i hramom	Elemliszorrel érintékö anyagok	Mediagos, skitos liests mastu	Matēriāli, kas nosak sakarē ar materiālu, kas nosak sakarē ar
8i	Eiņarviekontaktimateriāli vairākskaitatāro	Matériaux entrant en contact avec des énféris alimentaires	Prisagadātāja pakāpa za materiālu u dodnu i hramom	Elemliszorrel érintékö anyagok gárditai gárditai	Medijaigi, skitos liests za mašu, garmyja pakāpa	Pakāpa garmyja materiāliem, kas nosak sakarē a pārtiku.
9	Kyrtijty phormokastistu Europapalvien standarti:	Normes européennes harmonisées appliquées:	Primijojuma uolādama europka norma:	Alkalmazott harmonizált Európai Szabvány:	Takoms nvdarvija Europos standarta:	Piemērotie sakarotie Europas standarta:
10	Tekstisten asakigigen CE-edurāja:	Délégué CE à la documentation technique:	Predstavak CE za tehniču dokumentaciju:	Responsable CE per la documentazione tecnica:	CE atbilstoši tehnišajai dokumentācijai:	CE pārtiktis tehnišajai dokumentācijai:
11	Paika, āka:	Lieu, Date:	Mjeto datum:	Lugar, día:	Vietā, datā:	Vietā, datum:
12	Oksidāhiesi šova akšipohus:	Signature légal:	Pavro aborvazāju pcpis:	Firma dell' rappresentante legale:	Oficiālais parāhks:	Juridiskās atbildības parāhks:
13	Inovatoio-ja tehnoloģijapaja	Directeur général Innovation et technologie	tvarini direktor Odiēla za inovāciju i tehnoloģiju	Managing Director Innovation & Technology	Naupjūv dēlgimo i tehnoloģiju vykdomas direktorius	Managing Director Innovation & Technology
14	Tomina paja	Directeur général Operations	tvarini direktor Operatīvās odiēla	Managing Director Operations	Vykdomas direktorius	Managing Director Operations

	NL	NO	PL	PT	RO	SK	SLO	SE
1	EU – conformiteitsverklaring	EF-samsvarserklæring	Deklaracja zgodności z przepisami UE	Declaração de Conformidade CE	Declarație de conformitate CE	Vyhlasenie o zhode ES	ES – Izjava o skladnosti	SE – konformitetsdeklaration
2	Dette konformitetserklæring bekræfter, at produktet er i overensstemmelse med de tekniske specifikationer i den afstemte standard fra Hemro International AG.	Dette EU-samsvarserklæring bekræfter, at produktet er i overensstemmelse med de tekniske specifikationer i den afstemte standard fra Hemro International AG.	Niniejsza deklaracja zgodności potwierdza, że produkt jest zgodny z wymaganiami technicznymi określonymi w normie międzynarodowej Hemro International AG.	Esta declaração de conformidade atesta a conformidade do produto com a regulamentação e a avaliação de Hemro International AG.	Aspectul declarat de conformitate este în conformitate cu cerințele, reglementările și normele armonizate ale Hemro International AG.	Toto ES vyhlásenie o zhode bolo vypracované na základe technických špecifikácií, ktoré sú v súlade so vzájomne dohodnutou medzinárodnou normou Hemro International AG.	To izjava ES o skladnosti je v skladu s vzájomne dohodnutou medzinárodnou normou Hemro International AG.	Den här EG-förklaring om konformitet är utarbetad på grundval av tekniska specifikationer som överensstämmer med den gemensamt utarbetade internationella AG-standarder.
3	Fabrikant:	Producent:	Producent:	Fabricante:	Producător:	Výrobca:	Proizvajalec:	Tillverkare:
4	Productaanduiding:	Produktbeteikning:	Nazwa produktu:	Designação do produto:	Denumirea produsului:	Názov produktu:	Oznaka izdelka:	Produkttäckning:
5	Koffiemolen	Kaffekvern	Młynek do kawy	Moinho de café	Râlniță de cafea	Mlynček na kávu	Mlinček za kavo	Kaffekvarn
6	Type-aanduiding:	Typebeteikning:	Type:	Modelo:	Tipul:	Typové označenie:	Tipna oznaka:	Typbeteckning:
7	Het hierboven beschreven ontwerp en de verklaring omtrent aanvaardingsrichtlijn, worden aanvaard als richtlijn, op grond van een overeenkomst.	Overfor beskrevne gjensstand erfaringer oppfyller følgende retningdirigert, foranfarer og avtales vedtatt.	Wyśi opisany przedmiot deklaracji spełnia następujące wymagania co do konstrukcji, wykonania i normy.	O objeto da declaração de conformidade está em conformidade com as direções, regulamentações e normas aplicadas.	Objektul descris mai sus în declarație este în conformitate cu directivele, reglementările și normele armonizate.	Výše opísaný predmet izjave vyhlásenia spĺňa nasledujúce smernice, nariadenia a normy.	Zgoraj opisan predmet izjave izpolnjeva sledeče direktive, uredbine in standarde.	För enklart förklarar ovan motbaserat följande direktiv, förordningar och standarder.
8	Nummer: Beschrijving	Nummer: Beskrivelse	Numeri: Opis	Numeros: Descripción	Număr: Descriere	Číslo: popis	Številka: Opis	Nummer: beskrivning
8a	2006/42/EG Machineryrichtlijn	2006/42/EF Maskindirektivet	Dyrektywa o maszynach	2006/42/CE Directiva de Máquinas	2006/42/CE Directiva privind mașinile	2006/42/ES Smernica o strojov	2006/42/ES Direktiva o strojih	2006/42/EG Maskindirektiv
8b	Laagspanningsrichtlijn	Lavspenningsdirektivet	Dyrektywa o niskiego napięcia	Directiva de Bajas Tensiones	Directivă privind tensiunea joasă	Smernica o nízkom napätí	Direktiva o nízi napetosti	Lågspänningsdirektiv
8c	2014/53/UE EMC-richtlijn	2014/53/UE EMC-direktiv	2014/53/UE Dyrektywa EMV	2014/53/CE Directiva de Compatibilitate Electromagnética	Directivă privind compatibilitatea electromagnetică	2014/53/ES Smernica o elektromagnetni sili	2014/53/ES Direktiva o elektromagnetni sili	2014/53/UE EMC-direktiv
8e	2011/65/UE RoHS-richtlijn	2011/65/UE RoHS-direktiv	2011/65/UE Dyrektywa RoHS	2011/65/CE Directiva de restricción de sustancias peligrosas	Directivă de restricție de substanțe periculoase	2011/65/ES Smernica o elektrických a elektronických zariadeniach	2011/65/ES Direktiva RoHS	2011/65/UE RoHS-direktiv
8f	WEEE-richtlijn	WEEE-direktiv	Dyrektywa WEEE	Directiva REE	Directivă REEE	Smernica o odpadu z elektrických zariadení	Direktiva o odpadní elektrické zariadení	WEEE-direktiv
8g	REACH-verordening	Kemikalieringsdirektiv	Rozporozdzenie REACH	Regulamentul REACH	Regulamentul REACH	Nariadenie REACH	Uredba REACH	Reach-förordning
8h	Materiël dat met levensmiddelen in aanraking komt	Materiæl med matvarekontakt	Materiał przeznaczony do kontaktu z produktami spożywczymi	Materiais que entram em contacto com alimentos	Materiale care intră în contact cu produse alimentare	Materiál s kontaktem s potravinami	Materiál v stiku s živilj	Materiæl med livsmiddelkontakt
8i	Gedetailleerde informatie voor de fabrikant over de levensmiddelen in aanraking komen	Prodüksiyonraklamı for material med matvarekontakt	Dobra praktyka wywarania z żywnością	Bona practică de fabricare de alimente	Practică de fabricare pentru contactul cu produse alimentare	Výroba práva pri materiálnoch s kontaktom s potravinami	Proizvodna praksa za materiale v stiku s živilj	God tillverkningsangivelse for material med livsmiddelkontakt
9	Toegestelde geharmoniseerde Europese norm:	Anvænt harmoniseret europæisk standard:	Zastosowana zharmonizowana Norma Europejska:	Norma europeană armonizată aplicată:	Normă europeană armonizată aplicată:	Applikovaná harmonizovaná európska norma:	Tillämpad harmoniserad europeisk norm:	Tillämpad harmoniserad europeisk norm:
10	CE-beveiligde voor de technische documenten:	CE-fulmekting for teknisk dokumentasjon:	Pobezpieczony CE dla dokumentacji technicznej:	Responsabil CE pelos documentos técnicos:	Responsabil CE pentru documentele tehnice:	Poverenie CE pre tehničné podklady:	Predstavnik CE za tehnične dokumente:	CE-representant for de tekniska dokumenten:
11	Plaats, datum:	Sted, dato:	Miejscowość, data:	Localidade, Data:	Localitate, Data:	Miesto, dátum:	Kraj, datum:	Ort, datum:
12	Betragtigende handelskennij:	Juridisk bindende underskrift:	Podpis włączy prawne:	Asinatura legal:	Semnatura legală:	Právoplatný podpis:	Právoplatný podpis:	Juridiskt bindande underskrift:
13	Managing Director Innovation & Technology	Managing Director Innovation & Technology	Dyrektor zarządzający ds. innowacji i technologii	Managing Director Innovation & Technology	Director Inovatie si Tehnologie	Managing Director Innovation & Technology	Verstansandirektor innovation & teknologi	Verstansandirektor innovation & teknologi
14	Managing Director Operations	Managing Director Operations	Dyrektor zarządzający ds. operacji	Managing Director Operations	Director Operatiuni	Managing Director Operations	Verstansandirektor poslovanja	Verstansandirektor poslovanja

HEMRO

Global Coffee Grinding Solutions

Hemro International AG

Länggenstrasse 34 | 8184 Bachenbülach, Switzerland

T: +41 44 864 18 00 | **F:** +41 44 864 18 01

info@hemrogroup.com | www.hemrogroup.com