



D21

User Manual

Quick Operation Guide for
Public Network Handheld Device


Push To Talk Over Cellular Radio

Push To Talk Over Cellular Radio

1. Packing List

No.	Contents	No.	Contents
1	Host	4	Power Adapter
2	Battery	5	Back Clip
3	Charging Cable	6	Lanyard

2. Get to know the device

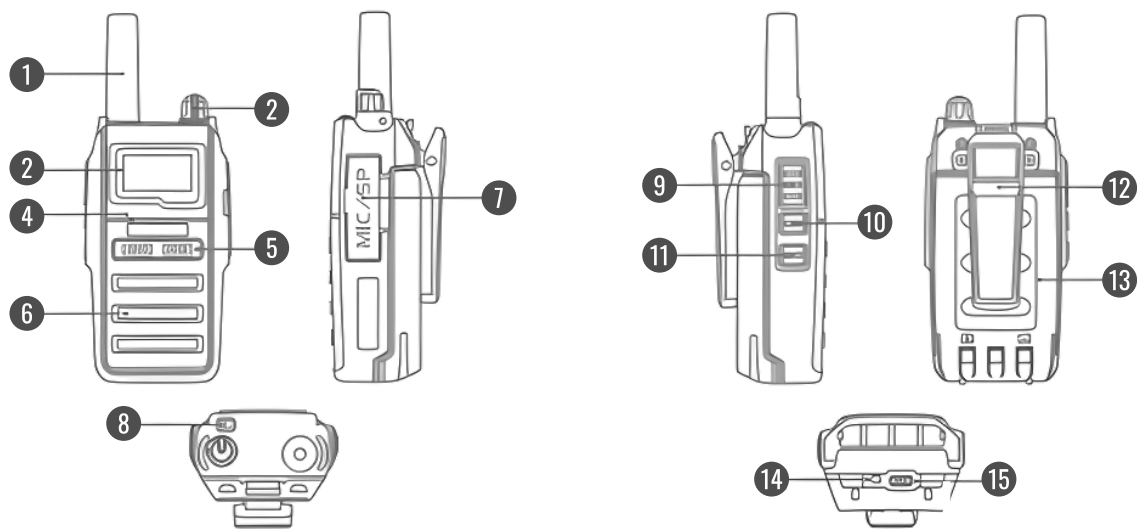

No.	Contents	No.	Contents
①	Antenna	②	Power/Volume knob
③	Display	④	Microphone
⑤	Select Button	⑥	Speaker
⑦	Accessory Interface	⑧	Indicator
⑨	PTT Button	⑩	Menu/OK Button
⑪	Back Button	⑫	Back Clip
⑬	Battery	⑭	Charging Indicator
⑮	Micro-USB Charging Port		

3.Products



Button Functions	
PTT Button	Press it to start speaking and initiate the call
	Release it to stop speaking and end the call
Menu/OK Button	Long press it to enter the menu
	In the menu, press it briefly to enter the next level of the menu.
Back Button	In the main menu, press it briefly to return to the standby screen.
	In the sub-menu, press it briefly to return to the previous menu.
Power/ Volume knob	Power On/Off the device
	Increase/Decrease Volume
Select Button	In the menu, press it briefly to switch between menu options.

Note: For key icons, please refer to the actual display.

4. Basic Operations

Power On/Off

(1) Rotate the "Power/Volume Knob" clockwise until you hear a "click" sound, the screen will light up and the power-on screen will appear, indicating the device is powered on.

(2) Rotate the "Power/Volume Knob" counterclockwise until you hear a "click" sound, the shutdown screen will appear and the screen will turn off, indicating the device is powered off.

Volume Adjustment

(1) Rotate the "Power/Volume Knob" clockwise to increase the volume.

(2) Rotate the "Power/Volume Knob" counterclockwise to decrease the volume.

Function Operation

This device offers a range of functions, which are organized in the function menu. The specific operations are as follows:

- (1) Long press the "Menu/OK Button" to enter the main menu.
- (2) Press the "Select Button" to choose the desired option.
- (3) Press the "Menu/OK Button" briefly to enter the selected function.
- (4) If the selected function has a sub-menu, repeat steps (2) and (3) to choose the required sub-function.

(5) To return to the previous menu, press the "Back Button" to exit the current menu.

Charging Operation

(1) Please turn off the device before charging.

(2) Insert the USB plug of the charging cable into the USB port of the power adapter.

(3) Insert the Micro-USB plug of the charging cable into the Micro-USB port located at the bottom of the battery.

(4) Plug the AC plug of the power adapter into an AC power outlet.

(5) When the charging indicator light on the battery is red, it indicates charging is in progress. When the indicator light is green, it indicates the battery is fully charged.

(6) If you notice a significant decrease in battery life after correct charging, it means the battery has reached the end of its lifespan. Please contact your local dealer to purchase a new battery.

Installing the Optional External Headset/Microphone

(1) Open the "Accessory Port" cover.

(2) Insert the headset/microphone into the "Accessory Port"

5.Safety Precautions

Please read the following brief rules; failure to comply may result in danger or legal violations.

- The use of this radio walkie-talkie must comply with local government regulations.
- Before entering flammable or explosive environments, turn off the radio walkie-talkie.
- Do not replace the battery or charge the battery in flammable or explosive environments.
- Before approaching blasting areas and areas with detonators, turn off the radio walkie-talkie.
- Do not use the radio walkie-talkie with a damaged antenna, as contact with damaged antenna parts may cause minor burns to the skin.
- Repairs to the radio walkie-talkie should only be performed by qualified technicians. Do not disassemble the device yourself.
- To avoid electromagnetic interference and compatibility issues, turn off the radio walkie-talkie in areas marked with "No Radio Transmitting Devices," such as hospitals and other medical facilities.
- When traveling by airplane, turn off the radio walkie-talkie when requested by the crew.
- In vehicles with airbags, do not place the radio walkie-talkie in areas that may be involved when the airbags deploy.
- Do not expose the radio walkie-talkie to direct sunlight for long

periods or place it near heat sources.

- When the portable radio walkie-talkie is transmitting, keep it in a vertical position and speak near the microphone, with the antenna at least 2.5 cm away from the body.
- Only use batteries, power adapters, and other accessories produced or provided by the company.

6. Maintenance and Cleaning

To ensure the product performs well and to extend its lifespan, please familiarize yourself with the following instructions for better daily maintenance and cleaning:

- Do not pierce or scratch the product with hard objects.
- Do not store the product in environments that contain corrosive substances that could damage the electronic circuits.
- When carrying or using the product, avoid pulling on the headset cable.
- When not using accessories, make sure to cover the accessory port.



Before cleaning, please power off the device and remove the battery.

- Regularly use a clean, dry, lint-free cloth or brush to remove dust from the surface of the product and the charging contacts.
- If the buttons or casing of the product become dirty, use a neutral detergent and non-woven fabric to clean them. Do not use deter-

gents, alcohol, sprays, or petroleum-based chemicals, as they may damage the product's surface.

- After cleaning, make sure the product is completely dry before use. Otherwise, do not use it.

FCC Compliance Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

RF Exposure Information

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each device are performed in positions and locations as required by the FCC. For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal.

For face-up, 25mm was used for test, this equipment should be installed and operated with minimum distance 25mm.)

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

WARRANTY CARD

Type: _____	Purchase Date: _____
SN: _____	IMEI: _____
Sale: _____	Phone Number: _____
Customer: _____	Phone Number: _____
Address: _____	

Warranty Instructions

- 1.This warranty card serves as the warranty certificate and will not be reissued if lost.
- 2.The card must be stamped and dated by the point of sale to be valid.
- 3.Alterations to this card are not allowed. Please ensure that the warranty card's SN and IMEI match the machine number of the purchased device; otherwise, it will be deemed invalid.
- 4.The warranty period is 1 year. Consumables such as back clips, chargers, earphones, and data cables are not covered under warranty.
- 5.Users can contact the point of purchase for repair services.

Maintenance Record

Maintenance Date	Fault Description/Reason /Handling Result	Verification Date	Maintenance Person



Easytalk Push-to-Talk over Cellular Radio