

TimeVocalist

Speaking Time, Simplifying Life!

User Manual ^{v2.0}

Smart Alarm Sound Machin

cs@timevocalist.com Model: Sono



Notes: Please review this manual and keep it safe so that you can refer to it at any time before operation.

Getting Started

Your device comes preloaded with 24 sounds, multilingual time announcements, sleep timers, 100 volume levels, and a rechargeable battery—ready to use right out of the box. For full access to our complete sound library, custom sound mixing, multiple alarms, hourly chime, and advanced scheduling, download our companion app – No registration or subscription required.

What's Included

- TimeVocalist Sono main device x 1
- USB charging cable x 1 (adaptor not included)
- Quick start guide x 1

Initial Setup

1. Fully charge the device before first use
2. Press the Power Button to turn on
3. Download our companion app for easy setup, or follow the "Control on Device" instructions below

App Control

Requirements:

- iOS: Version 11.0 or above
- Android: Version 9.0 or above

Download:

- Available on the App Store (iOS) or Google Play (Android)

"TimeVocalist"



GET IT ON

Google Play

"TimeVocalist"



Download on the

App Store

Connecting to the App

Add Device page



Download the companion app and follow the in-app instructions for pairing.

The app provides:

- Access to 100+ sounds and 15 themes
- Customizable Soundscapes (blend up to 10 sounds)
- Multiple custom alarms
- Sleep routine scheduling
- Remote control functionality
- Automatic time synchronization (including DST)

Note: The app cannot connect when the device is in standby mode.



 
Theme Toggle – Switch between normal and night mode for easier viewing.



Help and Feedback – Contact us via email or view FAQs about product features and operation.

Add Device – Search for and connect a new machine.

Main sounds page

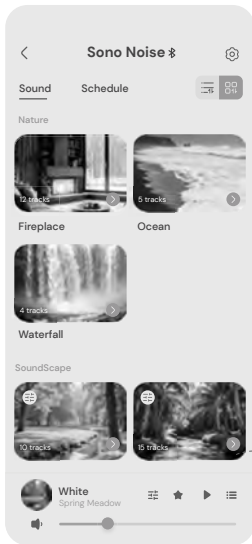

Apply default local language?

CANCEL

 
OK

Local Settings – Confirm default local settings; you can change these anytime in Setup.

Bluetooth connection status :  A red icon means the device is disconnected. Tap it to reconnect manually. If reconnection fails, make sure the device is on and nearby, or restart the app.

 **Layout Button** – toggle alternative page layouts.

Sound Tile – Tap to start a sound, or tap < > to see more sound options.

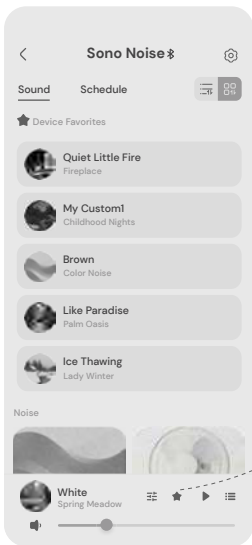

Device Favorites

Tap ★ to save your favorite tracks to the device, enabling quick- access switching via physical buttons.

 


Timer, favorites, and custom sounds

Info Bar – Tap to set a sleep timer ⓘ or add the current sound to Favorites ★ (up to 10).

Customizable Sound – For sounds with 三三三, adjust up to 10 elements to create your own mix.


Restore/Save – Use ↺ to go back to the original sound, or ✓ to store your custom version.

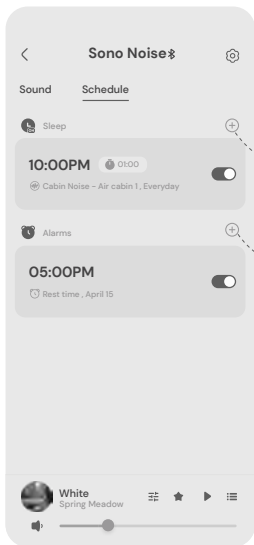

Sleep routine and alarms

Sleep Routine –Start and stop sounds automatically for a regular sleep schedule.

 Alarms –Manage multiple alarms with variable schedules and ringtones.

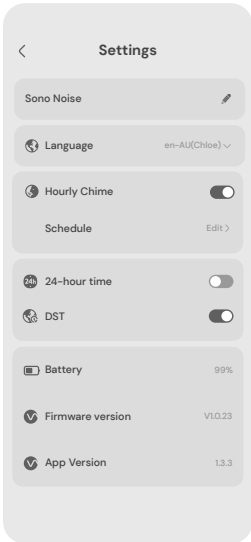

Device settings

Device Name: Give your machine a unique name

Language: Choose the language used for time and date announcements.

Hourly Chime: Turn on hourly time announcements and customize the period.

 
Time Format: Toggle between 12/24-hour format (default: 12-hour)

Daylight Saving Time: Automatically activated when available in your country; can be manually disabled

Battery Level: Check the current battery status of your device.

Firmware Version: Check regularly for updates to ensure stable performance

Control on Device

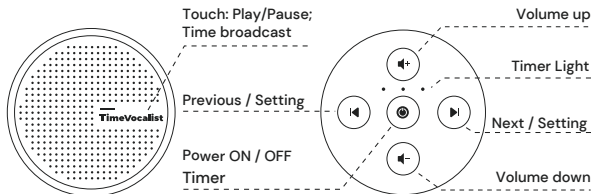

Playing Soundscape

Turn On/Off: Tap the top touch sensor to start playback. Tap again to turn off.

Adjust Volume: Short press or to adjust playback volume.

Switch Sounds: While playing, short press or to cycle through different sounds.

Sleep Timer

Short press the during playback to set a sleep timer (30/60/90 minutes).

The green indicator light will illuminate when active. Press again to cancel.

Time Announcement

Current Time: Long press the Touch Button to hear the current time.

Date: Long press the Touch Button again to hear today's date.

Standby Mode

Long press the Power Button  until the blue indicator light flashes to enter standby mode.

Note: In standby mode, alarms are suspended and the app cannot connect. Press the Power Button  to wake the device.

Time and Alarm Setup

Tip: During setup, press the  at any time to save, or wait 5 seconds for automatic saving.

Entering Setup Mode

Long press  or  to enter setup mode. Follow the voice prompts to complete each setting.

Language Selection

1. When you hear "Language Setting," use + or - to scroll through available languages
2. Press  to confirm and proceed to voice settings

Voice Settings

1. Use + or - to select your preferred accent and voice type (male/female)
2. Press  to confirm and proceed to time settings

Time and Date Setup

Follow these steps to set the current time and date:

- **Hours:** Use or to adjust, then press
- **Minutes:** Use or to adjust, then press
- **Year:** Use or to adjust, then press
- **Month:** Use or to adjust, then press
- **Day:** Use or to adjust, then press

Alarm and Ringtone Setup

After completing time settings, set up your alarm (optional):

1. Use or to adjust alarm hours, then press
2. Use or to adjust alarm minutes, then press
3. Use or to select your alarm ringtone
4. Press the to confirm, or wait 5 seconds for automatic confirmation

Note: Only one alarm can be set directly on the device. Set multiple alarms via the app.

Alarm Management

Enable/Disable Alarms

Press and simultaneously to toggle alarms on or off.

Important: Turning off the device alarm will also suspend all app-based alarms. Re-enable to activate all alarms.

When the Alarm Sounds

- Press any button to stop the alarm immediately
- If unanswered, the alarm stops automatically after 5 minutes

Battery and Charging

Low Battery Alert

When battery drops below 25%:

- Soundscape playback is disabled
- Alarms will not function
- Scheduled playback will not work
- A low battery reminder is announced before the time announcement

Action: Charge the device as soon as possible.

Charging Instructions

1. Connect the USB cable to the device and a 5V  1A power adapter
2. Red light indicates charging in progress
3. Green light indicates charging complete
4. Charge every 3 months during extended periods of non-use to maintain battery health

Troubleshooting

Reset Function

If you experience operational issues, try charging the device to perform a reset.

Cannot Connect to App

Ensure the device is not in standby mode.

Technical Specifications

- **Input:** DC 5V  1A
- **Battery:** 2000mAh lithium battery
- **Bluetooth:** Bluetooth 5.0
- **Speaker:** 5W output
- **Volume Levels:** 100 adjustable levels

Safety and Maintenance

- Fully charge before first use
- Do not use in high temperature, humid, or strong magnetic environments
- Do not disassemble or attempt repairs unless you are a qualified technician
- Charge every 3 months during extended periods of non-use
- Keep away from water and extreme temperatures

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Customer Service

For assistance, contact us at cs@timevocalist.com.
Your satisfaction is our priority!