


Fanttik[®]

— Ideas for Fantastic Life —

SafeSnap™
Electric Pruning Shears

Y10 Pro


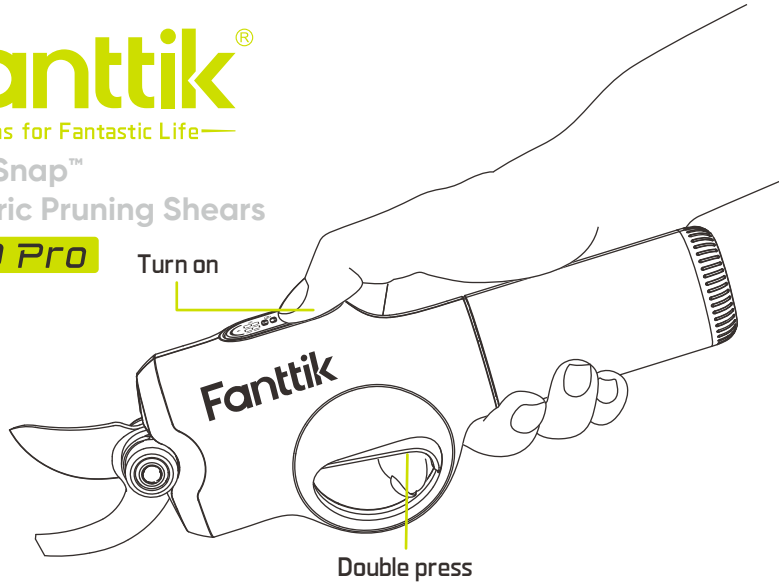


- Wake device, then quickly double-click the trigger to unlock. "Beep" - Unlock successful.
- Press the power button for 0.5 seconds to turn off the device.



Accidental touch


1

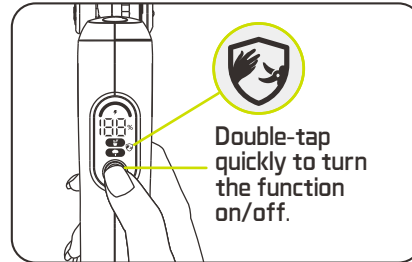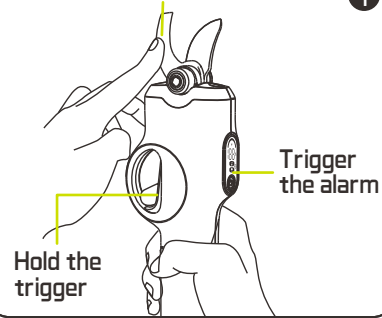

This function only works when gloves are not being worn.

Hold the trigger for 2s

2

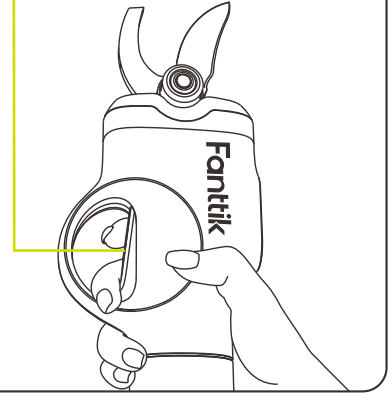

half-open



full-open



Press and hold the trigger for 2 seconds to switch cutting modes.