


10. Status Bar Overview

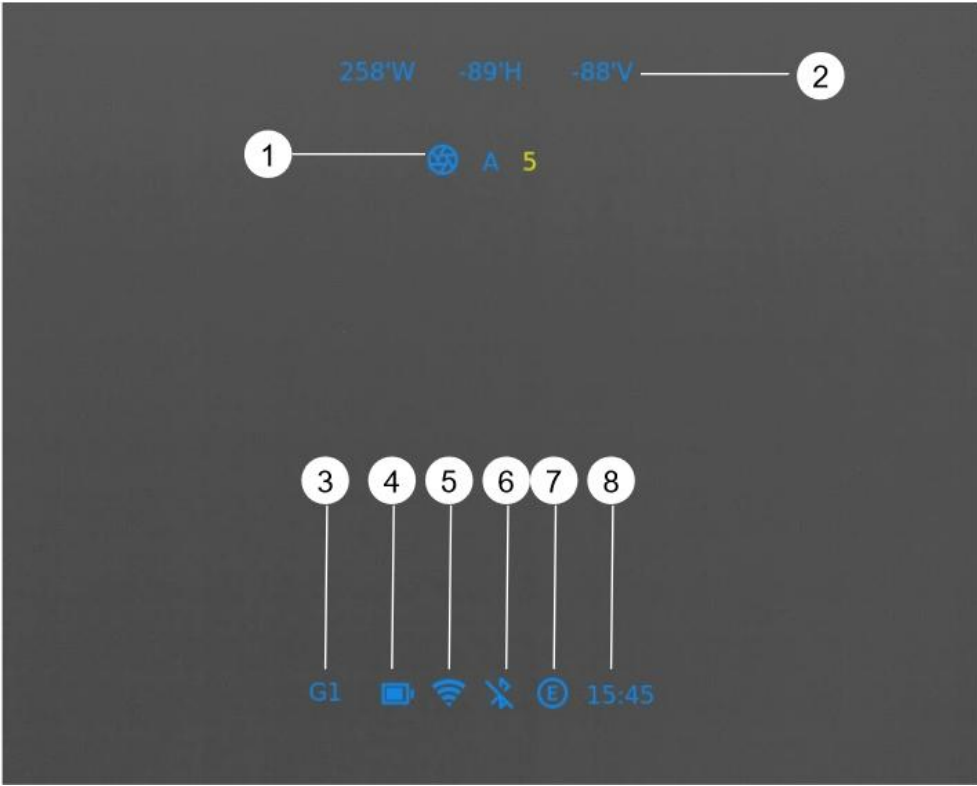


NO.	Description
1	NUC Shutter
2	Electronic compass
3	Profile
4	Battery

5	Wi-Fi
6	Bluetooth
7	Scene mode
8	Time


11. Zeroing

ZEN C series feature to use the “Freeze” zeroing method. The detailed steps are as follows:

- In the main menu screen, choose a profile.

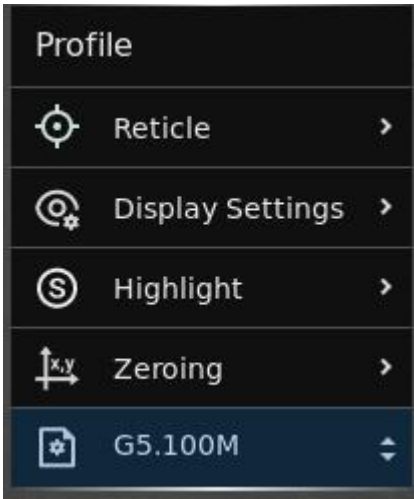

- Select the zeroing function to enter the zeroing screen and the coordinate position of the reticle (X axis, Y axis) is displayed in the center of the screen.

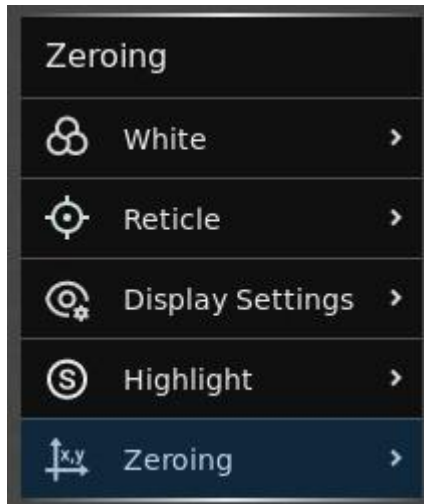

- Set Up a Stable Shooting Position: Find a stable shooting position, such as a shooting bench or sandbags, to rest their rifle on. Consistency is key for accuracy.
- Fire a Shot: Fire a single shot at their chosen target. Aim for the center.
- If the bullet hole and the aiming point (the center point of the reticle) do not match with each other, keep the aiming position still. Do not move their reticle.


- Make sure the center of their reticle is on the aiming point. Then Press 'freeze' to make the screen frozen.
- Press the menu button to toggle between the x and y axes, then use the up and down buttons to align the crosshair with the bullet hole from their shot.
- Press and hold the menu button again to exit the main menu and save the setting.
- Shoot Again: Fire another shot at the same target after adjusting.
- Confirm Zero: Once they consistently hit the target at their desired distance, their thermal scope is zeroed. Confirm this by shooting a few more rounds to ensure consistency.

12. Calibration

NUC (Non-Uniformity Correction):


- **Auto:** Triggered regularly by device.
- **Manual:** Long press Zoom button.
- **External:** Close lens cap, long press Zoom button.

13. Photographing & Video Recording

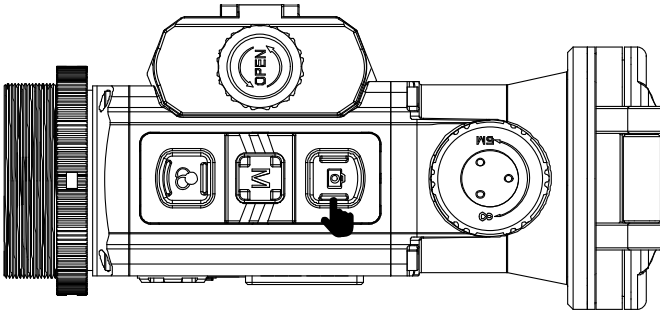

Take Photo:

- Short press the shutter button → brief freeze with photo icon.

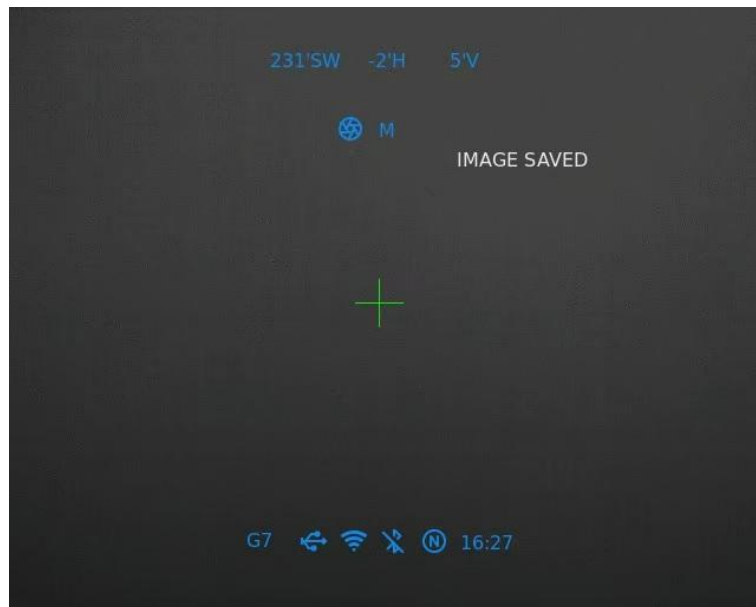


Note:

Make sure the device is properly zeroed before activating the virtual reticle function.

Record Video:

- Long press Capture button → recording icon and timer.
- Press again to stop.

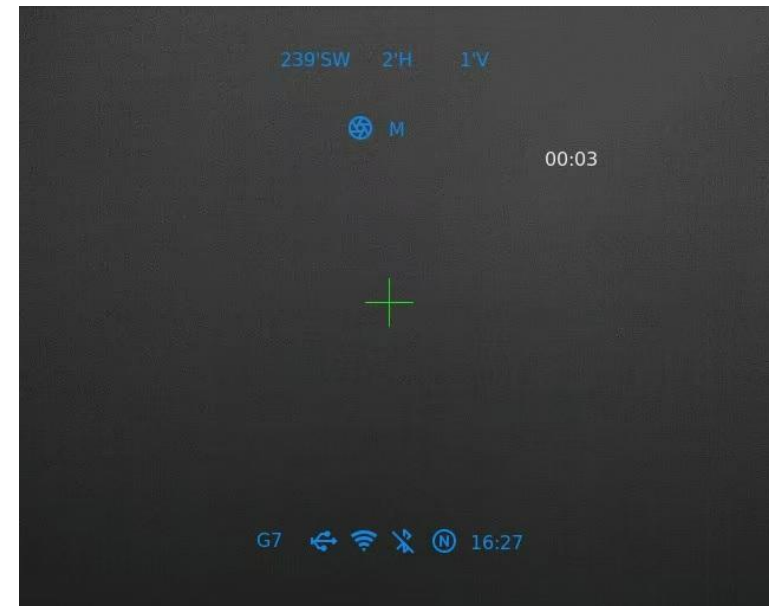

RAV Mode:

- Automatically records 10 to 30 seconds before and 10 to 30 seconds after a recoil event.


All media saved in internal 32GB/64GB memory.

14. Measure Distance(C50R)

C50R is equipped with an integrated LRF module, which can be used to measure the distance to a target. When measuring distance, please hold the device steady and avoid shaking to ensure measurement accuracy. This feature provides two distance measurement modes: Continuous and Single. The operation differs depending on the selected mode. You can switch modes via Main Menu > Advanced Settings > LRF.

Warning: Laser radiation emitted by this device can cause eye injuries, skin burns, or ignite flammable materials. Ensure no person or flammable material is positioned in front of the laser lens before activating the laser ranging function.


The device's battery is below 5%, LRF will be automatically disabled.

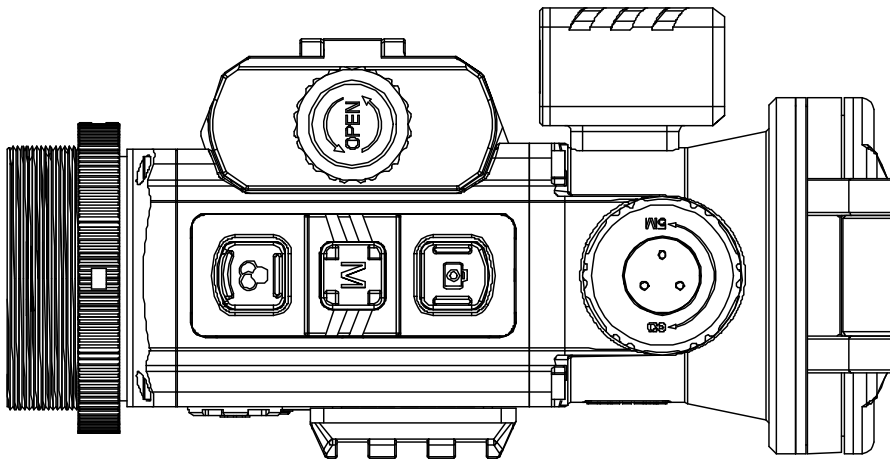

- Continuous: Short press the Palettes button to start measuring. The device will perform continuous measurements for a preset duration and then stop automatically. You can also stop it early by short pressing the Palettes button again.



- Single: Short press the Palettes button to perform a single distance measurement each time.
- Position: Top、Mid
 - ◀ LRF
 - Position: Top ⇅
 - Unit: Meter ⇅
 - Mode: Continuous ⇅
 - Duration: 15s ⇅
- Unit: Meter、Yard

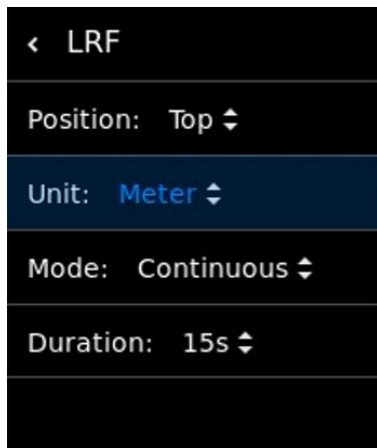

- Mode: Continuous、Single




- Duration: 15、30、45、60 sec



15. Ballistic Calculation(C50R)

Before using this function, please note the following two points:

1. Ensure the rangefinding function is working properly. For detailed instructions on using the rangefinder, refer to the previous section.
2. Ballistic parameters must be set in the ZEN LINK App. The specific steps are as follows:
 - Connect the C50R in the ZEN LINK App. Once connected, tap the Ballistic Calculation function icon.

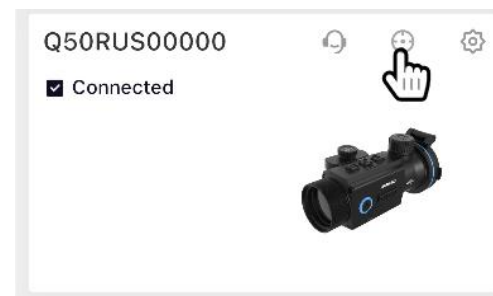

- On this page, select the corresponding Ballistic Profile, enter the parameters, and tap Save after completing the setup.

Ballistic

Ballistic profile
P1

Ammunition
--

Ballistic coefficient
0.00

Caliber
0.00 inch

Weight
0.00 gr

Muzzle velocity
0.00 f/s


Zero range
0.00 Yard Meter

Riflescope's height
0.00 mm

Temperature
0.00 °C °F

Altitude
0.00 Yard Meter

- After saving, the data will be automatically transmitted to and stored in the C50R. If you need to modify the parameters in the Ballistic Profile later, you must reconnect to the ZEN LINK App and repeat the above steps.
- Open the device's main menu to view or switch Ballistic Profiles in the Ballistic Calculation menu.

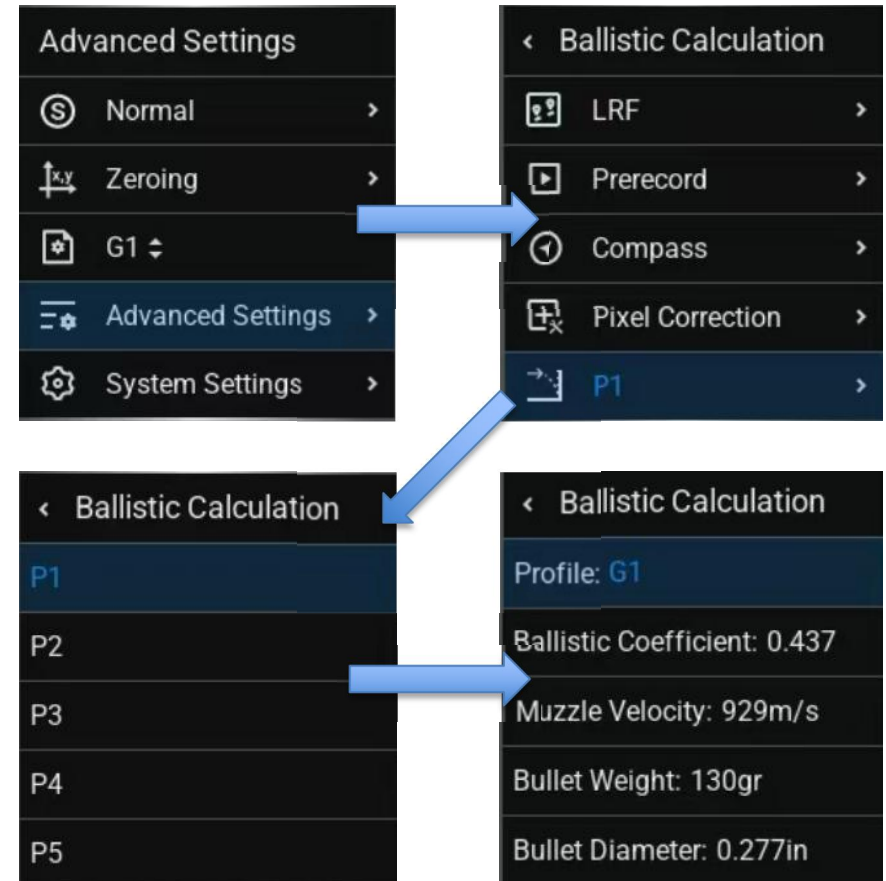

Once the above setup is complete, you can start using the Ballistic Calculation function. Follow the steps below:


- Aim at a distant target. The function will not work at close range.
- Short press the Palettes button to start rangefinding. After a short moment, the screen will display the calculated ballistic data.
- Adjust the muzzle elevation according to the displayed data to accurately hit the target.

- Adjust the muzzle elevation according to the displayed data to hit the target accurately. For example, if the screen shows "3 MIL", use the reticle on the day scope as a reference and raise the muzzle by 3 MIL.
- Short press the Palettes button again to turn off the rangefinding and ballistic calculation functions.

16. Quick Menu

Press Menu briefly to enter:

- Palettes.
- Scene Mode.
- Screen Brightness (1–15).
- Contrast (1–5).

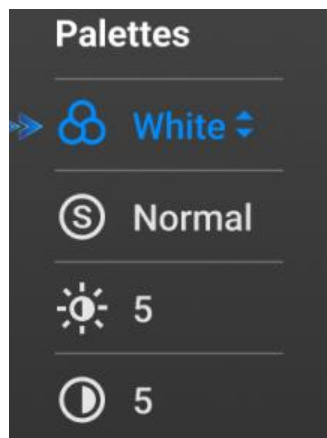

Use Palettes/Capture to navigate, Menu to modify, long press Menu to save and exit.


17. Main Menu

The Main Menu provides full control of all advanced settings. Access it by **long pressing the Menu button** on the home screen. Navigate with the **Palettes/Capture buttons**, short press the Menu button to edit or enter a submenu, and long press the Menu button to save and return to the previous level.


➤ UI Style

Switch between two menu display styles: **Normal** and **Easy**.

- **Normal:** Displays menu items with standard-sized text and icons. Multiple menu items are visible at once.

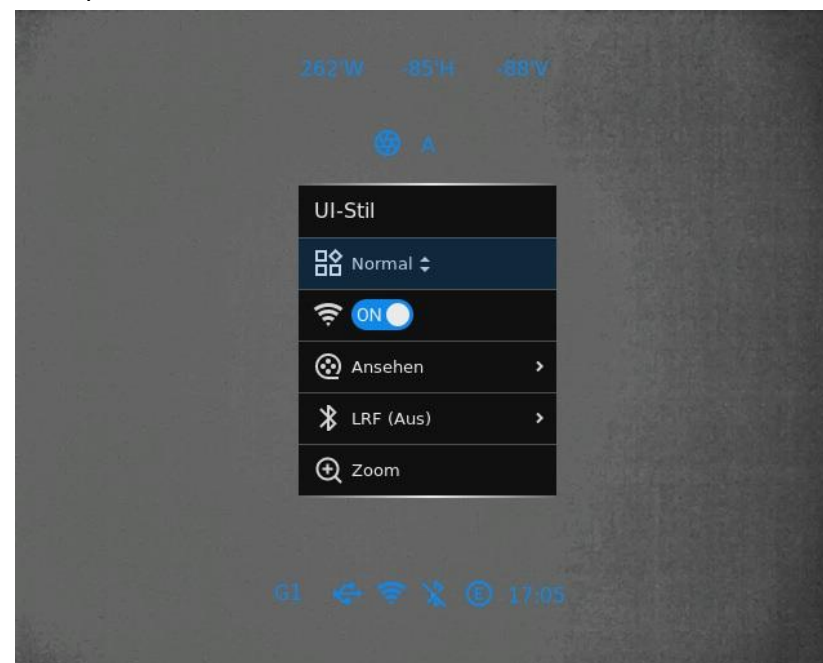

- **Easy:** Enlarges text and icons for improved readability. Only one menu item is shown at a time, creating a simplified user interface.

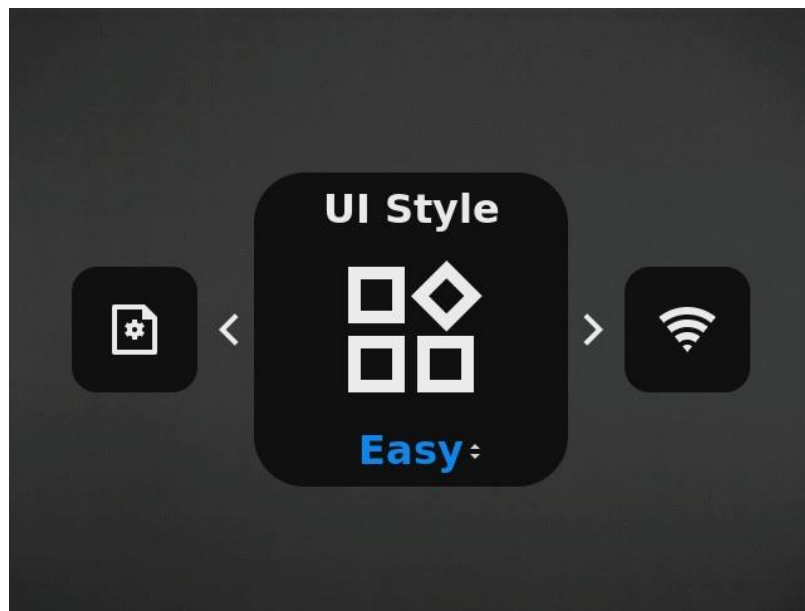


➤ Wi-Fi


This option enables or disables Wi-Fi, allowing the device to connect to mobile apps (e.g., ZEN LINK) for remote control, image preview, and firmware updates. When enabled, the device will broadcast its SSID for connection.

Toggle wireless connection for app control and file transfers.

- On / Off.

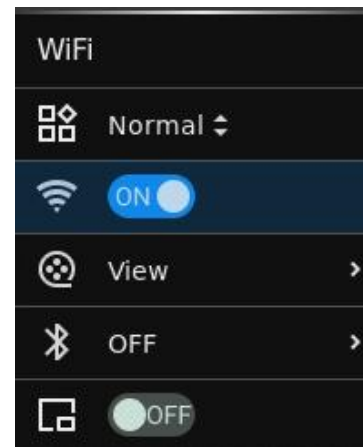

NOTE: Displays SSID on activation. You can check the Wi-Fi name (SSID) in Advanced Settings > Wi-Fi. The default password is 12345678. If forgotten, go to Advanced Settings > Wi-Fi > Reset PIN to reset the password.

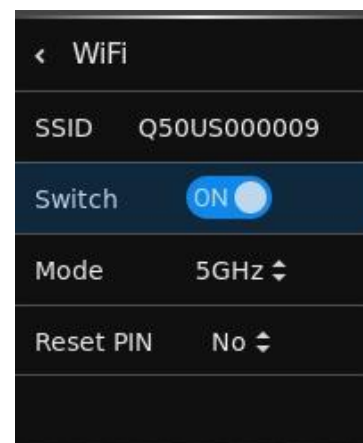


➤ Bluetooth

Bluetooth allows pairing with external accessories such as laser rangefinders or remote controls. Once paired, the device will recognize and show the connection status.

Pair with compatible external devices (e.g. rangefinder).

- On / Off.

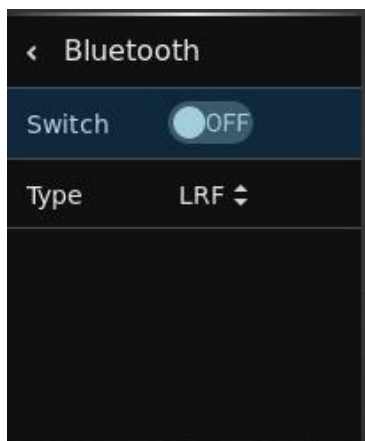


➤ Palettes

Thermal palettes control how the device translates heat differences into visual colors. Users can switch between various false-color schemes for better target visibility under different environmental conditions.

Change thermal display color schemes.

- White Hot / Black Hot / Red Mono / Rainbow / Arctic / Iron Red / Green White / Tint / Sepia / Fulgurite / Cold Green / White Highlight.

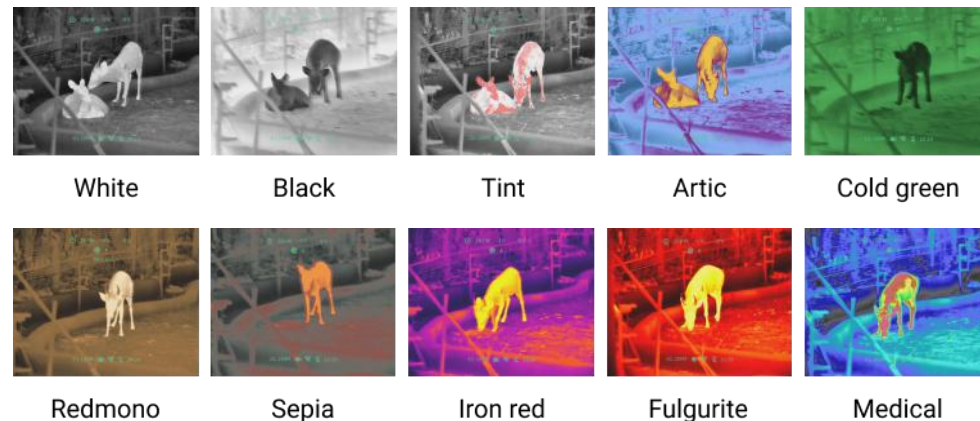


➤ Display Settings



Adjust screen brightness, menu scale, status bar visibility, and location to ensure optimal display readability across lighting environments.

Personalize display preferences.


- Brightness (1–15).

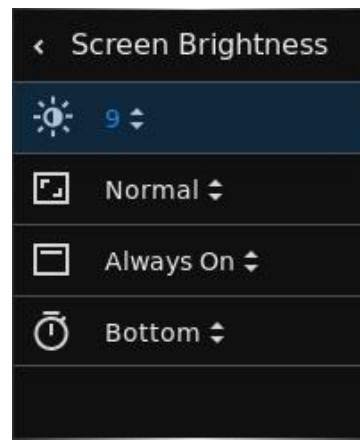

- Menu Size: Normal / Small.

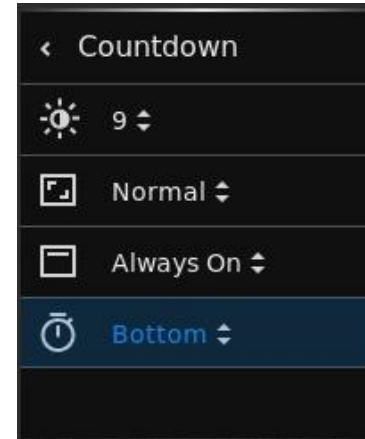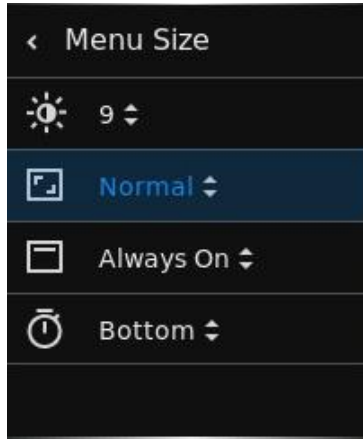


- Status Bar: Auto hide / Always On.

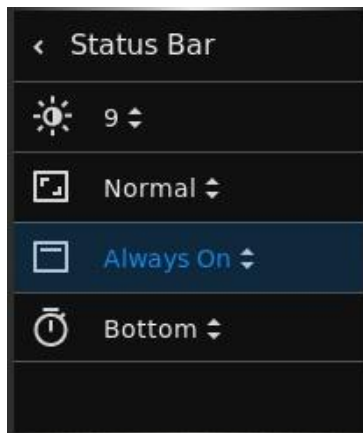

- Countdown Location: Top/ Mid.


➤ Scene Mode

There are three scene modes that can be switched via the Quick menu. Users can customize the Display Settings for each mode, such as weather, denoise, and contrast, enabling fast and effective transitions between different environments for optimal viewing.

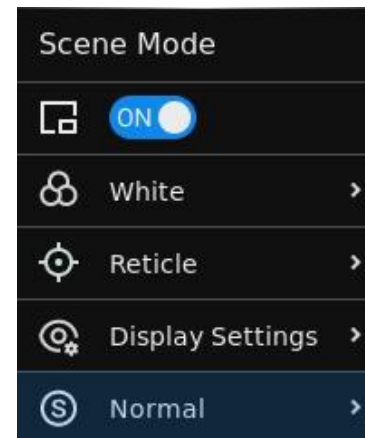


- Three Scene Modes: Normal / Highlight / Enhance.

- Editable parameters: Weather, Denoise, Contrast, Sharpness, Brightness.

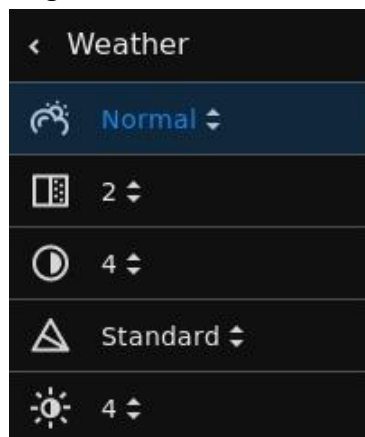


- Favorite: The selected scene mode can be switched via the Quick menu.

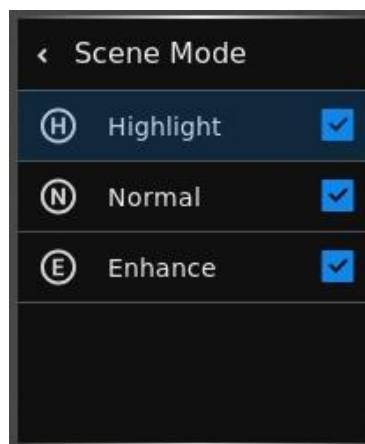

- Auto Highlight: On / Off.


When this feature is enabled, the device automatically switches to Highlight mode after shooting, making it easier to detect and locate targets while eliminating the hassle of manually switching scene modes.

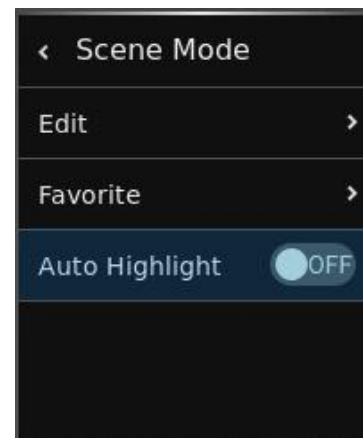

➤ Profile

Quickly switch between different zeroing profiles. Once the device is connected to the ZEN LINK App, you can rename profiles within the app to make them easier to remember.

- Profiles G1–G10 can be renamed in the app for easier identification.

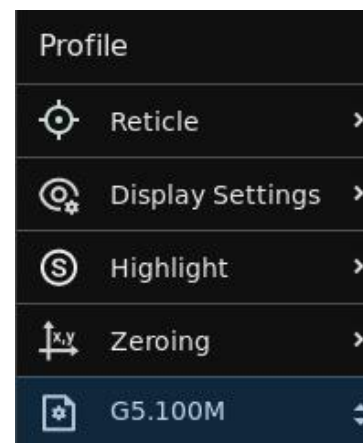

➤ Media

Browse and view stored photos and videos.


- Thumbnail grid, with album categorized by month.

➤ NUC Shutter

Control thermal sensor calibration.

When switched to Auto mode, the status bar displays an icon with the letter A; in Manual mode, it shows M; in External mode, it shows E.

- Auto / Manual / External.

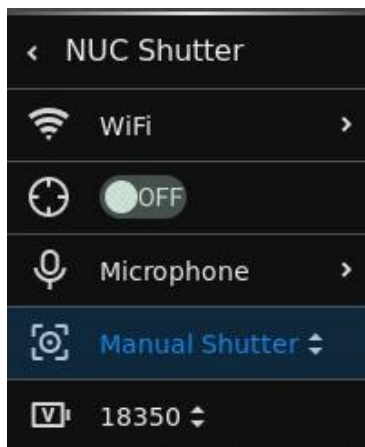


- Auto: The device automatically triggers image calibration at regular intervals without user action.
- Manual: User initiates calibration manually by long pressing the Zoom button.

- External: Close the lens cap and long press the Zoom button to calibrate.

➤ MIC

Enable or disable ambient audio recording.

- On / Off.

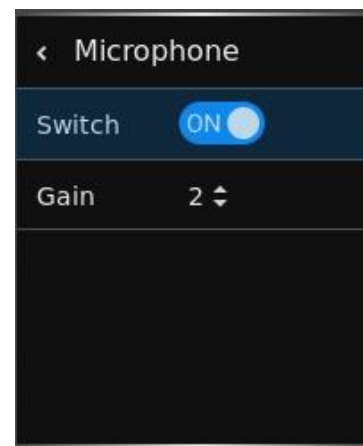


- Gain: -5~5.

Adjust microphone gain level

➤ Menu Sorting

Reorder items in Main Menu.


- Press the Menu button to switch menu items, and use the Up/Down buttons to move positions.

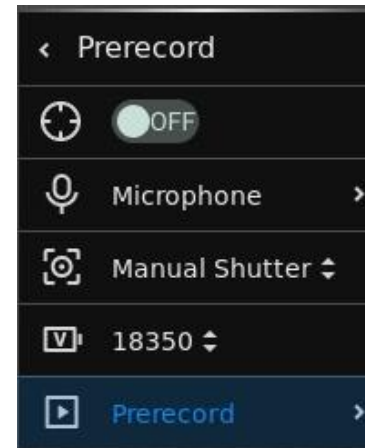

➤ Compass Calibration

Guide to recalibrate electronic compass.

- Requires manual motion in specific directions until green icon appears.

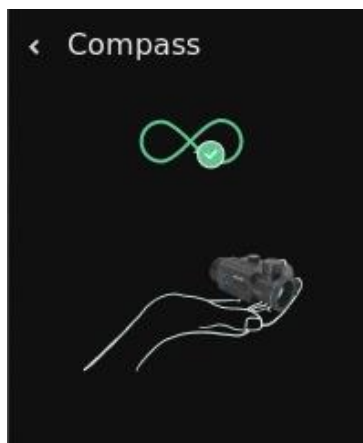

➤ Prerecord

Automatically captures video before and after recoil.


- Sensitivity: Low / Medium / High.
Adjust the sensitivity of this feature.
- Duration: 10s/15s/20s/25s/30s (before & after).
Set the time to start recording the video. For example, if set to 15 seconds (before shot), the video will start recording 15 seconds before the shot.

➤ Auto Sleep

When the device's pitch angle exceeds 65 degrees or the roll angle exceeds 45 degrees, it will enter standby mode after the preset period of inactivity.



- Delay: 3 / 5 / 10 min.

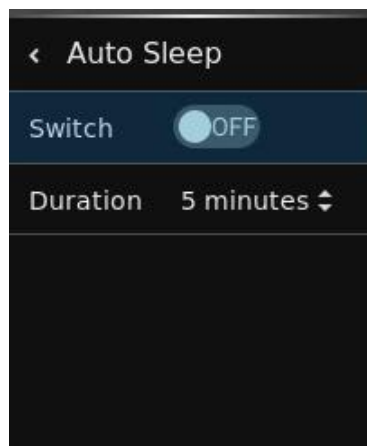


➤ Pixel Correction

Fix defective (hot/stuck) pixels manually.

- Press and hold the menu button to enter the main menu.

- Select the Pixel Correction function to enter the Pixel Correction screen and the coordinate position of the reticle (X axis, Y axis) will be displayed in the center of the screen.
- Find the bad pixels in the screen.
- Press the menu button to toggle the x and y axes and press the up and down buttons to adjust the position of the x and y axes. Press the menu button to calibrate the bad pixels.
- Repeat the above operations to continue selecting bad pixels.
- When the calibration is done, press and hold the menu button to exit the pixel

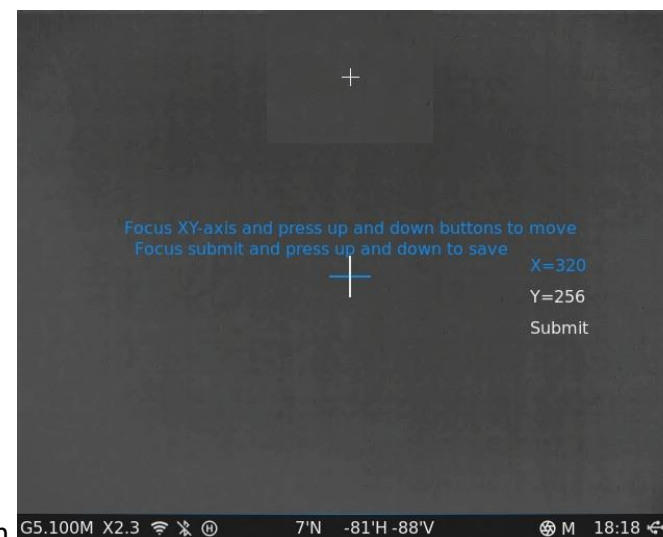

correction.

➤ Time/Date

Manually set time and date.

- Year, month, day, hour, minute, and second can be set individually.
- Used to display time in the status bar.
- Required for accurate file naming.

➤ **Language**

Choose device interface language.

- English / Deutsch / Italiano / Čeština / Magyar / Español / Français

➤ **Reset Settings**

Restore factory defaults (non-destructive).

- Confirmation required.

➤ **Erase Media**

Delete all saved photos and videos from internal storage.

- Confirmation required.

➤ **About**

View firmware version, serial number, and hardware ID.

18. Connecting to ZEN LINK App

App Installation:



App Store



Google Play


- Download **ZEN LINK** from App Store (iOS) or Google Play (Android).

Connecting:



1. Turn on device Wi-Fi (Main Menu > Wi-Fi > On).
2. Note SSID displayed in Main Menu > Advanced Settings > Wi-Fi.
3. On your phone, go to WLAN settings and connect to the same SSID.
 - Default password: 12345678.
4. Open ZEN LINK App → Tap connected device → View real-time image or access media.

19. Firmware Upgrade


1. Connect mobile device to the unit via Wi-Fi.
2. Open **ZEN LINK App** → Tap Settings .

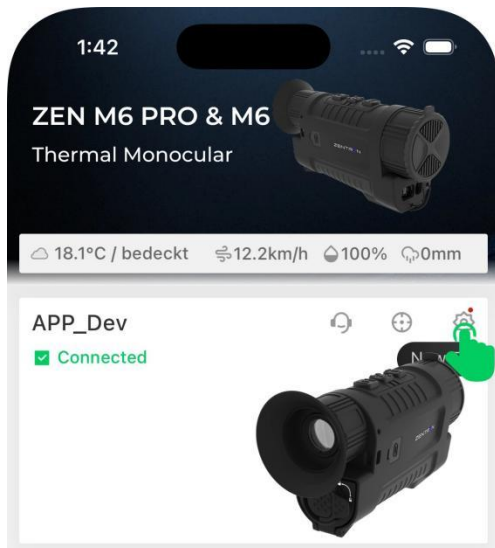

3. Select **Firmware update** → Tap **Download Now**.

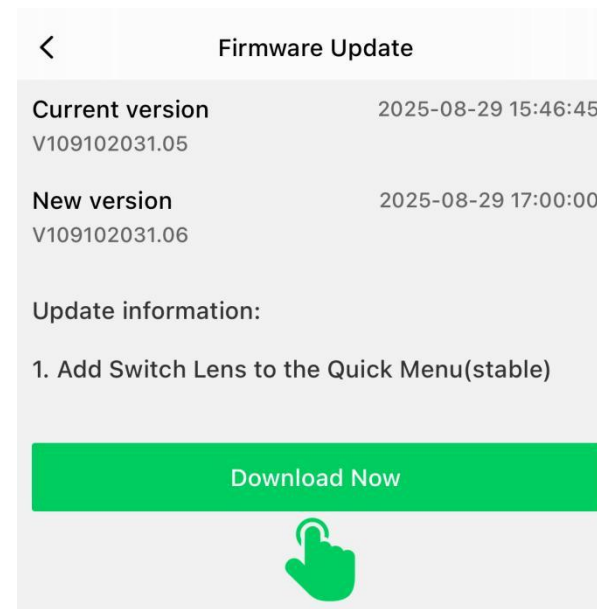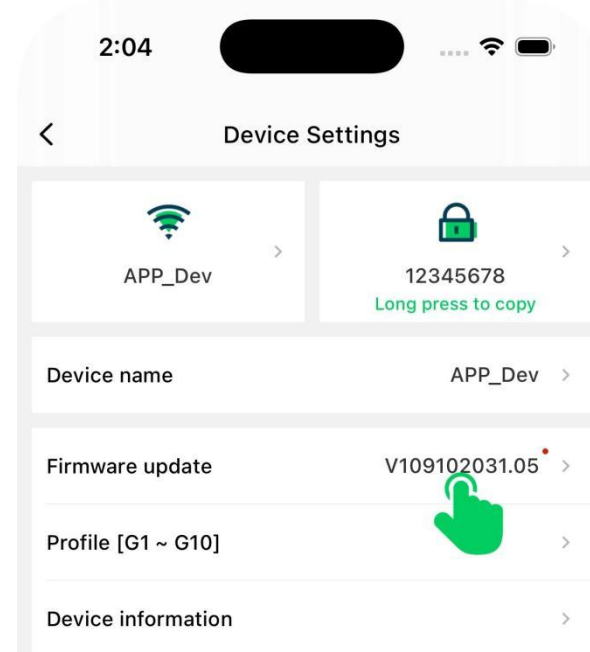

4. Follow prompts to complete installation.

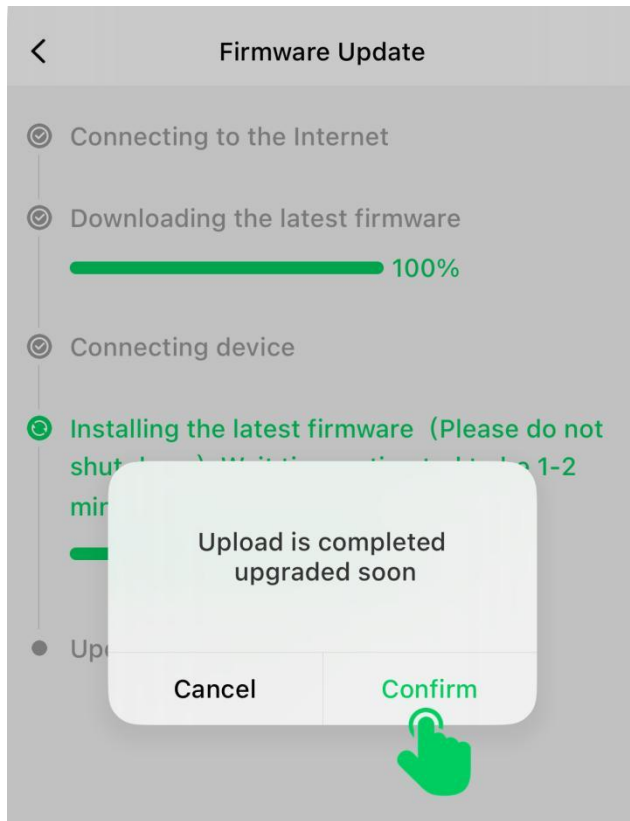

5. Device will automatically restart and apply updates.

Important: Do not disconnect during upgrade. Ensure battery >50% or connect external power.

20. File Transfer to PC

When connected via USB-C cable:

1. Power on the device.
2. Connect to a PC via cable.
3. Device will appear as a USB drive. Double-click to open and view files.
4. Open folders by date to view:
 - The device stores captured photos and videos in its USB drive.
 - Users can copy them to their computer.
 - Photos (.jpg).
 - Videos (.mp4).

The naming conventions for photos and videos are:

- zentron_image_YYYY_MM_DD_HH_mm_ss.jpg.
- zentron_video_YYYY_MM_DD_HH_mm_ss_auto.mp4.
- zentron_video_YYYY_MM_DD_HH_mm_ss_manual.mp4.
- auto.mp4 is the video automatically recorded by the Prerecord function.
- manual.mp4 is the manually recorded video.

- YYYY_MM_DD_HH_mm_ss represents year, month, day, hour, minute, and second.

21. Maintenance & Cleaning

- **Lens:** Use provided microfiber cloth. Do not use alcohol or coarse material.
- **Body:** Wipe with soft damp cloth. Avoid solvents.
- **Storage:** Keep dry, store in provided bag.
- **Charging Port:** Avoid dust buildup.
- **Battery:** Charge every 3 months during long-term storage. Avoid full depletion.

22. Troubleshooting (FAQ)

Issue	Possible Cause / Solution
Device won't turn on	Check battery orientation / charge level
Wi-Fi not visible	Ensure Wi-Fi is enabled in main menu
App fails to connect	Forget Wi-Fi, reconnect / Restart device
Image is blurry	Adjust lens focus / Eyepiece diopter

Reticle is misaligned	Perform zeroing again / Reset profile
Video not recording	Ensure sufficient storage space
Battery drains fast	Enable Auto Sleep, disable Wi-Fi and Bluetooth

23. Legal & Compliance

FCC ID: 2BGU2-ZENC50

FCC ID: 2BGU2-ZENC35

FCC ID: 2BVLG-ZEN-C50R

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


-- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance 20cm between the radiator and your body: Use only the supplied antenna.

24. Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

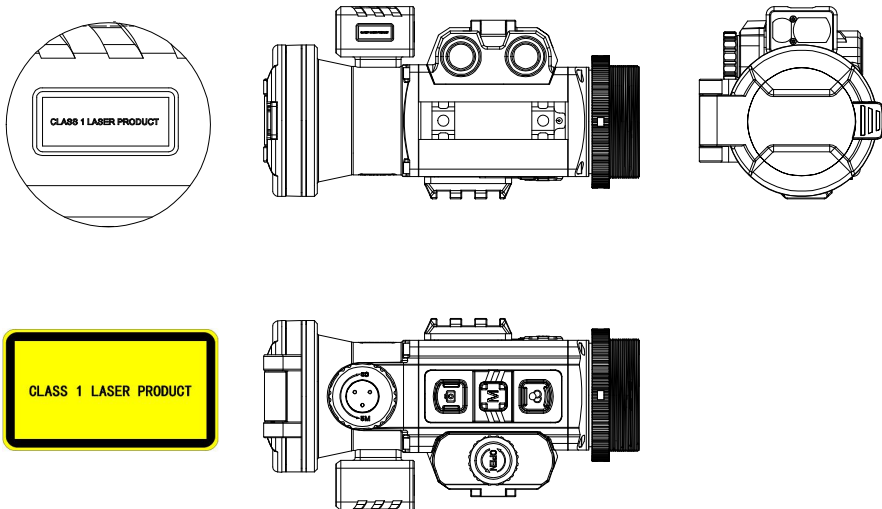

1. Laser safety levels are classified according to IEC 60825-1: 2014.
2. The laser module information is as follows :
 - Wavelength: 905nm
 - Maximum single pulse energy: 0
 - Laser safety level: Class 1
 - Pulse width: 0
 - Repetition frequency: 1-5hz

Note: Semiconductor laser, without Maximum single pulse energy and Pulse width parameters.

25. Regulatory Information



EU Conformity Statement

This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the 2011/65/EU and its amendment directive 2015/863/EU.

Frequency Bands and Power (for CE)

The frequency bands and transmitting power (radiated and/or conducted) nominal limits applicable to the following radio equipment are as follows:

Wi-Fi 2.4 GHz (2.4 GHz to 2.4835 GHz), 20 dBm



Directive 2012/19/EU (WEEE Directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at

designated collection points. For more information see:
www.recyclethis.info

26. Contact & Support

For technical support, warranty service, or general inquiries:

- Website: zentronoutdoor.com
- Email: info@zentronoutdoor.com

Users can also submit feedback and contact our European agents through our ZEN LINK app.


Step 1:

Connect your device to the ZEN LINK app, then navigate to the "About" page. Find the submenu "Feedback" under Support.

Step 2:

Tap on "Feedback" to report any issues you encountered or to share your valuable experience using our products. Our team is here to help and will respond promptly.

At Zentron, we value your experience. You're welcome to share any feedback regarding product usage, technical issues, or suggestions for improvement. Our professional technical support team is committed to responding within 24 hours.

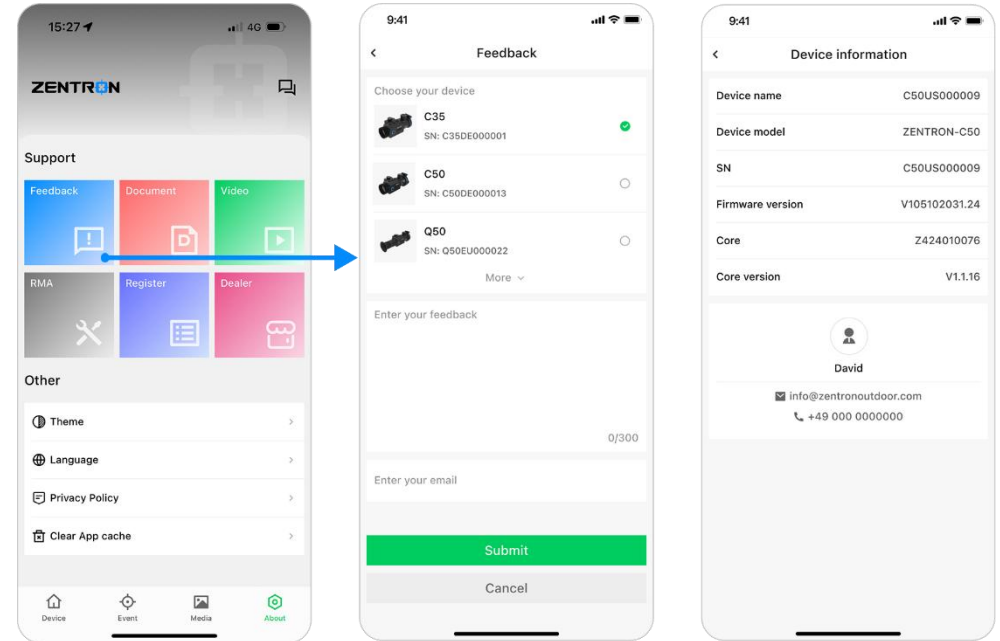

Step 1

Step 2



zentron global



zentron_global

ZENTRON

ZENTRON

✉ info@zentronoutdoor.com

🌐 zentronoutdoor.com