

Serenelife



SLAIRFM40RD - SLAIRFM40YL - SLAIRFM40BL

air mover

user manual

visit our website



SCAN ME

serenelifehome.com

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE REFERENCE. FOR HOUSEHOLD USE ONLY.

Unique Elements:

- Impact-resistant PE Housing for Enhanced Durability
- Equipped with a High-strength Pull Rod for Easy Maneuvering

Features:

- High-speed Airflow for Rapid Drying and Optimal Air Circulation in Homes, Garages, and Workspaces
- 3 Speed Settings with Airflow Options of 2000, 3000, and 4000 CFM
- 3 Adjustable Blower Angles (0°, 45°, and 90°)
- Stackable Design Allows you to Efficiently Store and Transport up to 4 Units
- Comes with a 15ft 14AWG Power Cord
- Compact and Portable Design
- Durable and Sturdy Construction
- No Assembly Required
- Simple Plug-in Operation for Immediate Use
- Can be Positioned Horizontally or Vertically, Providing Flexible Airflow for Both Drying and Ventilation
- Low Noise Operation (≤ 76 dB)
- Lightweight Design with Integrated Carrying Handle
- Helps Dry Wet Floors, Carpets, and Other Surfaces
- Ideal for Drying Carpets, Floors, Walls, Furniture, and More

What's in the Box:

- Portable Air Mover

CALIFORNIA PROP 65 WARNING

WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

Technical Specs:

- Construction Materials: Plastic PE
- Power Supply: 120V AC, 60Hz
- Power Consumption: 750W
- Fan Speeds: 3 (Low/Medium/High) – Low: 1400 RPM, Medium: 1500 RPM, High: 1600 RPM
- Airflow: 2000 / 3000 / 4000 CFM (Low / Medium / High)
- Motor Power: 1.0 HP
- Motor Type: High-quality Low-noise Motor
- Operating Noise Level: ≤ 76 dB
- Safety Features: Overheat Protection and Automatic Shut-off
- Power Cord Length: 15 ft.
- Item Weight: 27.6 lbs
- Product Dimensions (L x W x H): 17.8 x 15.8 x 17.8 Inches

IMPORTANT SAFETY INFORMATION

READ AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS AIR MOVER

WARNING

To reduce the risk of fire, electric shock, or injury:

This manual contains important information regarding the proper use and safe operation of the machine. Following the recommendations outlined in this manual will help ensure years of reliable service.

- Improper connection of the equipment grounding conductor can result in fire, electric shock, or personal injury. Always use a three-wire electrical system connected to a proper ground. For maximum protection, use a circuit protected by a ground fault circuit interrupter (GFCI). If you are unsure whether your outlet is properly grounded, consult a qualified electrician. Do not use the unit if the power cord or plug is damaged.
- This machine may cause an explosion if operated near flammable materials or vapors. Do not use or store the unit near fuels, grain dust, solvents, thinners, or other flammable materials. Do not use flammable substances to clean this machine.

- Do not immerse or operate this unit in standing water. Doing so may cause electric shock. To prevent electric shock, do not expose the unit to rain. Store indoors only. Do not expose the unit to freezing temperatures.
- Do not move or carry the unit while it is operating. Do not pull or carry the unit by the power cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces. To unplug, grasp the plug—do not pull the cord. Do not handle the plug or air mover with wet hands.
- Do not insert objects into openings. Do not operate the unit with any opening blocked. Keep openings free of dust, lint, hair, or anything that may reduce airflow. Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Turn all controls off before unplugging the unit.
- Operate the unit on a level, stable surface to prevent tipping, which could result in injury or damage.
- Do not drop or throw the unit. Improper handling may damage internal components and create hazardous conditions.

SAFETY NOTICE

A damaged power cord must be replaced with one supplied by the manufacturer and must not be repaired.

GROUNDING INSTRUCTIONS

This machine must be grounded. If it malfunctions or breaks down, grounding provides a path of least resistance for electric current, reducing the risk of electric shock. This unit comes with a power cord that includes an equipment-grounding conductor and grounding plug. Insert the plug into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

OPERATION

1. Plug the air mover into a standard, properly grounded outlet with the correct voltage and amperage. If you are unsure about the outlet, contact your supervisor.
2. Turn the power switch on and verify that the unit operates properly before running it unattended.

TROUBLESHOOTING

Unit will not run

Cause:

- No power to unit.
- Switch is not turned on.
- Faulty switch.
- Faulty or broken power cord or motor wire.

Solution:

- Plug unit in and check circuit breaker.
- Place switch in ON position.
- Replace switch.
- Perform continuity check using a volt/amp meter. Repair or replace faulty wiring.

Unit runs but makes loud scraping noise

Cause:

- Blower wheel rubbing housing due to impact.
- Housing deformed due to impact.

Solution:

- Replace damaged motor mounts.
- Replace blower wheel.

Unit runs but vibrates excessively

Cause:

- Bent motor shaft.
- Damaged air mover blade.
- Dirt buildup on blade.

Solution:

- Replace motor.
- Replace blade if necessary.
- Clean blade.

Unit runs but blower wheel does not turn

Cause:

- Motor bearing failure or internal electrical fault.
- Intake or exhaust grille obstructed.
- Excessive duct length.

Solution:

- Replace motor.
- Remove obstruction.
- Reduce duct length to recommended maximum.

MAINTENANCE

Regular maintenance is essential for safe and efficient operation:

- Inspect the electrical cord and wiring for damage or discoloration.
- Check for loose fasteners and tighten as needed.
- Clean the screens on the front and sides of the unit.
- Listen for abnormal sounds during operation.
- Keep the unit clean at all times.

Cleaning

- Use compressed air or a vacuum to remove lint and debris from the motor, screens, and blower wheel.
- Do not use a pressure washer to clean the unit.

STORAGE GUIDE

- Turn off and unplug the unit before storing.
- Store the air mover in a clean, dry area, away from moisture, rain, and freezing temperatures.
- Keep the unit away from flammable materials and dust.
- Wrap the power cord loosely to prevent kinks or damage.
- Avoid placing heavy objects on top of the unit.



SLAIRFM40RD



SLAIRFM40YL



SLAIRFM40BL

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Serenelifehome.com/pages/register



questions? comments?

We are here to help!

Phone: 1.718.535.1800

[serenelifehome.com/contact us](https://serenelifehome.com/contact-us)