

Compatible with following brands:

- Bosch
- Milwaukee
- Ridgid
- Mastercraft
- Chicago
- Rockwell
- Dremel
- Skil
- Fein
- Craftsman
- Black&Decker
- Porter Cable
- Woex
- Tacklife

PECHAM

OSCILLATING TOOL BLADES

User Manual

USER GUIDE

Thanks for purchasing PECHAM blades, Our blades may get loose in some oscillating tools. before use, pls add the C-shaped spacer to the tool to stabilize the blades if the blades didn't fit your multitool well.

Any product issue (lack of accessories, broken or other else) pls contact us by Amazon directly.

we will arrange [replacement](#) or [refund](#) to you.



Wood chips are removed

Wood chips are removed



when creating holes in the wood, the tail of the fuselage swings to the left and right, which can facilitate the removal of wood chips. this can improve sawing speed and blade life

Caress the machine to pan left and right.

Does not press the machine directly down.



When sawing nails and metal plates, move or oscillate the oscillating tool to allow more sawtooth to aid in the cutting doing. so can extend the life of the saw blade.