

**SENCOR®**

**SMS 0800BK**





**HEAD SHAVER**  
Translation of the original manual



**SENCOR®**

**SMS 0800BK**

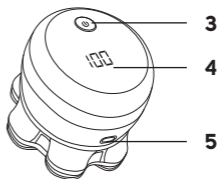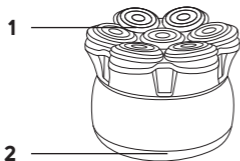

**A**

# IMPORTANT SAFETY INSTRUCTIONS

- This appliance may only be used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by unsupervised children.
- If the charging cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the charging cable damaged.



**WARNING:**

Keep the appliance dry.



This appliance is suitable for cleaning under running water.

- Before connecting the appliance to a power socket, check that the nameplate rated voltage matches the voltage of the power socket.
- Use the appliance only with the supplied charging cable. To avoid a dangerous situation, do not use other types of charging cable.
- Keep the charging cable dry.
- Do not place the power cord over sharp objects. Make sure that it does not hang over the edge of a table or touch a hot surface.
- Do not wind the charging cable around the handle of the appliance.

- Do not connect or disconnect the charging cable with wet or damp hands.
- Store, charge and use the appliance at an ambient temperature of 15 °C to 35 °C. Do not charge the appliance for longer than necessary to fully charge it. After charging, disconnect it from the power source.
- Do not expose the appliance to temperatures above 50 °C. Otherwise damage to the built-in battery may occur.
- The appliance is equipped with a built-in battery with a long service life, which can only be removed by a professional service. Never attempt to remove it from the appliance by yourself.



**Caution:**

Never disassemble the appliance in order to remove the battery. Do not short-circuit the appliance or throw it into a fire. There is a risk of leakage of toxic substances, fire or explosion if improperly handled.

- Do not charge, use, store or leave the appliance in a bathroom or any place where it could fall into a bathtub, wash basin or any other container filled with water.
- If the appliance falls into water, under no circumstances should you touch it, but immediately disconnect the power adapter from the socket. Never use an appliance or power adapter that has been submerged in water. Take it to an authorised service centre for inspection.
- This shaver is designed for domestic use only and is used for shaving and trimming beards or facial hair. The shaver is not intended for commercial purposes or for trimming animal fur.
- Use the shaver only on dry and clean beard or facial hair. Do not use it on wet beards or beards with shaving foam, gel, etc. on them.
- We do not recommend using the shaver on parts of the face with open or cut wounds, burns, blisters, etc.
- For hygiene reasons, the shaver head should only be used by one person.
- Use the shaver in accordance with the instructions in this manual.
- Use only the original accessories supplied with this shaver.
- The shaver and its power adapter must only be used indoors. Do not use it outdoors.
- Avoid using the shaver in rooms where aerosol dispensers are used or where oxygen is administered.
- Do not expose the shaver to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessive dust.
- Do not place the shaver near heaters, open fires or other sources of heat.
- Before using it, always check that the shaving head is not damaged. Never use a shaver with a damaged shaving head.

- The shaver may heat up when used or recharged. This is completely normal.
- Keep the shaver at a safe distance from your eyes.
- Always turn off the shaver and disconnect it from the power socket if you will not be using it, will be leaving it unsupervised, before cleaning, maintenance or storing it. Store the shaver and its power adapter in a dry environment.
- Keep the shaver clean. Perform the cleaning and maintenance following the instructions in the Cleaning and Maintenance section.
- Do not perform any maintenance on the shaver other than cleaning its individual components as described in the Cleaning and Maintenance section.
- Never use a shaver or power adapter that is damaged in any way.
- Do not use the shaver if it has fallen on the floor, if it was submerged in water, if it is not functioning properly or if it is damaged in any other way.
- To avoid a hazardous situation arising, do not repair or modify the shaver or its accessories yourself. Contact an authorised service centre for all repairs. By interfering with the product, you risk losing the legal right to defective performance or warranty for quality.

### **Special Safety Instructions for the Li-ion Battery**

- The Li-ion battery is built into the appliance and is an integral part of it, which the user is not allowed to remove.
  - Follow all the instructions provided in this user's manual.
  - Avoid using or storing the appliance in environments where flammable, volatile, or explosive substances are used and/or stored.
  - In the event of a battery fluid (electrolyte) leak, do not touch the battery with your bare hands. Use protective aids (gloves, a protective mask, goggles, etc.). The liquid inside the battery is toxic and may cause health problems even with slight contact of the bare skin with it.
  - We recommend opening windows or doors to ensure adequate ventilation of the space.
  - Contact a specialist hazardous waste disposal company or use a hazardous waste collection facility. Do not dispose of the damaged battery or accumulator in ordinary household waste.
  - In case of skin or eye splashes, rinse with plenty of water and seek medical attention. If ingestion occurs, seek immediate professional medical help.
- .....

## EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.



This symbol on the accumulator or battery means that the used battery must not be added to normal municipal waste.



# EN Head Shaver

## User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

### DESCRIPTION OF THE ELECTRIC SHAVER



- |   |                            |
|---|----------------------------|
| <b>A1</b> Shaving head  | <b>A5</b> Charging socket  |
| <b>A2</b> Shaver body   | <b>A6</b> Protective cover |
| <b>A3</b>  On/Off button | <b>A7</b> Cleaning brush   |
| <b>A4</b> Display   | <b>A8</b> Charging cable   |

### INTENDED USE

- The shaver is designed for dry shaving of scalp hair and beard. The electric shaver is not intended for wet shaving or cutting artificial hair or animal hair.

### CHARGING

- The electric shaver is equipped with a battery that allows it to be used without the power cord.
- Allow the shaver battery to fully charge first without turning it on before first use or after a long period of non-use.
- Insert the USB-A connector of the charging cable into the socket in the power adapter (not included) and insert the adapter plug into a properly grounded power socket.

- Insert the USB connector into the socket on the underside of the electric shaver. The shaver will start charging. The button  will flash as it charges. When it goes out, the shaver is fully charged.
- Disconnect the charging cable from the shaver and remove the power adapter from the socket.
- The charging time is approximately 2 hours. Nevertheless, the charging time varies depending on the current charge level of the battery.
- When fully charged, the electric shaver will work for approximately 120 minutes. It will then need to be recharged.
- The  button will flash white when the charge level is low. Allow the electric shaver to charge.

**Caution:**

Do not leave the electric shaver connected to the mains for longer than it takes to fully charge it.



---

## RECOMMENDATIONS FOR EXTENDING BATTERY LIFE

- To keep the battery working for as long as possible, charge, use and store the electric shaver at an ambient temperature of 15–35 °C in a dry environment. Lower or higher temperatures adversely affect the life of the battery.
- Do not wait until the battery is completely discharged. It is better to recharge the battery before it is fully discharged.
- If you do not use the electric shaver for a long time, charge the battery at least once every 6 months.

---

## OPERATION

- Remove the protective blade cap.
- Turn on the shaver by pressing the  button.
- Hold the electric shaver at a right angle to the surface of the skin and in short circular movements sweep the shaving head over the scalp in the opposite direction of hair growth. Apply adequate pressure to the skin. Do not push too hard.
- Tighten the skin with your free hand in harder to reach areas. This will give you a better cutting result.
- Press the  button to turn off the shaver.
- When you have finished shaving, clean the electric shaver according to the instructions in the Cleaning and Maintenance section.

- Replace the protective blade cap if you will not be using the shaver, are leaving it unattended, or storing it.

---

## CLEANING AND MAINTENANCE

- For hygiene reasons, clean the electric shaver after each use. Regular cleaning is also important to keep the electric shaver working properly and extends the life of the shaving cutters.
- Turn the electric shaver off before cleaning it. Never clean the electric shaver when it is plugged into the power supply to recharge.
- Do not use hard-bristled brushes, abrasive cleaners, thinners, etc. Otherwise the surface to be cleaned may be damaged.



### Caution:

To avoid the risk of electric shock, do not immerse the shaver or charging cable in water or any other liquid.

### Cleaning Procedure

- Remove the protective blade cap.
- Remove the shaving head from the shaver body. You can rinse the shaving head under a weak stream of running water. Tap and wipe dry or allow to dry properly.
- Use a soft brush to remove any beard and hair residue from the shaver body.
- Wipe the body of the shaver using a dry cloth. Do not wash or immerse the body of the shaver in water or any other liquid.
- Put the dry shaver head back on the body of the shaver and put on the protective blade cap.

### Storage

- Check that the protective blade cap is correctly fitted to prevent unwanted damage to the shaver head during storage. Store the clean shaver in its protective case in a well-ventilated place out of reach of children and pets.
- Do not place any objects on the shaver.

---

## TECHNICAL SPECIFICATIONS

Input voltage .....	5 V/1A
Power consumption .....	5 W
Battery .....	Li-Ion, 3.7 V 1,200 mAh

Charging time .....	2 hours
Operating time.....	120 minutes
Dimensions .....	6.3 × 7.6 × 8.1 cm
Weight .....	221 g
Noise level.....	69 dB (A)
Protection class .....	IPX6

## Values provided according to Commission Regulation EU 2023/826

<b>Off mode</b>	
Power consumption in off mode	0 W
Time needed for the equipment to automatically reach off mode	0 min
<b>Standby mode</b>	
Power consumption in Standby mode	–
Time needed for the equipment to automatically reach standby mode	–
<b>Networked standby mode (Wi-Fi)</b>	
Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–

## INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

## **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

### **For business entities in European Union States**

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

### **Disposal in other countries outside the European Union**

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....  
Changes to text and technical parameters are reserved.

FAST ČR, a.s.  
U Sanitasu 1621  
CZ-251 01 Říčany  
[www.sencor.com](http://www.sencor.com)  
[info@sencor.cz](mailto:info@sencor.cz)