

REMOVAL/INSTALL INSTRUCTIONS: IGNITION LOCK CYLINDER

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.


REMOVAL/INSTALL OF IGNITION LOCK CYLINDER (989-712) Ford 2010–04, Lincoln 2009–04, Mercury 2009–04

GENERAL TECH TIPS:

- This lock cylinder kit consists of an ignition lock with keys and a programming tool. There are 3 keys provided in this kit: 2 transponder security keys and 1 non-transponder key. The 2 transponder keys will need to be programmed to your car to avoid a no-start condition.

**PLEASE WEAR
SAFETY GLASSES!**

NOTE: This part comes with a retaining ring clip. This clip is not needed for vehicles 2008 and newer.

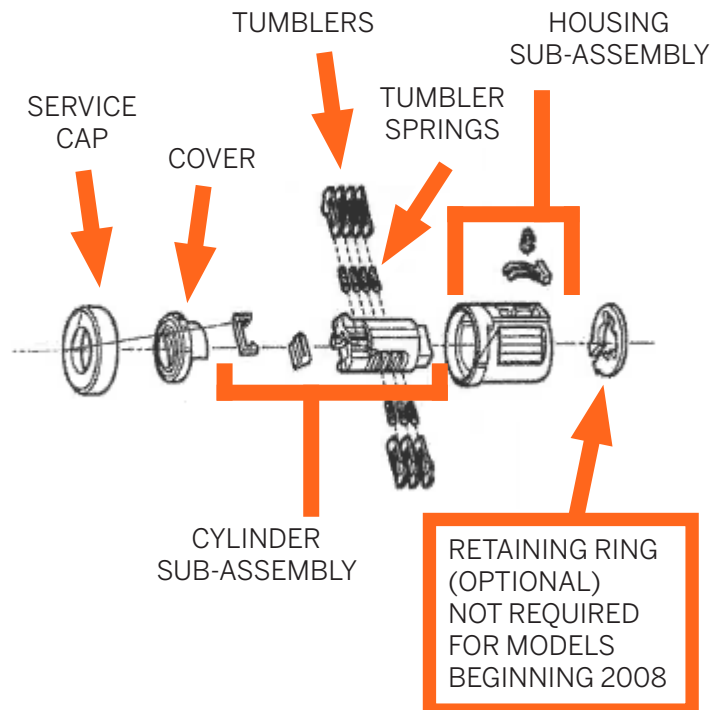

Disclaimer:


Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

Removal Instructions

STEP 1: Disconnect the battery.

STEP 2: Remove the bottom column shroud screw and remove shroud. **NOTE:** Shroud removal may vary among models.

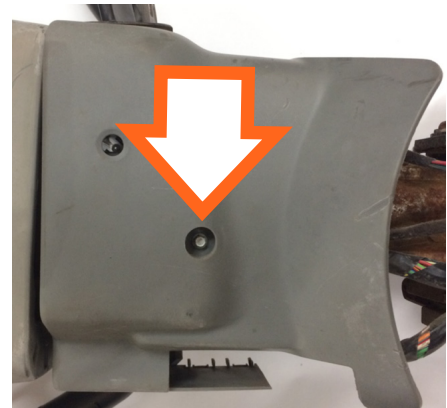

STEP 3: If equipped, gently pry the shifter lever dust cover away from the column.




Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.


REMOVAL/INSTALL INSTRUCTIONS: IGNITION LOCK CYLINDER

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

STEP 4: Gently pry the lower shroud apart from upper shroud and remove from the column. The upper shroud will remain on column, do not remove.

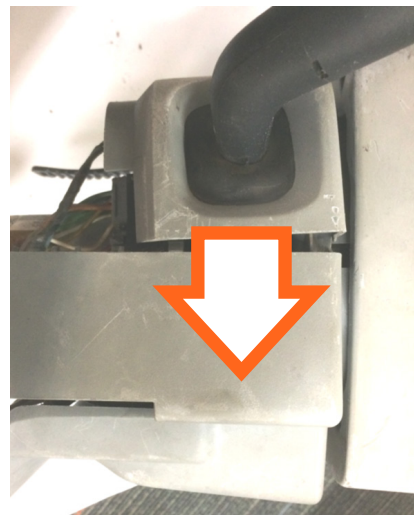

STEP 4a: The lower shroud end flanges may be caught in steering wheel. Gently pull down and away from behind the steering wheel to assist in the removal. The steering wheel may need to be rotated to help ease the removal. **NOTE:** The column shrouds may appear different as the configuration may vary among models and years.

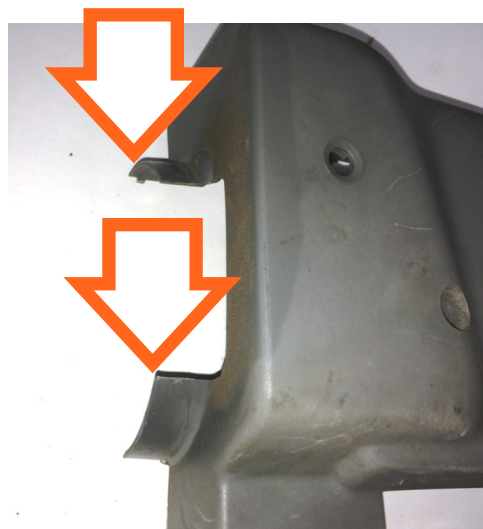

STEP 5: Remove the lower dash trim panel for ease of shroud removal, if needed.



Disclaimer:


Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

REMOVAL/INSTALL INSTRUCTIONS: IGNITION LOCK CYLINDER

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.


STEP 6: Some models may require the steering wheel to be rotated to help aid in the shroud removal.

STEP 7: Remove the security receiver ring from the lock housing by removing the retaining screw.

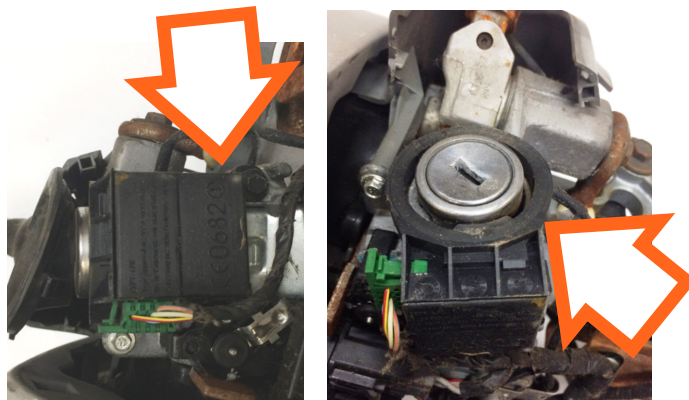

STEP 8: Rotate the lock cylinder to the run position.

STEP 9: Using a small screwdriver or suitable tool, depress the ignition lock release tab and pull the ignition lock from the column.

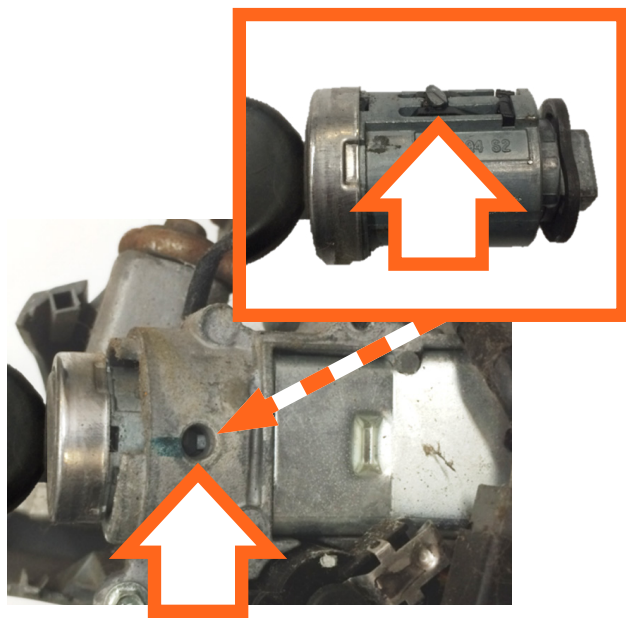

Disclaimer:


Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

Installation Instructions

STEP 1: Install the new lock into the column.

STEP 2: Reinstall the security receiver ring and the retaining screw.

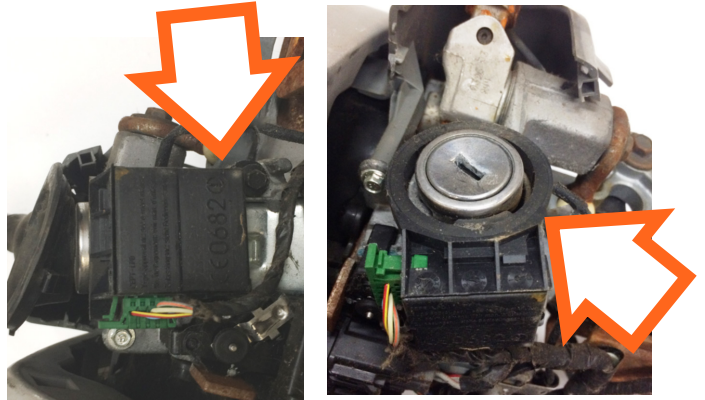

STEP 3: If equipped, reinstall the shifter lever dust cover.

STEP 4: Reinstall the lower shroud and the retaining screw.

STEP 5: Verify there is free rotation of new lock cylinder.

STEP 6: Reconnect negative battery cable and program new keys using the following key programming instructions.

Key Programming

STEP 1: Remove all keys from the ring and separate them from each other.

STEP 2: Plug the programmer into the OBD2 port. (The OBD2 port is located under the dash by brake pedal). Wait for a beep.



Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

STEP 3: Insert the non-transponder key into the new lock while simultaneously holding the original key up against the non-transponder key and the lock in the orientation shown. Turn the key to the ON position without starting, and wait for programmer to beep.

NOTE: Do not hold original key next to the column or ignition after Step 3, as this will cause a programming failure.



STEP 4: Insert the first new transponder key. Turn the key to the ON position but do not start vehicle. Wait for the programmer to beep twice.

STEP 5: The programmer will begin a 10 minute security access wait. The programmer LED will flash.

STEP 6: The programmer will beep twice when security access is obtained.

STEP 7: Cycle the first new key from ON to OFF back to ON.

STEP 8: Wait for the programmer to beep once, then the turn key to the off position and remove.

Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

STEP 9: Insert the second new transponder key and turn to ON position.

STEP 10: The programmer will beep 3 times when programming is complete.

STEP 11: Both transponder keys are now programmed; the non-transponder key can be discarded.

Still need help?
Please call our Technical Support team for assistance
from our team of certified automotive experts.
1-800-523-2492

Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.