



**1** Make sure the AC mains plug is not connected



**2** Attach the red (+) battery clip to the red (+) post on the battery



**3** Attach the black (-) battery clip to the black (-) post on the battery



**4** Connect plug to AC mains power



**5** The battery is charged when the 'Fully Charged' LED is light



**6** Disconnect AC mains plug



**7** After charging disconnect the red (+) positive clip followed by the black (-) clip



## RCB 106

Output Current:  
6amp (RMS)  
4amp (DC)

Input Voltage:  
220-240v AC

Output Voltage:  
12v DC

Minimum Battery  
Capacity: 20AH

Maximum Battery  
Capacity: 70AH

Warning: Read instructions carefully before charging.  
Charge in a well ventilated area.

**RING**  
Automotive

Distributed by: Ring Automotive Limited Gelderd Road, Leeds, England LS12 6NA  
Tel: +44 (0)113 213 2000 Fax: +44 (0)113 231 0266  
Email: autosales@ringautomotive.co.uk Web: www.ringautomotive.co.uk

