

SENCOR®

SWK 1595BK



GLASS VARIABLE TEMPERATURE ELECTRIC KETTLE

Translation of the original manual

 
 




 
SENCOR®

SWK 1595BK



A

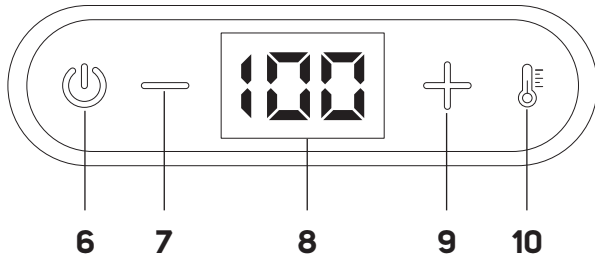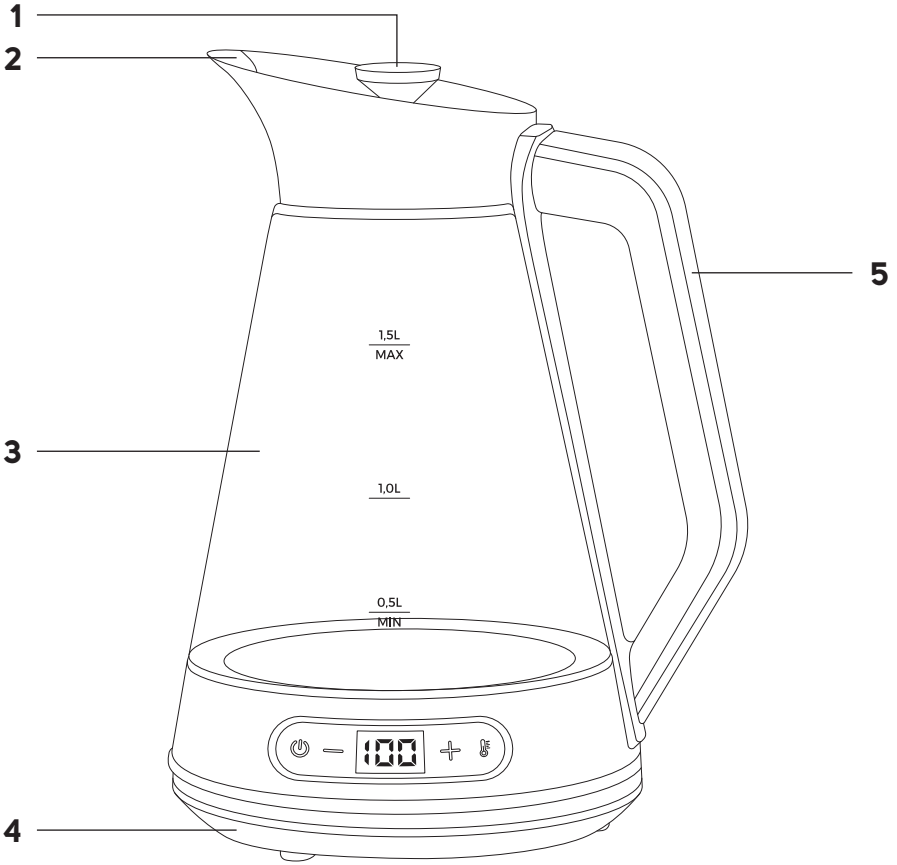

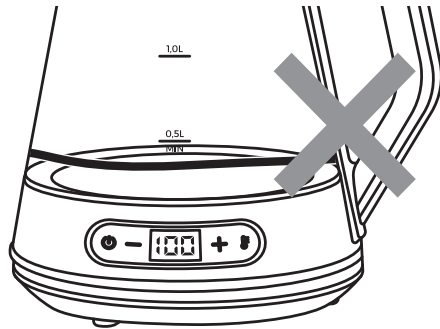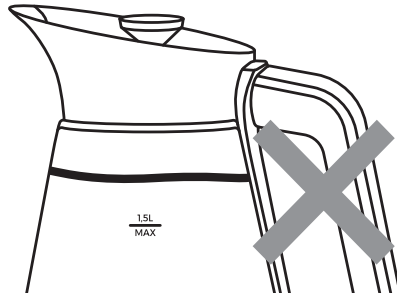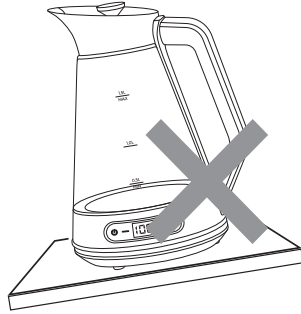

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and user maintenance shall not be done by children unless they are older than 8 years and supervised.
- Keep the appliance and its power cord out of reach of children younger than 8 years of age.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cord is damaged.
- This appliance is intended for household use. It is also suitable for personal non-commercial use in spaces such as:
 - kitchenettes in stores, offices and other workplaces;
 - spaces in agriculture;
 - hotels, motels and other residential spaces;
 - bed and breakfast establishments.
- Do not submerge the kettle or its base in water or another liquid.

- If the kettle is overfilled, hot water may splash out.



WARNING:

Do not open the lid while the water is boiling.



CAUTION:

Position the lid so that the steam is directed away from the handle.

- Use the kettle only with the supplied base. Do not use the base with other types of appliances.



CAUTION:

Make sure the appliance is switched off before removing it from the base.



WARNING:

Prevent the plug from getting wet.

- Rinse the inside of the kettle with clean water. Follow the cleaning instructions in the “Cleaning and Maintenance” section.



WARNING:

Incorrect use may lead to injury.


- The surface of the heating element contains residual heat after use. Do not touch the hot surface.



WARNING:

Hot surface of the lid!

The lid gets hot while using and it can cause severe burns if not handled properly. It is recommended wearing protective kitchen gloves.

- Before connecting the kettle to power, make sure that its power ratings match those of the wall socket.
- Connect the kettle only to a properly grounded socket.
- Do not place the kettle on windowsills, sink drain trays or unstable surfaces. Always place it on a stable, flat and dry surface.
- Do not place the kettle on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.
- Never use the kettle in the near vicinity of a bath, shower or swimming pool.
- Only use the kettle to heat up drinking water. Do not use it to warm up other liquids or food.
- Do not fill the kettle with water when placed on the base. Remove the kettle from its base before filling. When filling, make sure that the water level covers at least the minimum mark and does not exceed the maximum mark.
- Before turning the kettle on, make sure that the lid is closed properly.
- Do not turn on the kettle when it is empty. Incorrect use may negatively affect the appliance's lifetime. In case of accidental start-up without water, the kettle is equipped with a safety lock to protect it from damage.
- Use the handle for lifting and carrying the kettle.
- Take great care to avoid scalding with boiling water or steam while pouring out water from the kettle.
- Do not pour ice-cold water into the kettle when it is hot.
- The operation of the kettle can be interrupted at any time by pressing the button  or by lifting the kettle from the base and putting it back on the base.
- Always turn off the kettle and disconnect it from the power socket if it's not to be used or if it's to be left unattended or before moving or cleaning it.
- Unplug the kettle from the power socket by pulling the plug, not the cord. Otherwise, damage to the power cord or the socket could occur.
- To avoid the risk of electric shock, do not repair and/or make any adjustments to the electric kettle by yourselves. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

Prevention of Household Injuries

- Heated foods, hot or boiling liquids present a high risk for children, and even light burns can be serious. Follow the basic rules for accident prevention in the household and take extra care if children are near such foods or liquids, or explain to them the risks associated with heated foods or liquids.
- If a burn or scald occurs, start rinsing the affected area with a stream of cold water and seek medical help if necessary.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



This product meets all the basic requirements of the applicable EU directives.





This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.



This symbol warns of the hot surface of the lid during use.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

DESCRIPTION OF THE KETTLE

- | | |
|--|--|
| A1 Kettle lid with handle | A7 – button to decrease temperature |
| A2 Spout | A8 Numeric display |
| A3 Glass kettle body with water level marks | A9 + button to increase temperature |
| A4 Base with a central connector | A10 Button  to select the temperature for water heating and Keep Warm function |
| A5 Kettle handle | |
| A6  button to switch the kettle on/off | |

INTENDED USE

- The SWK 1595BK kettle is designed to heat up drinking water to your chosen temperature. At the same time, it is possible to activate the keep warm function, where the kettle will maintain the set temperature for a maximum of 2 hours.

BEFORE FIRST USE OF THE KETTLE

- Remove all wrapping material from the kettle and its base. Remove the protective foil from the display. Check that the kettle and its accessories are not damaged.
- Fill the kettle with clean water up to the maximum water mark. Boil the water and empty the contents of the kettle. To boil water in the kettle, please follow the instructions in the chapter **USING YOUR KETTLE**. Repeat this process 2 to 3 times.
- Now the kettle is ready for use.

USING YOUR KETTLE

1. Set the desired length of the power cord and push it into the groove in the base. Place the base on a stable, even and clean surface.
2. Take hold of the lid by the handle and remove it. Fill the kettle with the required amount of water. The water level must reach at least the minimum mark, but must not exceed the maximum mark. The marks are placed inside the kettle. After filling the kettle, attach the lid properly.



Caution:

Do not fill the kettle when placed on the base, not even through the spout.

 


Note:

 
 
Do not fill the kettle above the maximum level as water may splash out of the spout while it is boiling. Check that the lid is properly closed before plugging the fork into the power socket.

3. Place the kettle on the base. Insert the power plug into a power socket. A beep will sound and -- will appear on the display.

 


Heating water to 100 °C

- Press the  button, wait about 3 seconds and the kettle will start heating to 100 °C.
- Once the water has boiled to 100 °C, the kettle will switch off.
- Pour the boiled water into a prepared container, cup or mug. Make sure that it remains in a vertical position when it is carried, particularly if it is filled all the way up to the maximum mark.

Heating water to 40–90 °C and maintaining the selected water temperature

- Press the button  and then repeatedly the  button to set the temperature in the range from 40 to 90 °C. Wait about 3 seconds and the kettle will start heating.
- Once the water has heated to the selected temperature, the kettle will switch off and switch to keep warm mode. It will be automatically maintained in this mode for 2 hours. Then the keep warm mode will switch off.

Heating water to 100 °C and maintaining the set water temperature

- Press the  button and then  the button. Use the +/- buttons to set the desired temperature. Confirm by pressing the  button. Wait about 3 seconds and the kettle will start heating to 100 °C.
- Once the water has boiled to 100 °C, the kettle will switch off and switch to the mode of maintaining the temperature you have set. It will be automatically maintained in this mode for 2 hours. Then the mode of maintaining the temperature will be automatically switched off.

 


Caution:

Do not turn on the kettle when it is empty. The incorrect use of the kettle may negatively affect its lifetime. If you accidentally turn on the kettle without water, the thermostat will, after reaching a certain temperature, interrupt the electric circuit and turn off the kettle. It will be possible to run it again after several minutes, until the heating bottom has cooled down.



Note:

The operation of the kettle can be interrupted at any time by pressing the  button or by lifting the kettle from the base.

Temperature table

Temperature	Usage
40–50 °C	Infant milk, baby porridge, etc.
55–75 °C	Special types of tea, instant soup, etc.
80 °C	Green tea
85 °C	Oolong tea
90 °C	White tea
95 °C	Instant coffee
100 °C	Black tea

KEEP WARM FUNCTION

- This function makes it possible to maintain the set temperature in the kettle after boiling the water for a maximum of two hours.
- When the temperature sensor detects that the water temperature inside the kettle has dropped by 3 °C from the preset temperature, the kettle switches on and reheats the water to the temperature you set. As soon as the water reaches the set temperature, the kettle will turn off the water heating.

- You can use the +/- buttons to change the water temperature according to your personal preferences while the keep warm function is on.
- If the water temperature inside the kettle is higher than the set temperature, the kettle will beep and not start. The actual temperature of the water in the kettle will appear on the display.



Note:

The keep warm function is not active for a temperature of 100 °C to prevent the water from boiling out and consequently damaging the kettle.

CLEANING AND MAINTENANCE

- Before cleaning, make sure that the kettle is unplugged from the mains socket and let it cool down.



Caution:

Do not immerse the kettle, base, power cord or plug in water or any other liquid.

- To clean the external parts of the kettle use a dry cloth or a cloth dipped in a weak solution of neutral kitchen detergent.
- After applying the kitchen detergent, wipe the surface with a lightly damp cloth and then wipe dry.
- To clean the base use only a dry cloth.
- Never use thinners, abrasive cleaners, etc.

Removing Limescale Deposits

- As the lime scale deposited in the kettle may adversely affect its lifetime, remove it regularly depending on the kettle use frequency.
- In addition, by removing the lime scale, you can save electricity and shorten the water boiling time without affecting the drink taste.
- During standard use (3 to 5 times per day), we recommend water scale deposits be removed:
 - once per month in areas with hard and very hard water;
 - once every two to three months in areas with soft and medium hard water.
- To remove calcium deposits, use a commercially available scale remover, e.g. Sencor descaling agent and follow the instructions on the packaging of such agent.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

Changes to text and technical parameters are reserved.

TECHNICAL SPECIFICATIONS

Rated voltage range 220–230 V~
 Rated frequency 50/60 Hz
 Rated power input 1850–2150 W
 Capacity 1.5 l

Values provided according to Commission Regulation EU 2023/826

Off mode	
Power consumption in off mode	–
Time needed for the equipment to automatically reach off mode	–
Standby mode	
Power consumption in Standby mode	0.5 W
Time needed for the equipment to automatically reach standby mode	0 min
Networked standby mode (Wi-Fi)	
Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–





FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz