


# HORA

## WIRELESS SPEAKER

### BOC062

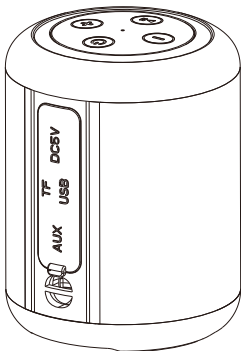

## USER MANUAL

## PRODUCT SPECIFICATIONS:

- ◆ Model: BOC062
- ◆ Bluetooth version: 5.1
- ◆ Connection Distance: 10M approx
- ◆ SNR: 85dB
- ◆ Battery: 1500mAh 3.7V 5.55Wh
- ◆ Playing time: 7H
- ◆ Charging time: 4H
- ◆ Speaker driver:  $\Phi 52\text{mm}$
- ◆ Power: 4 $\Omega$ /5W RMS
- ◆ Frequency: 150HZ-20KHZ
- ◆ Input: 5V $\overline{\text{---}}$ 1A
- ◆ Dimensions:  $\Phi 72.7 \times 96.15\text{mm}$
- ◆ Weight: 286g

## PRODUCT FEATURE:

1. Internationally advanced wireless chip and circuit design technology, supporting all wireless devices.
2. With Hi-Fi speaker, to make sure the clear and bright sound.
3. 10 meters wireless working distance, can connect all external wireless devices (mobile phone/tablet/TV) to play music.

4. With AUX line in, can be directly connected external devices , for example, tablet/TV/mobile phone.


5. Support TF card and USB card, play MP3 format audio.

6. With FM function, it can automatically search for radio stations.

7. Built-in microphone for hands-free calling.

8. Support True Wireless Stereo Dual Pairing.

## KEY AND SLOT FUNCTIONS:

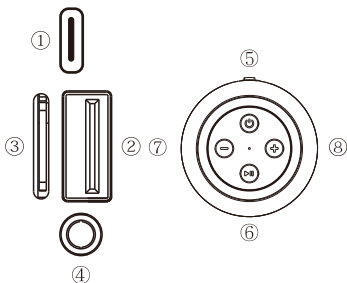

①. DC 5V Slot: Use the standard Type C charging cable for charging.

- ②. USB Slot: When inserting the USB card into the slot, it can decode and play audio in MP3/WAV format.
- ③. TF Slot: When inserting a TF card into the slot, it can decode and play audio in MP3/WAV format.
- ④. AUX Line in Slot: Use 3.5mm AUX line input through external equipment.
- ⑤. Power Switch:
  - 1) Long press for "on/off ". When play music (USB card/ TF card/FM/ Bluetooth), short press to switch USB/TF/FM /Bluetooth.(Switch to "Line In" if connected to an audio device via an AUX cable)
  - 2) Turn on the two speakers and keep them in Bluetooth mode without pairing with the mobile phone. Double-click the "ON/OFF" button on the speakers respectively. When you hear the sound prompt, it means that entered TWS connection mode. When hearing the beep again, it means the TWS function pairing is successful.
- ⑥. Play Button
  - 1) Press once: Play or pause.
  - 2) Long press: Turn off or turn on the light.

- ⑦. During music playback, press the "+" button once to increase the volume, long press the "+" button to skip to the next song.
- ⑧. During music playback, press the "-" button once to decrease the volume, long press the "-" button to return to the previous song.

## **FM Mode:**

- 1) Plug one end of the 3.5mm audio cable into the speaker.
- 2) Press "ON/OFF" button to turn on, and keep it without pairing with bluetooth.
- 3) Press the "Play" button, it will try to search for Bluetooth.
- 4) Press the "Play" button again, the Bluetooth speaker will search for FM stations in FM mode.

NOTE: In the FM mode, please plug in the AUX charging cable for better FM radio stations.

## WARRANTY STATEMENT:

All products are guaranteed to be free from defective materials and workmanship. The warranty period of all equipment provided by our company is 12 months after purchase.

If you have any questions, please contact a customer service representative for assistance.

