 


7L Automatic Feeder with 5G Wifi

Model: PF15

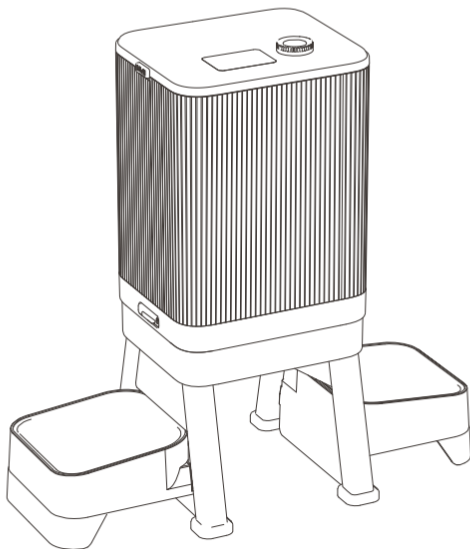

User Manual

Contents

Safety Warning	01
FCC Statement	01
Product Overview	02
Package Contents	03
Specifications	03
LED Display Overview	04
Installation Steps	05
Operating Guide	08
The Desired Amount of Kibbles	11
Disassemble for Cleaning	13
Troubleshooting	14
Warranty Information	15
GPSR Product Information	16

Safety Warning

1. This feeder is recommended for pets 6 months and older.
2. Designed for indoor use only. Avoid direct sunlight and keep away from fire or heat sources.
3. Do not immerse the main unit in water or any other liquids. Keep it dry at all times.
4. To prevent tipping, place the feeder against a wall or in a secure location.
5. Children should use the feeder only under adult supervision.
6. Replace the desiccant bag immediately if it is damaged.
7. If the feeder will not be used for an extended period, unplug the power cord and remove the batteries from the lid before storing.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

 
 
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

Product Overview

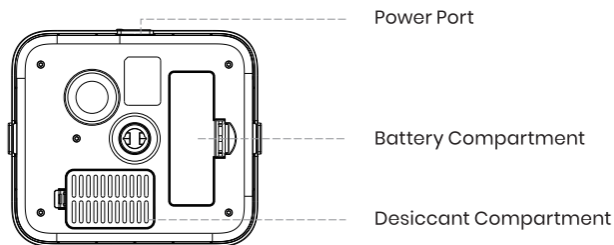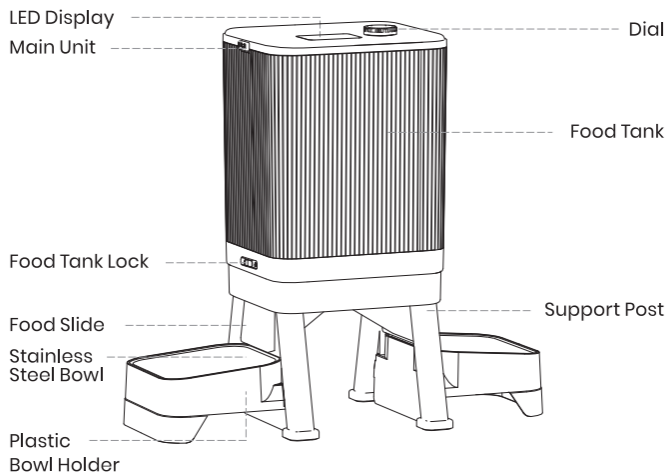


Package Contents

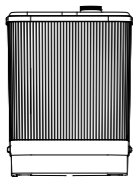 


1 × Main Unit



 2 × Plastic Bowl Holders/
Stainless Steel Bowls




1 × Power Cable

 

1 × Stirring Rod



 4 × Support
Posts



1 × Food
Slide



1x Desiccant
Bag




1x User Manual

Specifications

Product Name:	7L Automatic Feeder with 5G Wifi
Model:	PF15
Dimensions:	8.86*7.64*12.91 in (225*194*328 mm)
Capacity:	7 L / 32 Cups / 7lb
Rated Voltage:	5V = 1A
Material:	304 Stainless Steel (SUS 304) + ABS
Food Size:	≤0.5 in diameter (Dry kibble)
Power Input:	USB Type-C
Battery Type:	4 × AA batteries (Not Included)

 LED Display Overview

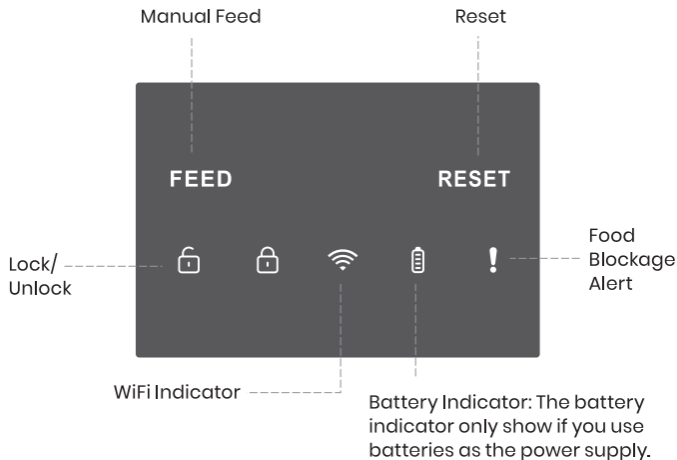

Dial to adjust numbers or press to confirm the settings

Note:

If the feeder is locked, press and hold the dial for 3 seconds to unlock.
The feeder would lock itself if you don't operate it and wait for 30 seconds.

 
 


Assembly
Video


Installation Steps

1. Remove the feeder and all accessories from the package.


2. As shown, insert Support Post A into Base Slot A and Support Post B into Base Slot B. Ensure they are securely locked.

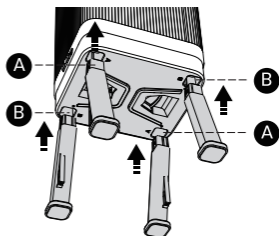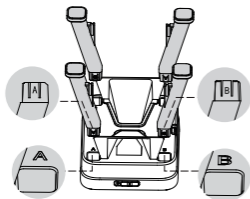

 
3. Align the Food Slide with the slots on the bottom of the base. Insert and press until securely locked.

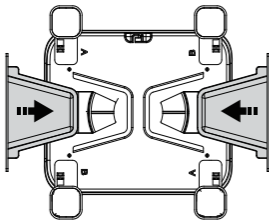

 
4. Assemble the plastic and stainless steel bowls, then insert the bowl holder into the base slot and lock it in place. (as shown, in front of the food slide)

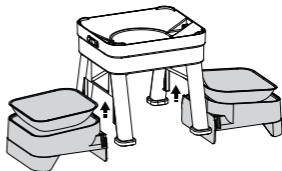

 5. Insert the Stirring Rod into the center of the Food Tank and ensure it is securely fixed.

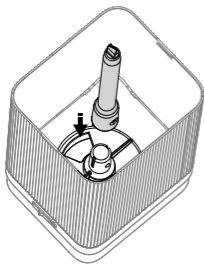

 6. Place the Food Tank onto the base in the correct orientation. Once secured, slide the Food Tank Lock to the LOCK position as shown.

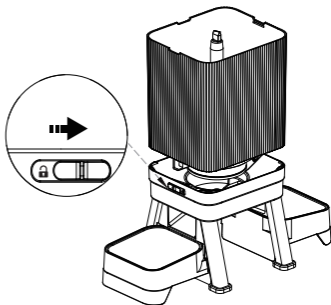


7. Fill the tank with pet dry food.

Note:

Supports dry kibble sizes 5–13 mm (0.2–0.5 in) in diameter.
Not suitable for wet or canned food.



 
5–13 mm
(0.2–0.5 in)

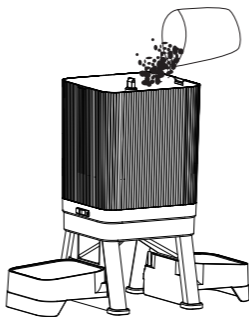


8. Insert the batteries into the battery compartment, then place the desiccant bag into the desiccant box. (Power backup: 4 x AA batteries)

Note:

 
Batteries are not included.

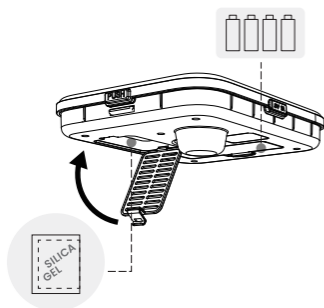

 9. Face the LED Display forward, align the buttons with the slots on the tank, and press to install.

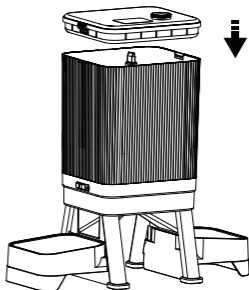

 10. Plug the power cable into the Type-C port to power the unit.

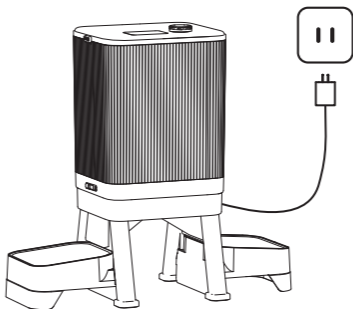

Connect to APP

The feeder supports 2.4GHz and 5GHz WiFi

Note:

When powered by batteries only, the feeder can dispense food on time according to the set schedule even during a power outage, but you won't be able to use the app unless it is plugged in.

System requirements

iPhone on iOS 9.0 or later. Smartphone on Android 4.4 or later.

1. Download and install the Smart Life App.



 
 
Smart Life



Setting Video

Note:

To proceed with the installation and sign-up process, please grant the necessary authorization. Upon entering your email address, you will receive a verification code. It is essential to enter this code before proceeding to set your account password.

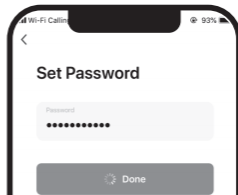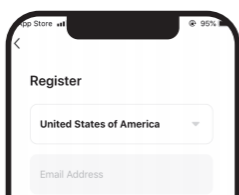


2. Turn on the Bluetooth feature on your mobile phone is turned on. Next, connect your phone to a Wi-Fi network and enable GPS location services.




3. To activate the feeder, first, turn it on. Press and hold the dial button for approximately 3 seconds to unlock it. Then, rotate the dial to the RESET icon and hold it for 5 seconds. You will notice that the WIFI icon will flash white.

Note:

 
If you are using batteries as the sole power supply for the feeder, a battery icon will be displayed on the device.

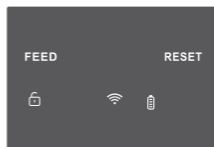

 
4. On the app, locate the "+" symbol on the right side and click on it to add a new feeder to your account.

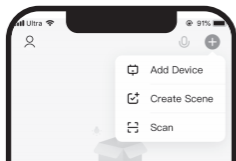

 
5. Within the app, utilize the "Add Device" feature to detect the device as depicted in the provided image. The model name of the device should be PF15. Once the device is identified, click on the "Add" button to proceed.

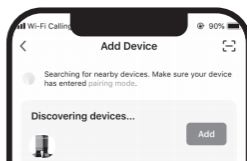

 6. When connecting the feeder for the first time or switching to a new Wi-Fi network, you will be prompted to enter the Wi-Fi password. Please enter the password in the provided field and click on the "Next" button to continue.

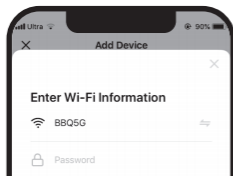

 7. Please wait patiently for the connection to be established and succeed. This may take a few moments.

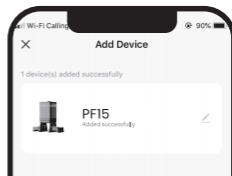

8. Once the connection is successfully established, click on the "Done" button to finalize the setup. You will notice that the WIFI icon on the device will stop blinking.

 
 
Note:

When using batteries as the sole power supply, it's important to be aware that the entire screen will turn black after 30 seconds of inactivity. To reactivate the screen, simply turn the dial as desired, and it will light up again.

Manual Feeding Setting

1. Once the connection process is completed, the mobile phone will automatically open the settings menu.



2. Choose the desired number of portions by selecting the appropriate value, and then click on the "Manual" option. In accordance with the provided image, the feeder will dispense 5 portions.

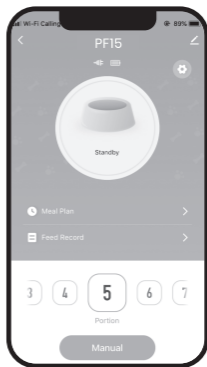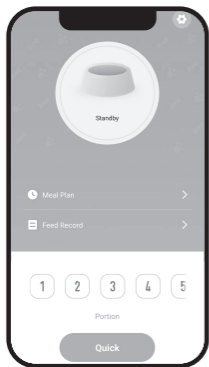


Feeding Schedule Settings

1. Click on the "Meal Plan" option to access the feeding plan setting interface. Tap on "Add" option to set feeding schedule.

  2. Select the desired number of days of the week for feeding. Then, choose the feeding time and specify the number of portions for each feeding.

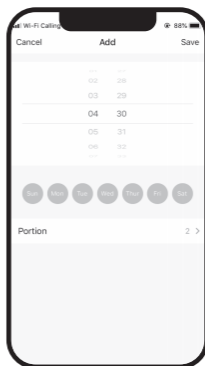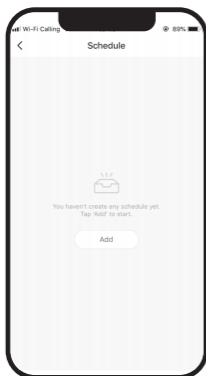

 
Once the settings are properly configured, you will obtain a schedule as illustrated below:

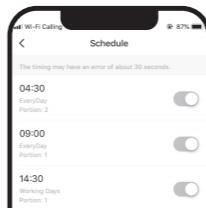

You have the flexibility to set up to 10 meals in total, with a maximum of 12 Portions per meal.


View the Feeding Log

 1. Click on the "Feeding Log" option to view the log for the current week, which will display the feeding records after each feeding session has been completed.

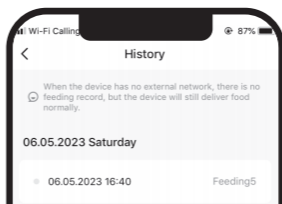

Food Jam Alerts

 When a food jam occurs, the feeder will send hourly alerts to your mobile device until the issue is resolved. You can disable these alerts in the settings.

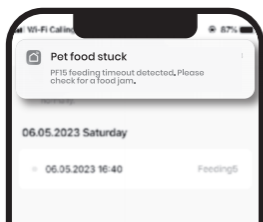


Pet food stuck

PF15 feeding timeout detected, Please check for a food jam.

Slow Feed Setting

 Click on the settings icon. From there, you have the option to switch off the indicator. Additionally, you can enable the Slow Feed switch, which will adjust the grain interval to 10 seconds per portion.


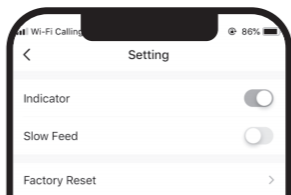


Share and Remove Devices

Share the device.


1. To enter the modification page, click on the pencil icon located in the upper right corner of the feeding interface within the app.

  2. Tap on "Share Device" to share this feeder with your family and friends.

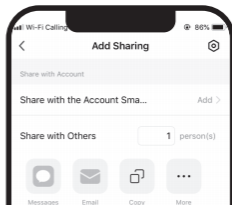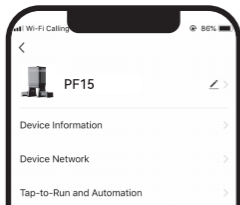

Remove devices

 On the device list screen, press and hold the desired device for 3 seconds to access the "Remove Device" screen. From there, select the device you wish to remove and click on the "Remove Device" button.

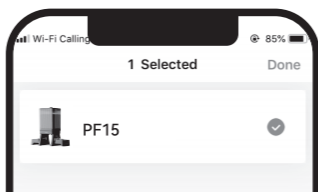

State of the icon	Indicates
Flash	Connecting to network
White+Stay on	Connected to network
White+Flash	Disconnected from the network

Battery Icon Indicator

When the battery level is low, the icon will start flashing as a warning, indicating that the batteries need to be replaced.

The Desired Amount of Kibbles

Note:

The amount of every portion is not adjustable. Pet owners should adjust the number of portions based on their pet's daily meals and appropriate amount per meal.

The size of the kibble we used in our lab: 0.4 inch. Here's the data from our experiment.

Cup	Portion	Gram
1/8	2	18
1/4	4	36
1/3	5	45
1/2	7	63
1	14	130

- The amount for each bowl

This data is for reference only. You need to test out the right amount for your pet, based on the dry food you used.

Here are the steps:

1. For example, 1/2 cup equals to 6 portions, so 1/4 cup would equal to 3 portions.



1/2 cup =



6 portions



 
1/4 cup =




3 portions

2. The PORTION number shown on the display indicates the amount for each bowl. For example, if you set the portion number to 4, the feeder will dispense 4 portions to both the left and right feeding bowls.

3. Measure the delivered kibbles. If the kibbles are measured as the amount you need, it means this setting is OK.

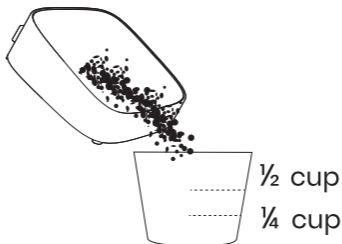


 4. Otherwise, adjust the portion number to let it get close to the desired amount.

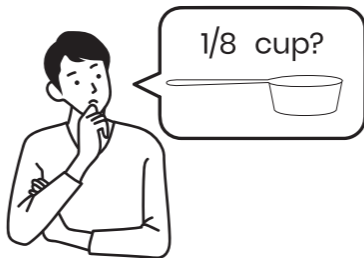


Disassemble for Cleaning

 
1. Remove batteries and unplug before cleaning.
2. Press side buttons to remove the main unit.
Empty food, remove desiccant and stirring rod.

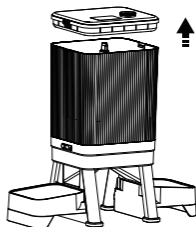

 
3. Slide the tank lock to Unlock and lift out the food tank.

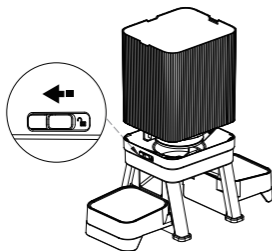

 
4. Remove the stainless steel bowls and plastic bowl holders, then pull out all support posts.

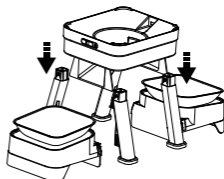

 5. Wash the food tank, support posts, stirring rod, base, stainless steel bowl, and plastic bowl holder. Air-dry or wipe dry thoroughly.

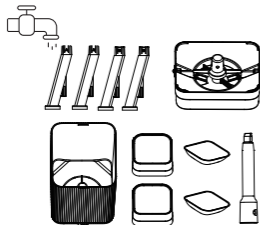

 6. Do not wash the main unit. Wipe clean with a cloth.

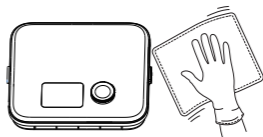

Troubleshooting

Please attach your troubleshooting and order ID, contact us via email support@oneisall.com.

We would help you solve the problem fast.

Problems	Solutions
Feeder does not work	Make sure the power cable is properly connected.
	Remove the batteries and try powering the feeder with the charging cable.
	Unplug the power cable, replace with fresh batteries, and check if it works.
Screen is unresponsive	Press and hold for 3 seconds to unlock the display.
Feeder jams or display does not turn on	Ensure the food tank and dispenser are dry, and remove any stuck kibble.
	Make sure the food is dry; do not use wet food.
	If using battery mode, try replacing with fresh batteries.
Food stuck or show E-01 error code	Make sure the kibble size less than 0.5 inch in diameter.
	Check if the tank and food outlet keeps dry.
	Check if the food keeps dry and fresh.
	If the food stop in the outlet, clean it.
	If you use without cord, replace the batteries.

Warranty Information

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

✉ support@oneisall.com

☎ +1877-522-8578(US) Mon-Fri 8am-5pm(PST)

🌐 www.oneisall.com

 


Oneisall support




@Oneisall Official

GPSR Product Information



 Name : Apex CE Specialists GmbH
Add : Grafenberger Allee 277-287, 40237 Düsseldorf, DE
Contact Person: Wells Yan
Zip Code: 40237
E-Mail : Info@apex-ce.de



Name: APEX CE SPECIALISTS LIMITED
Add: 6f East Union Street, Manchester, England, M16 9AE
Contact: Wells
Tel: +441616371080
E-Mail: Info@apex-ce.com

Product Name: 7L Automatic Feeder with 5G Wifi
Brand: Oneisall
Product Model: PF15
Input: 5V = 1A

GPSR Manufacturer Information

Business Name: Shenzhenbenfendianzishangwuyouxian Gongsi
Manufacturer's Address: CN, 518000, Guangdong Sheng, Shenzhen,
Longhua District, Minxin Community Bishui Longting Building 6 Unit, 7B
Tel: +86 185 6587 6424
E-Mail: topservice4u@hotmail.com



Made in China



Any problem you have, please contact us:
support@oneisall.com



Oneisall
support



Setting Video



Assembly
Video

ON-D255