



# DASH 10

50W Wireless Party Speaker with Dual Wireless Karaoke Mic



Thank you for purchasing the outdoor Bluetooth speaker Dash 10. To ensure correct operation, please read this user manual carefully before operation.

User Manual

### Package Contents

- Portable Wireless Speaker 1N
- Wireless Microphone 2N
- Charging Cable 1N
- User Manual 1N

### Technical Data

- Wireless standard : 5.3
- Transmission distance : 10 meters
- Output power : 50W
- Playing time : 4-6 hours
- Frequency effect : 80Hz-15KHz
- Input power : DC 5V 1A
- Battery mAh : 6000mAh
- Charging port : Type-c charging cable

### Features

1. Wireless connection
2. Memory function, breakpoint resuming.
3. Support BT/U disk/TF card/AUX playback mode.
4. Built-in lithium-ion battery.

5. Support MP3/WAV/WMA/FLAC/APE music format decoding.
6. Using high-fidelity speakers, the sound is more natural and delicate.

- ① Play/Pause
- ② On/Off button
- ③ Lightshow turn on/off, switch
- ④ Function mode switch
- ⑤ Next Song / Volume Up
- ⑥ Previous Song / Volume Down
- ⑦ TF Jack
- ⑧ Type-C Jack
- ⑨ USB Jack
- ⑩ AUX Jack

### Microphone Button

- 1
- 2
- 3
- 4
- 5

1. On/Off Button; Reverberation accompaniment switch
2. Microphone/Reverberation volume increase: increase the volume;
3. Microphone/Reverberation volume reduction: Reduce the volume;
4. Microphone mode switching: professional mode, microphone mode, and multiple sound switching;
5. TYPE-C charging line

### Button Instruction

1. Short press "▷" for Play/Pause.
2. Long press "⏻" to power on/off .
3. Long press "☀️" to turn on/off the light, and short press "☀️" to switch function modes.
4. Short press "🎤" to switch function mode;
5. Short press "➤" : Next song; Long press "➤" Volume up;
6. Short press "◀️" : Previous song; Long press "◀️" Volume down;
7. TF jack: When inserting a TF card, the default is TF card playing mode.
8. TYPE - C jack:
  1. Charging cable port, when inserting the Type-c charging cable, the device is charged by default.

2. When using the radio function, you need to insert the charging cable as a radio antenna and the radio function can be used normally.
9. USB jack: When inserting a USB flash drive, the USB playback mode is set
10. AUX jacket.

### Instructions for Microphone Buttons

1. Power Switch: Press and hold for power on/off; Click to adjust: Microphone, Reverberation, Accompaniment; Double click to play/pause the song.
2. "+" Button: Click to turn up the microphone volume and reverberation; press and hold for next song
3. "-" Button: Click to turn down the microphone volume and reverberation; press and hold for last song
4. Microphone Button: Click to switch: Professional mode, Microphone mode, Male voice to female voice, Female voice to male voice, Warcraft voice; double click to turn on/off vowel; press and hold to turn on/off MC function
5. Microphone Type-C charging port

Note : The microphone will connect to last device when powered on and it'll enter to pairing mode if no device is connect in 10 seconds

### Direction of use

1. Wireless pairing: Open the wireless device and search for Bluetooth pairing name Dash 10 connection pairing.
2. Play instructions: Bluetooth search status: the on/off light flashes quickly, approximately 0.5 seconds per time; Bluetooth pairing status: The on/off light is constantly on, while the playback status: The on/off light flashes slowly for about 1 second per time.
3. Charging indicator light: When charging, the red light is on, and when fully charged, the red light is off;
4. Prompt tone:
  1. There is a prompt tone when turning on/off;
  2. There is a prompt tone when the maximum volume is reached, and there is no tone at the minimum volume;
  3. When low power of 6.8V is detected, it prompts to shut down three times.

5. Mode switching:
  1. When turned on, it defaults to Bluetooth mode;
  2. Mode switching sequence: Bluetooth mode - FM mode - TF mode - USB mode - AUX mode, with priority given to rear insertion.
  3. Volume requirements: The default volume for startup is 70%;
  4. Power saving function: Automatically shut down after 15 minutes of inactivity.

### Troubleshooting

1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically. Please charge for 4 hours after use;
2. Cannot play music: The storage path of the music file cannot be recognized by the player, please store it in the root directory of the removable device;
3. There is no sound when connecting to the computer: the computer interface is connected incorrectly, please select the correct audio output port.

4. There is no response to the keys or the function is in disorder: try again after shutting down.
5. Reset: When the machine encounters an abnormal situation, press and hold the power button for 10 seconds.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management  
E: info@3rrecycler.com

For E-Waste & ROHS compliance refer to www.portronics.com/ewaste