



unleash your passion.

INSTRUCTION MANUAL

ELECTRIC SCISSORS
MODEL NO. E-S02

POWER VOLTAGE 3.6V
NO-LOAD SPEED 0-11000 RPM

unleash your passion.



ANTIVE

www.antivetools.com

Please read carefully the instruction manual before use!



TABLE OF CONTENTS

Warning!	03
Operation Instruction	04
Cutting Capacity for the Active™ Electric Scissors	10
General Safety regulations for Power Tools usage	11
Active™ Electric Scissors Specific Requirements	15
Inspection	17
Repair	17
Maintenance suggestions	17
Package & Accessories	18
Your Notes	19
Certificate of warranty	20

WARNING FINGERS CUTTING HAZARD!

Read all safety warnings, user manual instructions provided in the package, pictures, and provisions. Failure to follow the warnings and instructions may result in cuts, electric shock, fire, and/or serious injury.

WORK AREA AND PERSONAL SAFETY

- Prevent unintentional starting. Ensure you don't have your finger on the trigger button when you maneuver it, picking up or carrying the scissors. Carrying power tools with your finger on the switch invites accidents. Always remove the scissor shear head when not in use, and place it in the carrying bag provided.
- Not destined to be used by children under 10 years old. All above the age limit must be supervised when using the electric scissor. Always safely store it after you use it in the carrying bag provided.
- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate the electric scissor in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks that may ignite dust or fumes.
- Keep children and bystanders away while operating the scissor. Distractions can cause you to lose control and get cut.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE!**NOTE!**

The term "**power tool**" in the warnings refers to your '**Electric Cordless Scissor**'.

For more details about how to operate the Antive Electric Cordless Scissor don't hesitate to contact us:

Web: antivetools.com | E-mail: info@antivetools.com | Phone: +1321 300 4061

Operation Instruction

1. CHARGING THE ELECTRIC CORDLESS SCISSOR


(Please refer to **FIGURE 1** below)

IMPORTANT NOTE!

1. Insert the Type-C end of the charging cable into the corresponding Type-C port on the scissor. Connect the USB end of the charging cable to a 5V power adapter. Once connected, a red light will appear near the transparent lampshade, indicating the device is charging. When the red light turns green, the battery is fully charged. After charging is complete, unplug the Type-C cable from the scissor and disconnect the charger from the power outlet to conserve energy.

It is normal for the charger and the surface of the battery to feel warm during charging. The device is compatible with most standard phone chargers available on the market. In high-temperature environments or after extended use, the scissors may become hot. Do not charge the device immediately in this condition. Allow the battery to cool down before charging to prevent potential damage. Charging while the battery is overheated can shorten its lifespan or even prevent charging.

 FIGURE 1

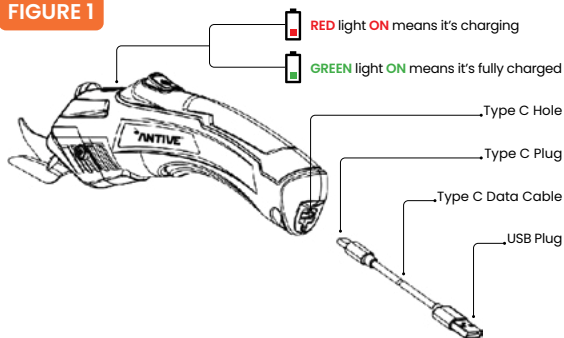


2. INSERTING OR CHANGING THE SHEAR HEAD ASSEMBLY

(Please refer to **FIGURE 2** below)

- 1 Trigger button
- 2 **START / STOP** button
- 3 Safety lock button
- 4 Shear Head assembly
- 5 Screws and screwdriver

 FIGURE 2

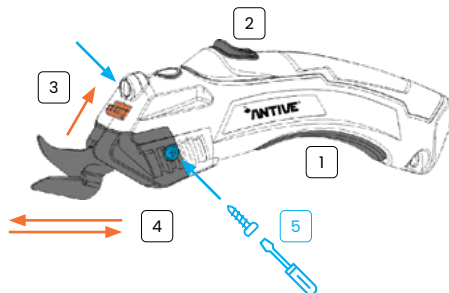

- ➔ **STEP 1)** Pull up the safety lock button (3) and insert the Shear Head assembly (4), repeat the process if you want to remove the Shear Head.
- ➔ **STEP 2)** Install the correct shear head assembly (4) by sliding it into place. Make sure to select the right one for your task – either the Silver blunt alloy or Black sharp tungsten steel. Refer to the “Max Cutting Capacity” section in the ‘Cutting Capacity for the Antive Electric Scissors’ chapter to choose the appropriate shear head for your work.
- ➔ **STEP 3)** Release the safety lock button. (3)

- ➔ **STEP 4)** To complete the installation, insert the screws (5) on both sides of the Shear Head assembly (4) and tighten them with the provided screwdriver. This reduces vibration during use. For short cuts, the screws aren't necessary, but for longer sessions, they help improve stability and reduce noise.
- ➔ **STEP 5)** After finishing your work, place the protective plastic cap on the shear head assembly to protect the blades.
- ➔ **STEP 6)** To remove the shear head assembly, slide up the safety lock button (3) and firmly pull the shear head assembly (4) out. Always store it in the provided bag with the plastic protective caps on.

3. STARTING OPERATION

(Please refer to **FIGURE 3** below)

- 1 Shear Head assembly
- 2 **START / STOP** button
- 3 Trigger button

Long press 2 seconds
to **START / STOP** the tool

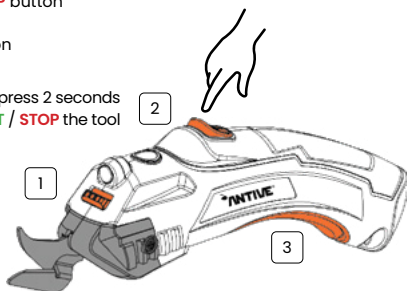 


FIGURE 3

- **STEP 1)** First, check that the machine is in good condition and ensure the shear head assembly (1) is securely attached. Also, confirm that the tool is fully charged.

IMPORTANT NOTE!

Unplug the scissors before proceeding, as the electric scissors will not operate while plugged in.

- **STEP 2)** After the inspection, press and hold the **START / STOP** button (2) for 2 seconds to power ON the tool.
- **STEP 3)** Once the machine is ON, align the opening of the scissors with the material you want to cut. Press and hold the trigger button (3) to begin cutting, and guide the electric scissors forward, following a straight line or curve based on your guidelines. Release the trigger button (3) when you have finished cutting.
- **STEP 4)** To power OFF the electric scissors, press and hold the **START / STOP** button (2) again for 2 seconds. The tool will power down.



4. LED LIGHT AND BATTERY INDICATOR

When the tool is operating normally, the circular LED indicator (located behind the circle window on top of the tool) will light up. While running, the indicator will display the current battery level using three LED lights:

GREEN: HIGH BATTERY LEVEL

YELLOW: MEDIUM BATTERY LEVEL

RED: LOW BATTERY LEVEL

When you release the trigger button or the safety start button, the LED light will turn off, indicating that the power indicator is no longer active.

To check just the battery status, simply press either the trigger button or the start button once, and the tool will display the remaining battery level.

The typical lifespan of a 3.6V Lithium-Ion battery is about two to three years, or 300 to 500 charge cycles, whichever comes first.

Rechargeable Lithium-Ion batteries have a limited lifespan and will gradually lose their ability to hold a charge over time.

This process (aging) is irreversible. As the battery ages, the run time will decrease accordingly. Lithium-ion batteries also self-discharge slowly when not in use or during storage. It is recommended to routinely check the battery's charge status.

Please refer to the table below for detailed information on checking battery power status and instructions for charging the battery.



State of the LED's	Approximate remaining battery power status
The GREEN Color Light is ON	≥60% Battery Power
The YELLOW Color Light is ON	≥30% Battery Power
The RED Color Light is ON	<30% Battery Power, Needs Charging
All indicator lights out	Insufficient battery,needs charging. Full battery charging time, 3~4 hours.

Cutting Capacity for the Antive Electric Scissors

**Black Sharp****Silver Blunt**

 		Model		E-S02
		Voltage		3.6v
		No-load speed		11000/min
		Battery capacity		3.6v 2000 mAh
Maxim cutting capacity	Black Sharp Tungsten steel Shear Head	Cotton fabric	8 mm	
		Velvet, felt products, soft leather, corrugated board	6 mm	
	Silver Blunt alloy Shear Head	Plastic/ cloth carpet, PVC plastic	3 mm	
		Plant stem, vinyl-based fabrics	4 mm	
		Hard leather, hard paperboard	1,5 mm	
		Tin/ aluminium	0,8 mm	
		Charging power (Type C cable)		Input: 100-240V~ 50/60 Hz
Output: 5V 1000 mA				
Frontal LED Light		100 lm		

NOTE!

We at Antive are constantly trying to improve the quality of our products and may change the appearance, parameters, and certain constructs of our products without prior notice or user manual modifications. But this won't affect the functionality of your received product or its intended use and proven capacities.

The next pictures from the user manual are for reference only and will apply to your Electric Cordless Scissors functionality and instructions. If you don't understand some of the guidance or you need more information, don't hesitate to contact us.

General Safety regulations for Power Tools usage



Before operating the Power Tool of the Electric Cordless Scissor, read first all safety warnings, provided in the next lines, pictures, and provisions on, or from the package. Failure to follow the warnings and instructions may result in cuts, electric shock, fire, and/or serious injury.

Keep safe this user manual, and save all warnings and instructions for your future reference.

The term "power tool" in the warnings refers to your electric-operated (corded) power tool or battery-operated (cordless) power tool such as your Electric Cordless Scissor.

WORK AREA SAFETY



- a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks that may ignite dust or fumes.
- c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- d) Always safely store the Electric Cordless Scissor after you use it in the carrying bag provided.

ELECTRICAL SAFETY



- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not expose the Electric Cordless Scissors to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.



- d) Do not abuse the cord of the Charger. Never use the cord for carrying, pulling, or unplugging the power tool. Keep the cord away from heat, oil, sharp edges, or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating an Electric Cordless Scissor outdoors, use an extension cord suitable for outdoor use. The use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. The use of a RCD reduces the risk of electric shock.

NOTE!

The term "residual current device (RCD)" can be replaced by the term "ground fault circuit breaker (GFCI)" or "ground leakage circuit breaker (ELCB)".

PERSONAL SAFETY


- a) Prevent unintentional starting. Ensure you don't have your finger on the trigger button when you maneuver it, picking up or carrying the scissors. Carrying power tools with your finger on the switch invites accidents. Always remove the scissor shear head when not in use, and place it in the carrying bag provided.
- b) Not destined to be used by children under 10 years old. All above the age limit must be supervised when using the electric scissor. Always safely store it after you use it in the carrying bag provided.
- c) Stay alert, watch what you are doing, and use common sense when operating a power tool especially an Electric Cordless Scissor. Do not use a power tool while you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury and serious cuts.
- d) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust masks, non-skid safety shoes, hard hats, or hearing protection used for appropriate conditions will reduce personal injuries.
- e) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- f) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- g) Dress properly. Do not wear loose clothing or jewelry.



Keep your hair, clothing, and gloves away from moving parts.

Loose clothes, jewelry, or long hair can be caught in moving parts.

h) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. The use of dust collection can reduce dust-related hazards.

i) Do not let the familiarity of frequent use of a tool stop you from following safety guidelines. Careless action can cause serious injury in an instant.

If you need more info don't hesitate to contact us.

ELECTRIC CORDLESS SCISSOR USE AND CARE



a) Do not force the Electric Cordless Scissor above the specific cutting ranges. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate at which it was designed.

b) Do not use the Electric Cordless Scissor if the switch does not turn on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired or replaced by a new one.

Don't hesitate to contact us if you encounter inconveniences.

c) Make sure you don't accidentally touch the on button when making any adjustments, changing accessories, or storing the Electric Cordless Scissor. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle Electric Cordless Scissors out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain the Electric Cordless Scissor. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f) Use the Electric Cordless Scissor, accessories and tool bits, etc. In accordance with these instructions, taking into account the working conditions and the work to be performed.

Use of the power tool for operations different from those intended could result in a hazardous situation.

g) Keep the handle and grip surface dry and clean without grease.

In the event of an accident, a wet handle does not guarantee a safe grip and control of the tool.

PRECAUTIONS OF ELECTRIC CORDLESS SCISSOR PRODUCTS



a) Please use only the charger from the package.

Others may lead to a fire or accidents.

b) Please keep the battery away from metal objects when unused, like paper clips, coins, keys, nails, screws, and other small metal objects. Preventing the battery from touching metal objects.

The battery short circuit may cause a fire.

c) Liquid may get out when abusing the Electric Cordless Scissor, please do not touch it. Wash with water if touched. Please ask the doctor for help if your eyes are touched. The liquid from the battery may lead to corrosion and fire.

e) Do not use damaged or modified batteries or tools.

A damaged or modified battery can have unpredictable results, causing fires, explosions, or injuries.

f) Do not expose the battery to fire or high temperatures.

Exposure of the battery to fire or temperatures above 130° C may cause an explosion.

SERVICE AND SUPPORT



a) Don't service your Electric Cordless Scissor without Antive consent. Always contact us if need of repairing or servicing.

a) Have your Electric Cordless Scissor serviced by a qualified repair person approved by Antive™, using only identical replacement parts. This will ensure that the safety of the power tools is maintained.

c) Never repair a damaged battery. The battery can only be repaired by Antive™ the manufacturer or its authorized service provider.

d) Please follow the instructions in this manual when lubricating oil and changing accessories.

e) Handle must be dry clean and oil-free.

Antive™ Electric Scissors Specific Requirements



01. The Antive™ Electric Cordless Scissor uses built-in lithium-ion batteries, and the batteries can only be charged by a charger provided by Antive™, and placed in the initial package. The use of other batteries or chargers, such as imitations, modified or other brands, carries a risk of injury and personal injury, and property damage caused by the explosion of the battery pack.
02. The charger must be connected to an appropriate AC power supply.
03. Cutting items should be in the range mentioned in the 'Max Cutting Capacity' chart from the Antive™ Electric Cordless Scissor Specifications Chapter. The cutting doesn't have to be or never should be too hard to apply, by forcing the power tool you will reduce the service life of the scissors, or even burn down the machine.
04. Before using the Electric Cordless Scissor, please check whether all parts make unusual sounds or sparks during the operation.
05. The Electric Cordless Scissors must be only used for indoor use and are prohibited in rain or water.
06. Avoid short circuits of charger connection and battery by keeping it in dry areas.
07. Only use the original Antive™ accessories, otherwise, it may cause fire, electric shock, or personal injury.
08. Only the blades provided by Antive™ are allowed to be used to facilitate the installation and using the machine. Check if the blade is sharp before operation.
09. The workpiece must be clamped or compacted, the workpiece can be clamped with a vise or other fixture, and the long workpiece should be installed horizontally and firmly.
10. When clamping the workpiece, changing the position and angle of the workpiece, and disassembling the workpiece, it is necessary to turn off the power supply and make sure that the tool is safe before proceeding.
11. During operation, pay attention to scratches or damage by scrap.
12. If the tool does not start or makes unusual noise or vibration during operation, the power supply should be switched off immediately.
13. If the charger cord is damaged, it must be replaced by Antive™.
14. Don't burn batteries or discard them in fire, which may cause explosions. Don't charge batteries that leak liquid and don't charge non-rechargeable batteries.



15. The battery may leak when the temperature is too high, or the battery is overused. If battery leaks get on your skin, wash with soap, then rinse with lemon juice and vinegar.

If contact with the eye accidentally, should immediately rinse with water, and immediately go to the hospital for examination and treatment.

16. Please recycle and utilize damaged machines, accessories, and abandoned batteries by local laws and in an environmentally friendly manner.

17. Don't place the Electric Cordless Scissors in a place where the temperature may reach or exceed 122° F (50° C). Always safely store it in the storage bag provided.

Please keep this user manual in hand. If you misplace your user manual you can contact us for a digital copy, or you can get one by following this link – www.antivetools.com/manuals

USEFUL TIPS FOR MAINTAINING THE MAXIMUM LIFETIME OF THE RECHARGEABLE BATTERY



1. Charge the batter before it is completely depleted.

When the Electric Cordless Scissor is low, please stop the tool operation and charge the battery.

2. Don't recharge the fully charged battery.

Overcharging will shorten battery life.

3. Please charge the battery at room temperature of 50° F to 104° F (10° C-40° C) and charge after the hot battery cools down.

4. If you do not need to use the tool for a long time, please charge the battery every six months.

Inspection



Before use, the user must carry out a full inspection of the power tool; We recommend the users that use the Electric Cordless Scissor to conduct a full inspection at least once a year even if the power tool isn't used a lot;

The inspection should not be made in hot and humid areas with frequent temperature changes or in areas with poor operating conditions. As a recommendation, the inspection should be conducted before the plum rain season.

Repair



Repairs for the Antive™ Electric Cordless Scissor must only be performed by an

Antive™-approved repair center. The Antive™ Electric Cordless Scissor comes with a 2-year warranty for household use and a 1-year warranty for commercial or industrial use, starting from the date of purchase. Additionally, Antive™ offers a 3-year warranty extension if you register your product. By registering, you can extend your total warranty coverage to up to 5 years for household use or 4 years for commercial or industrial use. For more information, please refer to the Certificate of Warranty section of this manual.

If you need our service support don't hesitate to contact us by email, phone, or site. (info@antivetools.com, +1 321 300 4061, www.antivetools.com). Tools returned for repair must be accompanied by a valid order ID, full name, and address of shipment.

Maintenance suggestions



1) Clean air vents. The vents of the Antive™ Electric Cordless Scissor must be kept clean. It should be cleaned regularly or at any time when a blockage occurs. 2) Check the screws. Always check whether the screw is securely fastened. If the screw is found to be loose, it should be tightened immediately to avoid accidents. 3) Clean the entire power tool with a dry cloth. Don't use water or chemical cleaning agents and other liquids to clean the machine.

NOTE!

1. Before checking or maintaining tools, be sure to remove the Shear head assembly unit, and don't turn on the power switch trigger.
2. Don't use gasoline, benzene, diluents, alcohol, or similar cleaning tools. Otherwise, the tool may become discolored, deformed, or cracked.

VARIATION OF USAGE**NOTE!**

This Electric Cordless Scissor is used for cutting cotton fabric, felt products, soft leather, corrugated board, plastic/cloth carpet, PVC plastic sheet, plant stem, hard leather, hardboard, and tin/aluminum sheet.

1. Make sure you understand the tool before you use it. Always use the correct Shear head assembly unit (black or silver) for the work you intend to do. Check chapter Specifications for the Antive™ Electric Cordless Scissor for more information on how to use the power tool.
2. Antive™ reserves the right to change specifications without prior notice.
3. Specifications and batteries may vary by each country different.

Package & Accessories**WHAT YOU'LL GET!**

- 1 × Antive™ UPGRADED Electric Cordless Scissor with an internal 3.6V 2000 mAh rechargeable Lithium Battery
- 1 × USB C Charger Cable
- 1 × Silver blunt alloy shear head with a removable protective cap
- 1 × Black sharp tungsten steel shear head with a removable protective cap
- 1 × Carrying bag
- 1 × Orange carrying wrist strap
- 1 × User manual
- 1 × Gift card
- 1 × Pair of Earplugs

If you need more information about these options, please don't hesitate to contact us.

Your notes





CERTIFICATE OF WARRANTY

This Certificate is provided on behalf of Antive Enterprise to customers who purchase the 'Electric Cordless Scissor.' The standard warranty covers 2 years for household use, starting from the day of purchase. For tools used in commercial, business, or industrial settings, the warranty is limited to 1 year, due to the higher levels of wear and tear experienced in these environments. The internal rechargeable battery, charger, and all included extra parts are also covered by the warranty, provided they are from Antive and not third-party brands.

If any manufacturing defects, material issues, or workmanship problems arise within the warranty period, Antive will repair or replace the tool free of charge, as long as it has been used and maintained according to our safety and operating instructions. Please refer to the user manual for details on proper operation, and feel free to contact us if you require assistance. Be aware that Antive reserves the right to modify the terms and conditions of the warranty policy without prior notice, so we encourage you to review the most current information on our website.

The Antive warranty covers 2 years for household use and 1 year for commercial use.

However, the warranty does not cover:

Any damage caused by misuse, neglect in usage or maintenance, accidents, exposure to extreme temperatures, acids, water, unsuitable storage, excessive impact, or transport damages.

Any damage caused by improper use or exceeding the cutting parameters outlined in the 'Electric Cordless Scissor Specifications' chapter, specifically under the 'Max Cutting Capacity' section of this User Manual.

Defects caused by spare parts, accessories, or components not made by Antive or not authorized by Antive. Normal wear and tear items such as batteries with more than 300 charges or power cable deterioration. Antive Tools that have been modified, repaired, or attempted to be repaired by anyone other than Antive-authorized service centers, or tools that have been partly or completely disassembled.

Parts repaired or replaced by an Antive-authorized service center during the warranty period will carry the remaining warranty duration. Warranty repairs do not extend or renew the original warranty period of the tool.

No entity other than Antive has the authority to change, extend, or add to the given warranty terms and conditions. These warranty terms shall be governed and interpreted in accordance with the laws of the United States, excluding the law and decree on the international sale of goods. Consumers may have additional statutory rights in their own countries, which are not restricted by these warranty terms. The warranty does not cover compensations for downtime, production loss, injuries, or property damage.

SUBMITTING A WARRANTY CLAIM

To submit a warranty repair claim, don't hesitate to contact us by email, phone, or site. (info@antivetools.com, +1 321 300 4061, www.antivetools.com) Tools returned for warranty repair must be accompanied by a valid order ID, full name, and address of shipment.

A warranty claim must be submitted with as short a delay as possible. A warranty claim must be submitted within the warranty period.

WE ARE GRATEFUL THAT YOU CHOSE THE ANTIVE ELECTRIC CORDLESS SCISSOR!

**AS A THANK YOU, WE ARE HAPPY TO OFFER YOU THE POSSIBILITY TO
EXTEND YOUR CURRENT WARRANTY PERIOD BY ANOTHER 3 YEARS
(UP TO 5 YEARS IN TOTAL FOR HOUSEHOLD USE,
AND UP TO 4 YEARS FOR COMMERCIAL USE).**

**JUST REGISTER YOUR PRODUCT BY FOLLOWING THE INSTRUCTIONS
INCLUDED ON THE CARD YOU RECEIVED IN YOUR PACKAGE.**

AND DON'T HESITATE TO CONTACT US FOR ANY SUPPORT OR INQUIRIES.



CONTACT INFO

@antive_tools f Antive d antive_tools X antive_tools

www.antivetools.com ✉ info@antivetools.com ☎ +1 321 300 4061



 **ANTIVE**
unleash your passion.