



Tablet computer series

The user manual

Attention:	2
1. Desk:	3
1.1 Touch panel	3
1.2 POWER	3
1.3 BACK	3
1.4 MIC	4
1.5 Volume +, Volume-	4
1.6 earphone jack	4
1.7 Video output interface	4
1.8 TF card	4
1.9 Mini USB	4
1.10 DC Adapter	4
1.11 Recovery	4
2. First use	4
2.1 Battery management and charge	4
2.2 Connection with PC	5
3. Equipment operation interface	5
3.1 Main interface describe	5
3.2 status bar describe	7
3.3 Use touch panel	7
4. Equipment basic set	8
4.1 Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds	9
4.2 Application	10
4.3 Privacy	10
4.4 Storage	11
4.5. Language & keyboard	11
4.6. Date & time setting	12
4.7 Developer options	12
4.8 About tablet	13
5. Apps Install and manage	13
5.1 App installer	13
6. Problem solution	14
6.1 Device can't to open	14
6.2 After startup the screen or the opening picture has been appear , the the device appear shutdown	14
6.3 Can copy file or paly music and so on	14

## Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

 
- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge In the following condition,
  - A、 The battery power ICONS shows have no power
  - B、 The system automatically shut off, startup after power off soon
  - C、 Operation buttons no response
  - D、 The machine that the top right corner show red icons
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol、 Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street,
- USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

**【 Remark 】** All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

## 1. Desk:

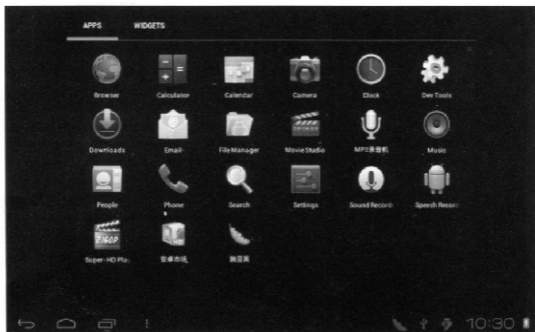

### 1.1 Touch panel

Capacitive touch panel: In The Operation, to click,dragging on the touch panel

### 1.2 POWER

startup: Long Press and hold the power button, the system will enter the main interface

shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Clিকে"ok". you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1.When power is empty,system will shut down automatically.

2.Illegal turn off the device,restart will scan and restore the disk,it may take longer time to enter into system

### 1.3 BACK

Short Press BACK button will return the last interface,

## 1.4 MIC

Recording

## 1.5 Volume +, Volume-

the buttons on top Volume +, Volume-achieve changes in the volume.

## 1.6 earphone jack

3.5 mm standard earphone jack

## 1.7 Video output interface

HDMI output interface

## 1.8 TF card

TF-CARD slot: external T-FLASH card

## 1.9 Mini USB

MiniUSB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

## 1.10 DC Adapter

For charging. your tablet battery

## 1.11 Recovery

When the Tablet under the condition of the crash, upgrade firmware.

## 2. First use

### 2.1 Battery management and charge

Before first use, please set the device's battery is fully charged

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

**【Remark】** : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110~240V 50/60Hz Max: 180MA.. Output: DC5.0~5.5V/1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power

before charge it

**【Remark】** : 1. If you long time don't use this Tablet, ,in order to avoid power consumption caused damage,pls charge/play the battery once a month.

 
2. After low battery shut down,connect DC adaptor,device will remind low battery,charging,need to wait some time until the battery is enough power to enter into main menu.

3. Device charging should be in standby status for reach normal charging time.

Because with device and screen consumption,it may cause longer charging time.

## 2.2 Connection with PC

U Use USB cable to connect device to PC,device will pop up the USB connection window,click Turn on USB storage to connect to PC

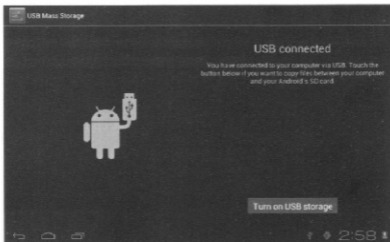


Into the load mode, you can copy, delete the file on the device and the file on the memory card.

## 3. Equipment operation interface
 
### 3.1 Main interface describe

After startup will enter the main interface

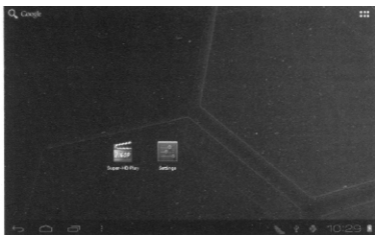


In the main interface, you can :

Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.



Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

 You touch the screen keep a time, appear the dialog box"Add yo Home screen" as shown below:

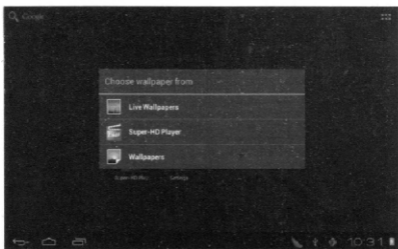


### 3.2 status bar describe






- The status bar above of the screen  
Top left display main interface software, T-Flash card, USB connection status and so on  
Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.


### 3.3 Use touch panel

Device equipped with a 7 " touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

**【Attention】** The main screen soft key  functions as the machine back key .

In different applications, by tapping the back soft key  on the bottom right corner on the touch screen, you can return to its interface on the upfloor.

In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows.

**【Remark】** : The main screen soft key  functions as the machine manu .

 


In the main interface, you can touch the icon to open the APPs


In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.


### 4. Equipment basic set

Setting: Click setting icons , enter setting interface

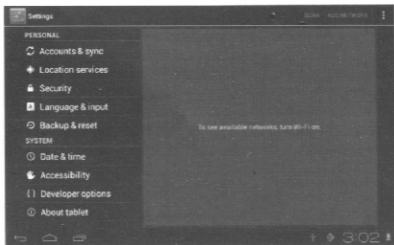


#### 4.1 Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds

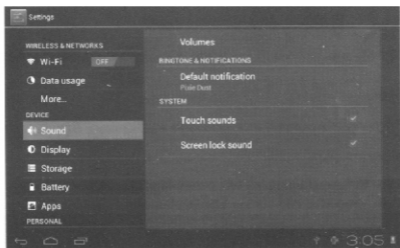 

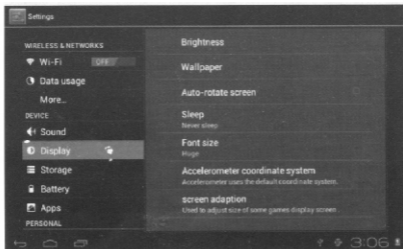 

## 4.2 Application

 
Manage applications

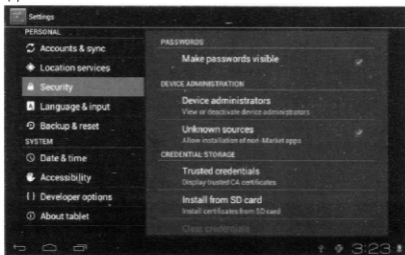


Unknown sources: Click "Unknown Sources", then click "OK"  
 Manage application: manager and uninstall Application

**【Remark】** : when you Firmware Upgrade, pls close the USB connect


How to uninstall?

 1. enter  "setting">"Application">"Manage application" And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, then you can felete the application

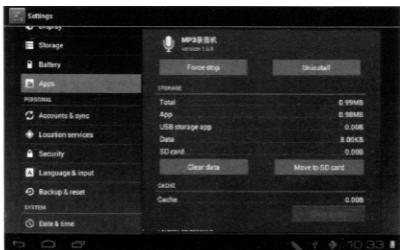


### 4.3 Privacy
 
#### Factory data reset

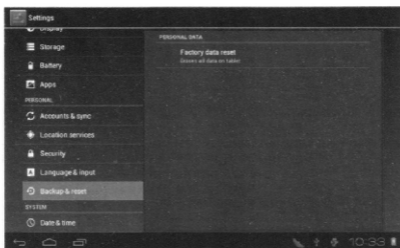

### 4.4 Storage

 
#### Remove TF card, view of the available storage space

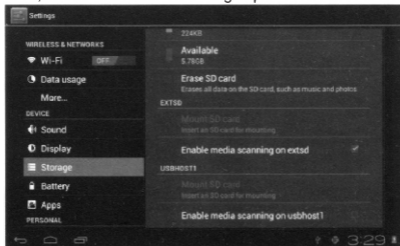

**【Remark】** : pls touch option"delete SD card", so that can safety to romeve SD card

## 4.5. Language & keyboard

 Setting: (Language), text input and automatic error correction options;

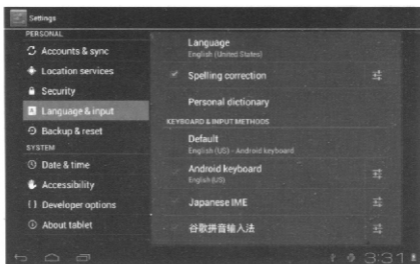

Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now manu interface just suport 14 language,

Android keyboard: Android keyboard setting

Sound on Key-press


Auto-capitalisation

Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert highlighted word


## 4.6. Date & time setting

 Set date, set time, Select time zone and select date format

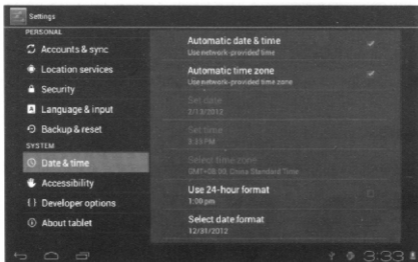


## 4.7 Developer options

 Choose USB work pattern: OTG/HOST/SLAVE.....

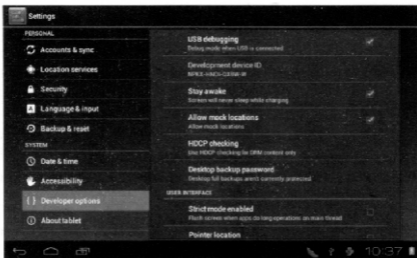

## 4.8 About tablet

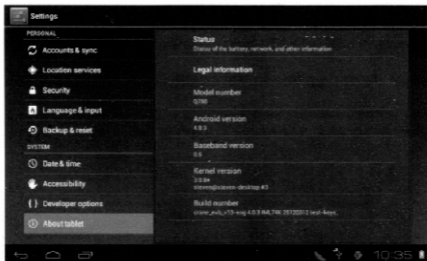 

## 5. Apps Install and manage

### 5.1 App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click Appinstaller icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some 3<sup>rd</sup> APP must install properly by memory card,downloaded 3<sup>rd</sup> party app may not install properly on device.

Manage: click manage, enter third party interface  
Click install icon, will enter Action interface

## 6. Problem solution

### 6.1 Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contacy with the supplier

### 6.2 After startup the screen or the opening picture has been appear , the the device appear shutdown

1. Power is not enough, please charge  
Headset can't hear the voice
2. Pls check the volume whether set to 0
3. Check the music file wherther damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

### 6.3 Can copy file or paly music and so on

1. Pls check between computer and device is correct connection
2. check the memory storage space is already full
3. checl the USB cable is good or not
4. USB connection is disconnected

Keep the card for  
guarantee  
to keep repair

# Guarantee

 
## User File

User name		Sex		Age	
Address					
Telephone				Zip	
purchasing address					
Retail price			Odd Numbers		
commodity name and specification			Model NO		
Dealer signature			User signature		

### Guarantee Item

1. 1 month upon date of purchase, if there is a function problem, we should offer the same item subject to goods and packing maintain perfect
2. 1 year upon date of purchase, we will guarantee to keep the goods in repair. (not including fittings)
3. Guarantee service is subject to normally using
4. All of damage by man-made (tear open the housing, tear off the sticker, unnormally using), or losing this card, we will not guarantee.



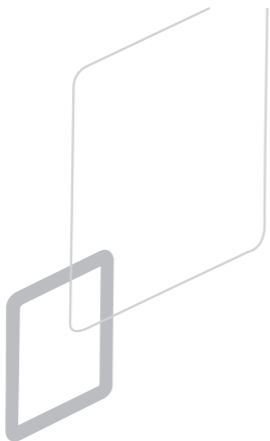

The company reserves the right to vary the product design  
Product pictures and content are for reference only,  
and specifications of the right, then without prior notice.  
specifications appearance please to sales kind prevail.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

## ISED Statement

- English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux CNR exempts de licence d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :

(1) Cet appareil ne doit pas causer d'interférences.

(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 0cm between the radiator & your body.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé.

Cet équipement doit être installé et utilisé avec une distance minimale de 0 cm entre le radiateur et votre corps.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

L'appareil destiné à fonctionner dans la bande 5150-5250 MHz est uniquement destiné à une utilisation en intérieur afin de réduire le potentiel d'interférences nuisibles aux systèmes mobiles par satellite cocanaux.