



# **NP-F Battery Adapter Plate Professional Edition**

User Manual

## **When you get your SmallRig NP-F Battery Adapter Plate Professional Edition 3168, you need to:**

**1. Check whether the products and accessories in the package are complete and the package includes:**

|                                                 |     |
|-------------------------------------------------|-----|
| NP-F Battery Adapter Plate Professional Edition | × 1 |
| 1/4"-20 Screw                                   | × 2 |
| Allen Wrench                                    | × 1 |
| USB-C to USB-C Charging Cable                   | × 1 |

### **2. How to select a suitable power supply cable**

If your camera can be powered directly via the USB-C port, then you can use the USB-C to USB-C charging cable included in the package.

If your camera cannot be powered via the USB-C port, please select the following suitable power supply cable according to your camera model:

#### **SmallRig DC5521 to NP-FW50 Dummy Battery Charging Cable 2921 (7.4V)**

Compatibility: for Sony Alpha 6000, Alpha 6100, Alpha 6400, ZV-E10, Alpha 7 II, Alpha 7S II, Alpha 7R II...

#### **SmallRig DC5521 to NP-FZ100 Dummy Battery Charging Cable 2922 (7.4V)**

Compatibility: for Sony Alpha 9 II, Alpha 9, Alpha 7R IV, Alpha 7R III, Alpha 7 III, Alpha 7 IV, Alpha 6600...

#### **SmallRig DC5521 to LP-E6 Dummy Battery Charging Cable 2919**

Compatibility: for Canon EOS R5, R5 C, R6, 5D Mark IV, 5D Mark III, 6D Mark II, 90D, 80D...

#### **SmallRig Dummy Battery EN-EL15 3247 (7.4V)**

Compatibility: for Nikon D500, D600, D610, D750, D780, D800, D810, D850, D7000, D7100, D7200, D7500, Z 5, Z 6, Z 6II, Z 7, Z 7II

#### **SmallRig Dummy Battery DMW-BLF19 3248 (7.4V)**

Compatibility: for Lumix GH3, GH4, GH5, GH5s, G9

#### **SmallRig Dummy Battery NP-W235 3246 (7.4V)**

Compatibility: for FUJIFILM X-T4

#### **SmallRig DC5525 to 2-Pin Charging Cable for BMPCC 4K/6K 2920 (12V)**

Compatibility: for BMPCC 4K, 6K, 6K Pro

### **3. Mount the 3168 Battery Adapter Plate on your device**

The Battery Adapter Plate 3168 can be fastened in place with one or two 1/4"-20 screws on the top or side of your cage, on the top of the handle, on the dual rod clamp or even anywhere with a 1/4"-20 threaded hole.

### **4. Mount the battery on top of the Battery Adapter Plate 3168 and connect the power supply cable**

You can mount NP-F batteries of various capacities on the Battery Adapter Plate, such as NP-F550, NP-F750, and NP-F970 etc.

Connect the power supply cable for your camera or other electrical device (microphone, monitor, wireless transmitter,

follow focus, etc.) via the USB-C port, DC5521 port (7.4V) or DC5525 port (12V) on the Battery Adapter Plate 3168.

## **5. Turn on your Battery Adapter Plate 3168, activate the power supply function to shoot**

When you connect all the devices and power supply cable, please press and hold the switch of the Battery Adapter Plate 3168 for 3s. When the battery indicator is on and each port has current output, you can start your shooting.

### **Caution**

- 1) If you do not press and hold the switch to enable the power supply function of the Battery Adapter Plate, there will be no current output. At this point, it is in a non-working state.
- 2) The power supply function of the Battery Adapter Plate needs to be enabled again after each battery change.

## **6. Power off to save battery power**

When you finish shooting, please press and hold the switch of the Battery Adapter Plate 3168 for 3s to disable its power supply function. At this point, it will stop the current output to save the power of your battery.

## **7. Make full use of the charging function of the Battery Adapter Plate 3168**

The Battery Adapter Plate 3168 also has the following functions:

- 1) Charge the NP-F battery via external adapter or mobile power

bank.

2) Use the NP-F battery to charge other electronic devices such as mobile phones, tablets, video game consoles, microphones, video lights, shavers, and other devices via USB-C port.