 



Function Illustration

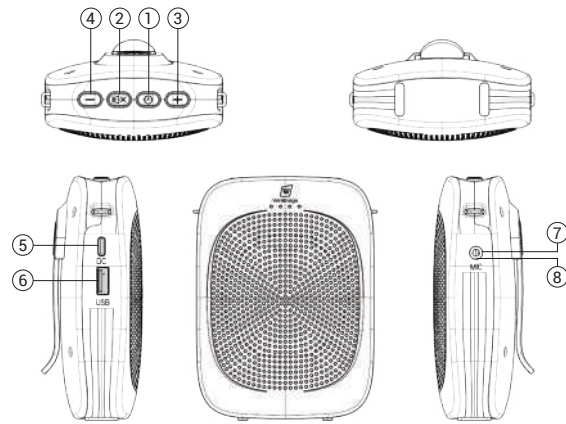

- 1. Long press to power on or power off | Double-click to turn on or turn off Bluetooth | In music model, press briefly to pause or play music.
- 2. Short press mute button to mute/recover
- 3. Short press "+" button to turn up the volume
- 4. Short press "-" button to turn down the volume
- 5. DC charging jack
- 6. USB jack
- 7. Mic jack



 - 8. Reset Button
- 9. Press and hold the power button to turn on/off the mic
- 10. Short Press "+" button to increase mic volume
- 11. Short Press "-" button to decrease mic volume
- 12. Charging Port

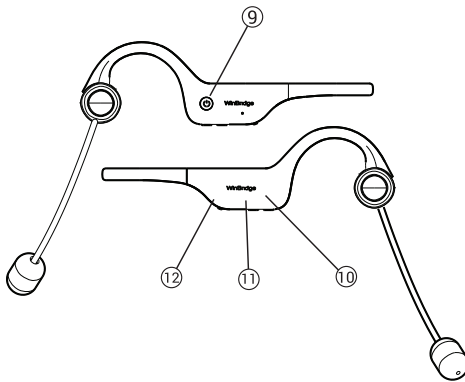

How to amplify voice

Operation is straight forward, just turn speaker and earhook mic on, they will be paired automatically, then you could amplify voice.

How to Connect Bluetooth

Long press to power on, then double-click to turn on Bluetooth, the speaker emits a "beep" prompt. Open your Bluetooth device, such as a phone, and search for Bluetooth named WB007. Click to pair, and when the pairing is successfully, the speaker will emit another "beep" prompt. Long press to switch to the next track, long press to switch to the previous track.

USB Mode

 
Insert a USB drive to automatically play audio files. Long press to switch to the next track, long press to switch to the previous track.

How to reset

If the device freezes (no response when pressing buttons after turning it on), please use something like a toothpick to press the reset button to restore it.

How to wear voice amplifier unit

Take out the voice amplifier unit, fasten the waist belt to metal hooks on both sides, then tie it on the waist or hung on your shoulder, the belt is adjustable. You can also use the back splint to clinch the voice amplifier on the waistband or trousers.

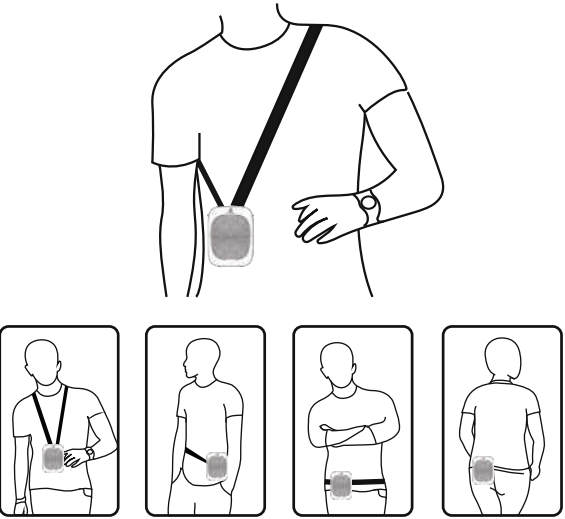

How to charge voice amplifier/earhook microphone

Please plug the type C head of charging cable into DC jack on voice amplifier/earhook mic and connect another USB head into 5V charger to charge units.

Please be noted that an adapter is not included.

Speaker Charging Status:

The battery indicator lights flash while charging, and the indicator lights keep constantly light when fully charged.

Microphone Charging Status:

The battery indicator is red while charging, and it turns off when fully charged.

Package Includes:

- 1*Voice Amplifier Unit
- 1*Earhook Microphone
- 1*Charging Cable
- 1*Waistband
- 1*Manual



After-sale service

WinBridge provide one year warranty and lifetime technical support.

Toll Free Hotline: +1 (833) 996-2881
info@wwinbridge.com
http:www.winbridgestore.com

Please be confident that seller support is just a mail away from you in case you find any difficulty, kindly do not hesitate to write back to us if you need any clarification or any kind of support.



by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference

Please Noted:

1. Please use a DC 5V plug to charge voice amplifier and microphone.
2. Plug adapter into 110-240 AC outlet, connect the charging cable end into DC 5V power input on speaker/Mic.
3. In order to extend the life of the internal battery, please charge unit regularly even if system is not being used.
4. Please DO NOT over charge the battery by leaving the system plugged in continuously. This will reduce the life of the internal rechargeable battery and cause over heating.


Technical Parameters:

Output Power	15W
Speaker Battery Capacity	2600mAh
Mic Working Time	8+ hours
Mic Battery	210mAh
Charging Current	110-240 AC
Speaker Working Time	12-15 hours
Speaker Charging Time	5 hours
Mic Charging Time	1 hours



WinBridge

 Voice Amplifier
User Manual

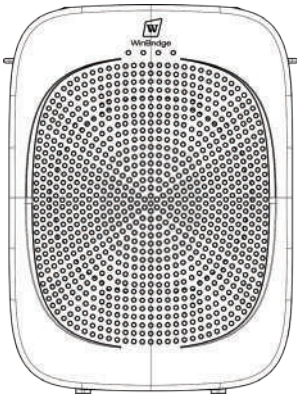

C007