



Please contact us at Amazon for a detailed manual if necessary. Thank you.
Connect Way:

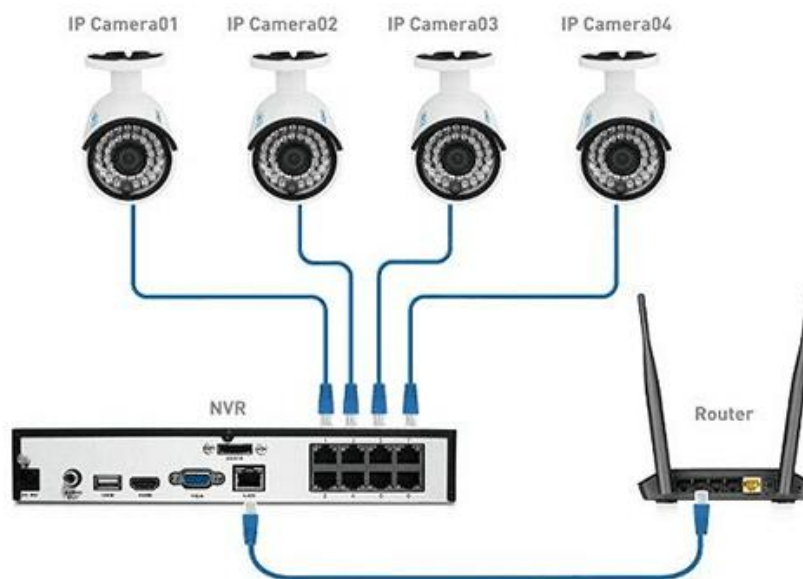

Step 1.



Connect Camera with RJ45 to POE Switch or POE Injector via network cable (Cat5 or Cat6 cables)


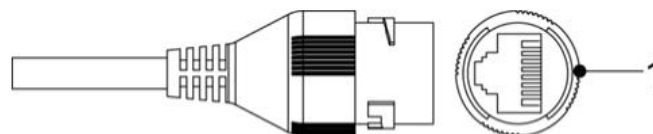




Step2.




Modify the PC's local connection IP Address, Make the IP address of the PC and the camera(192.168.1.108 is the default IP address) be in the same segment



How to find your computer's IP Address? WIN+R, Enter control panel,

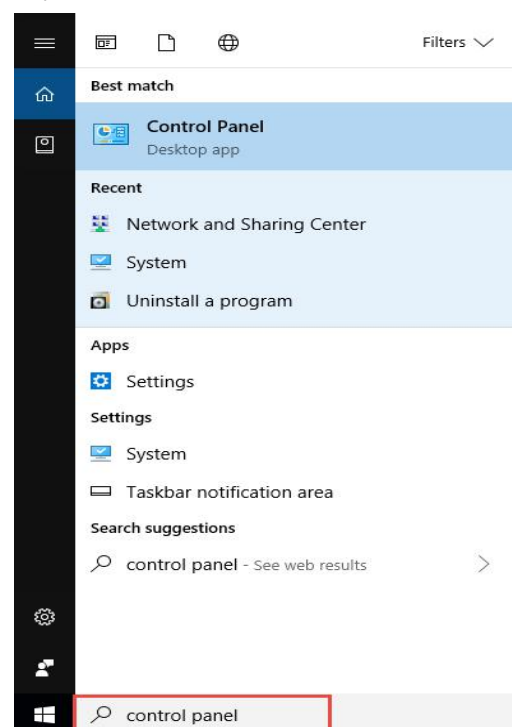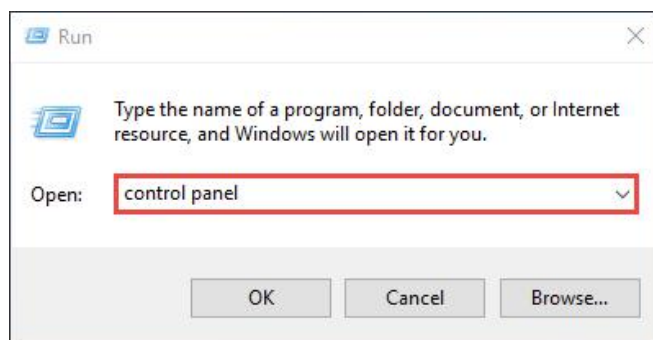

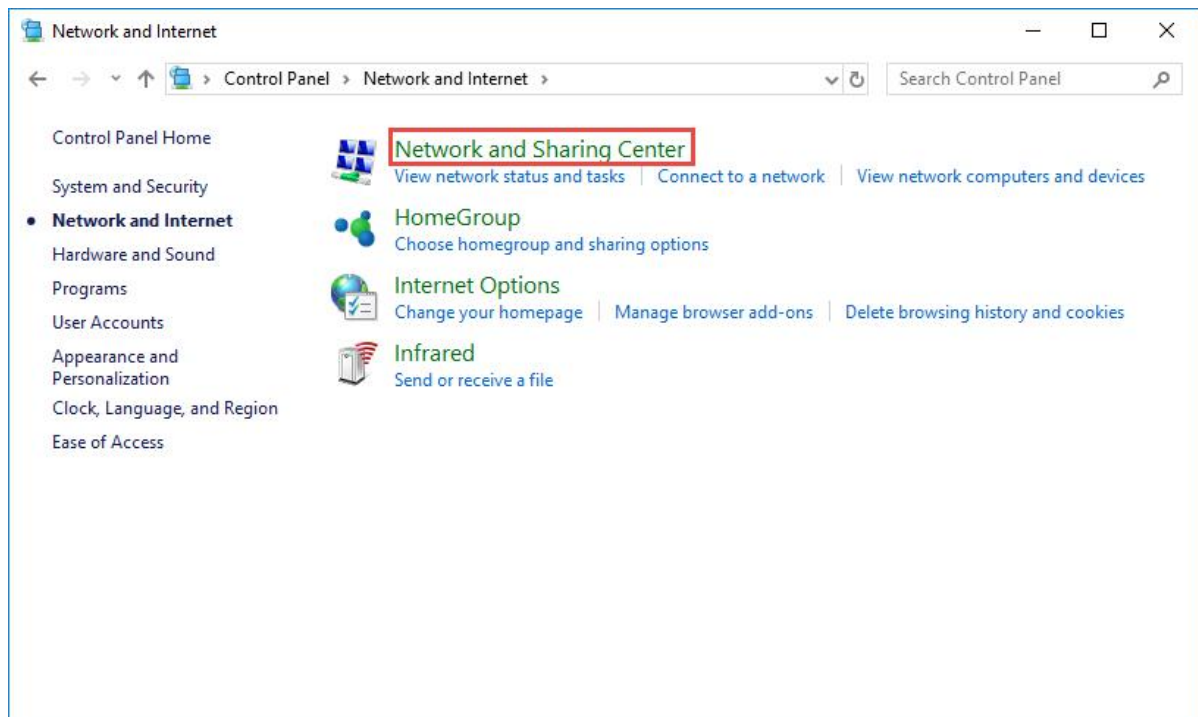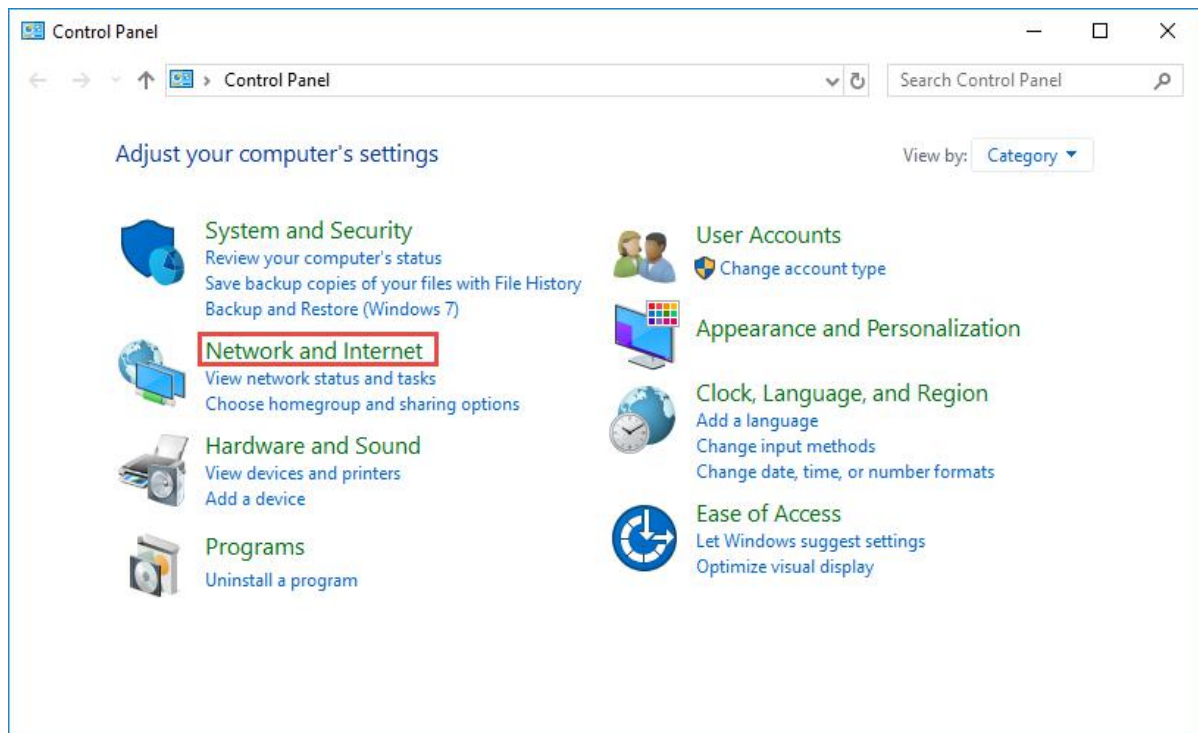

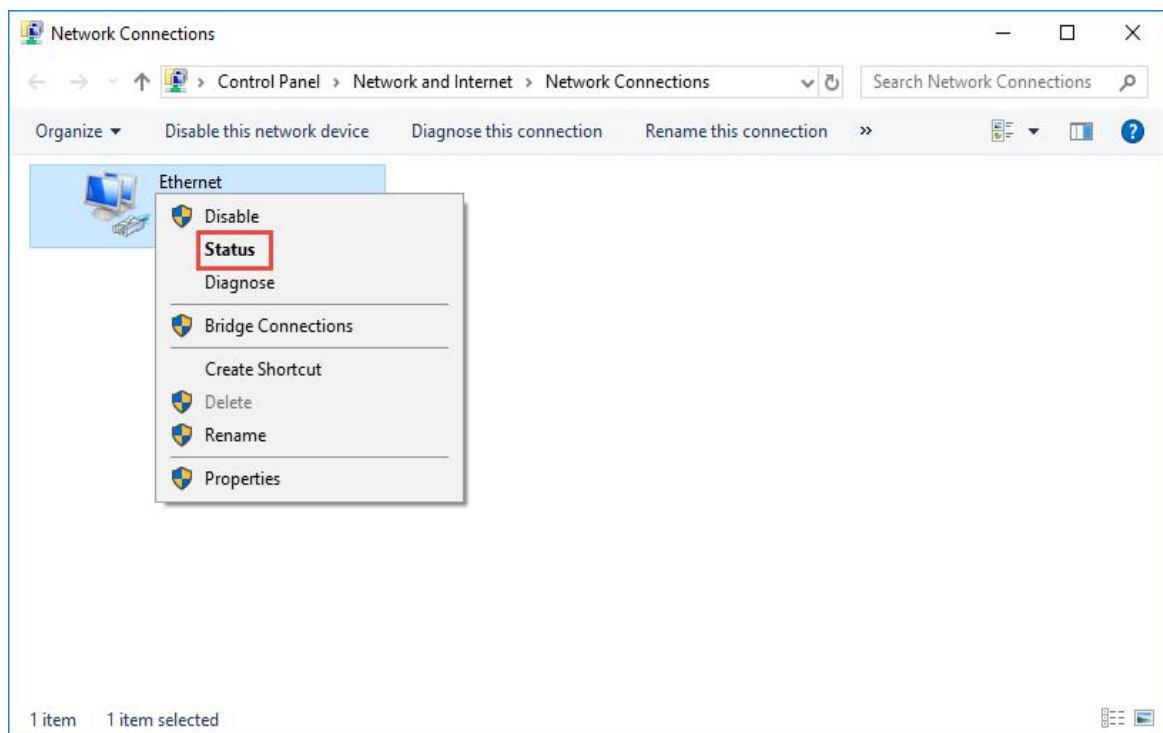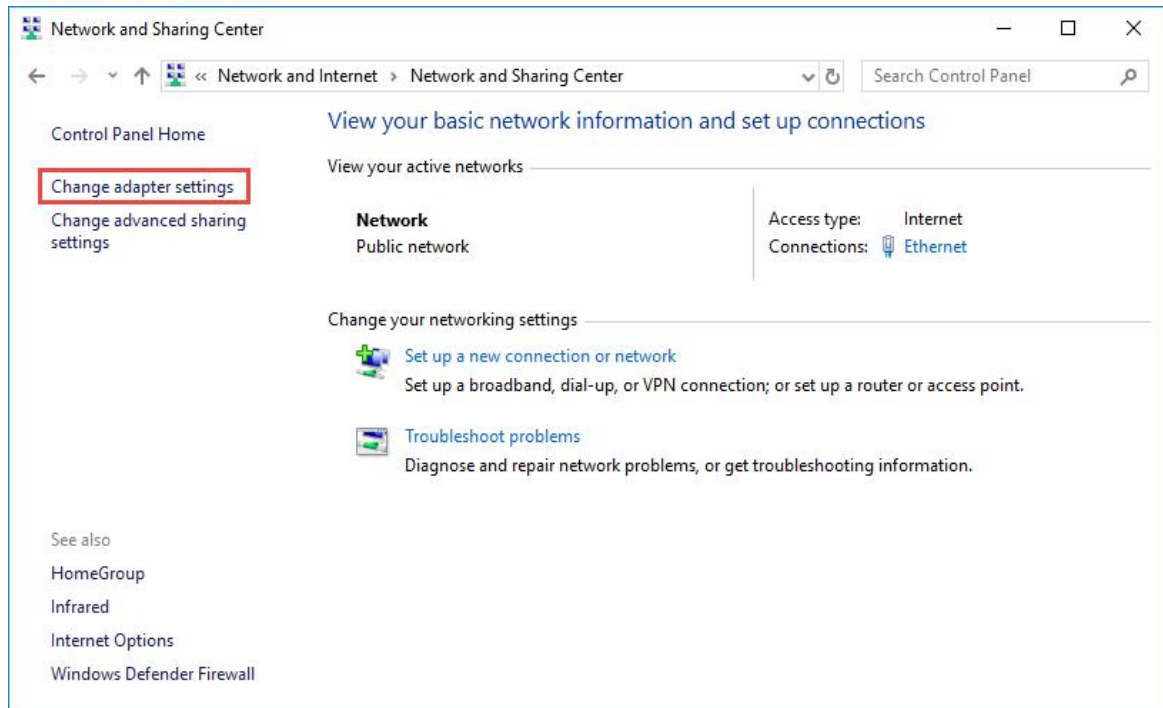


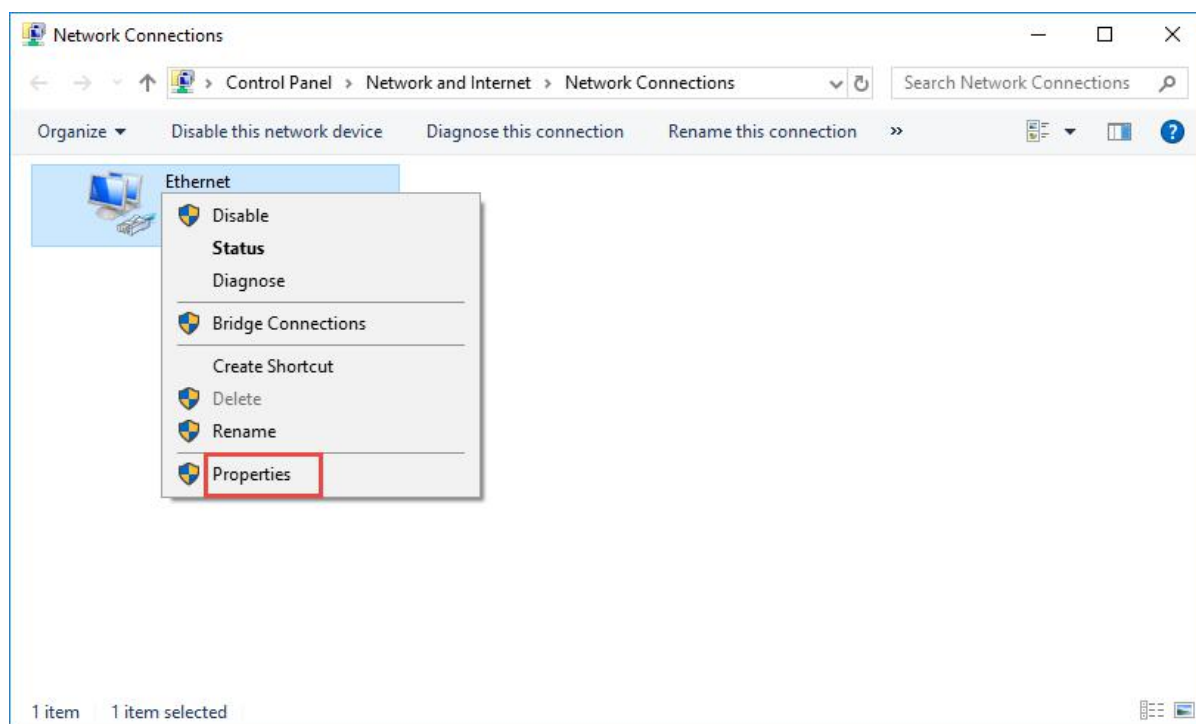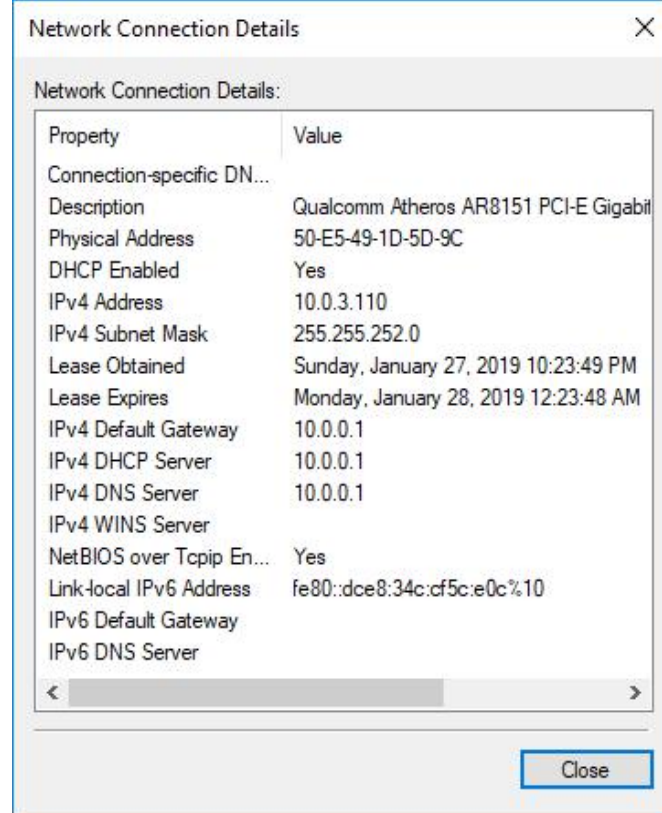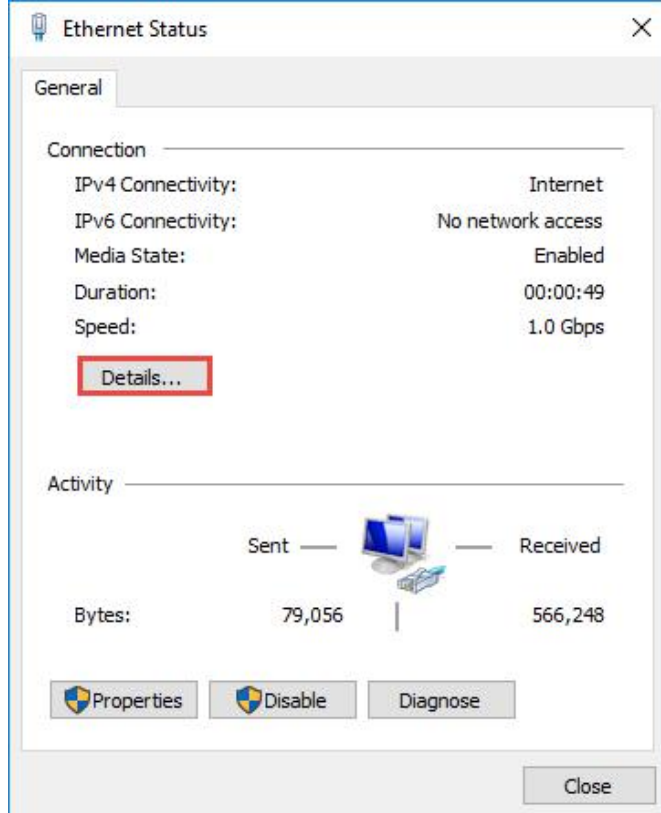

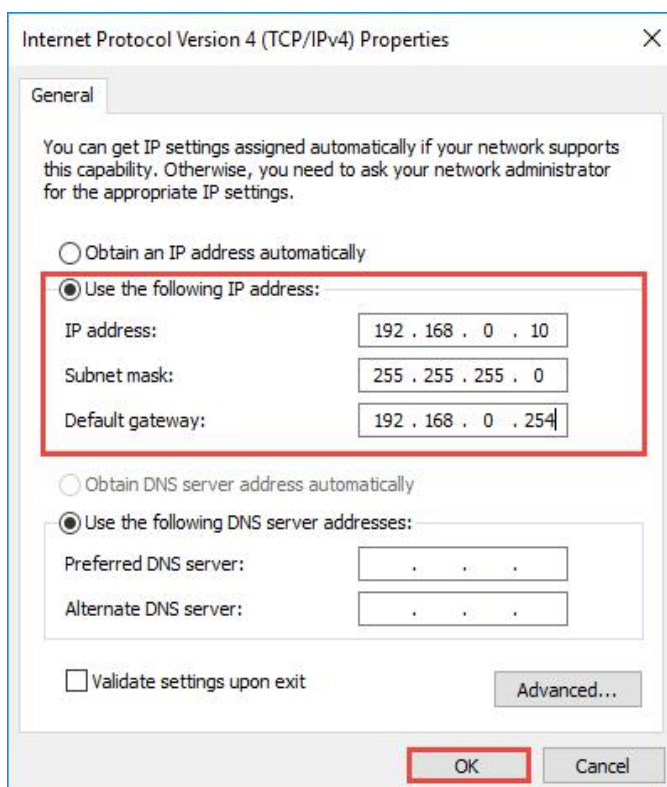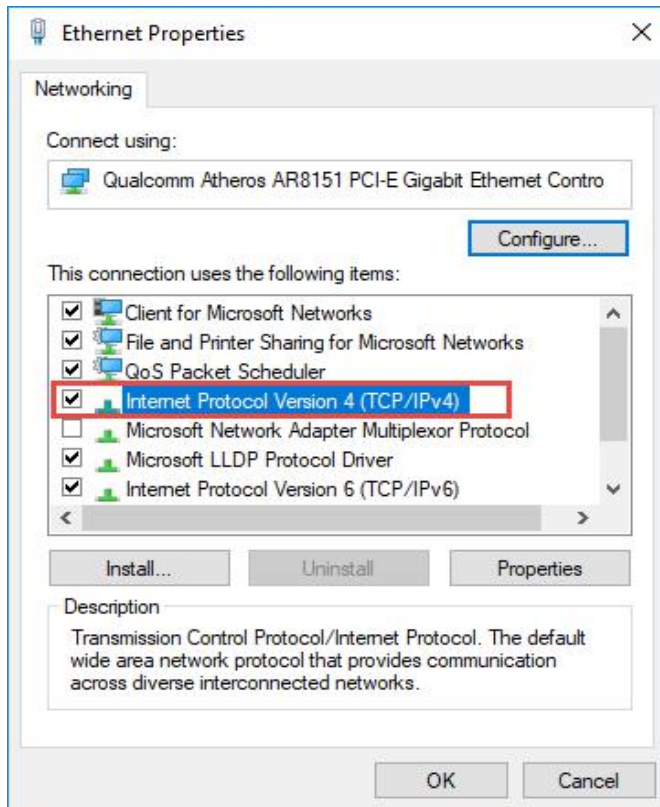


Step 3.

Install toolbox and configtool,Get IP address by searching on ConfigTool

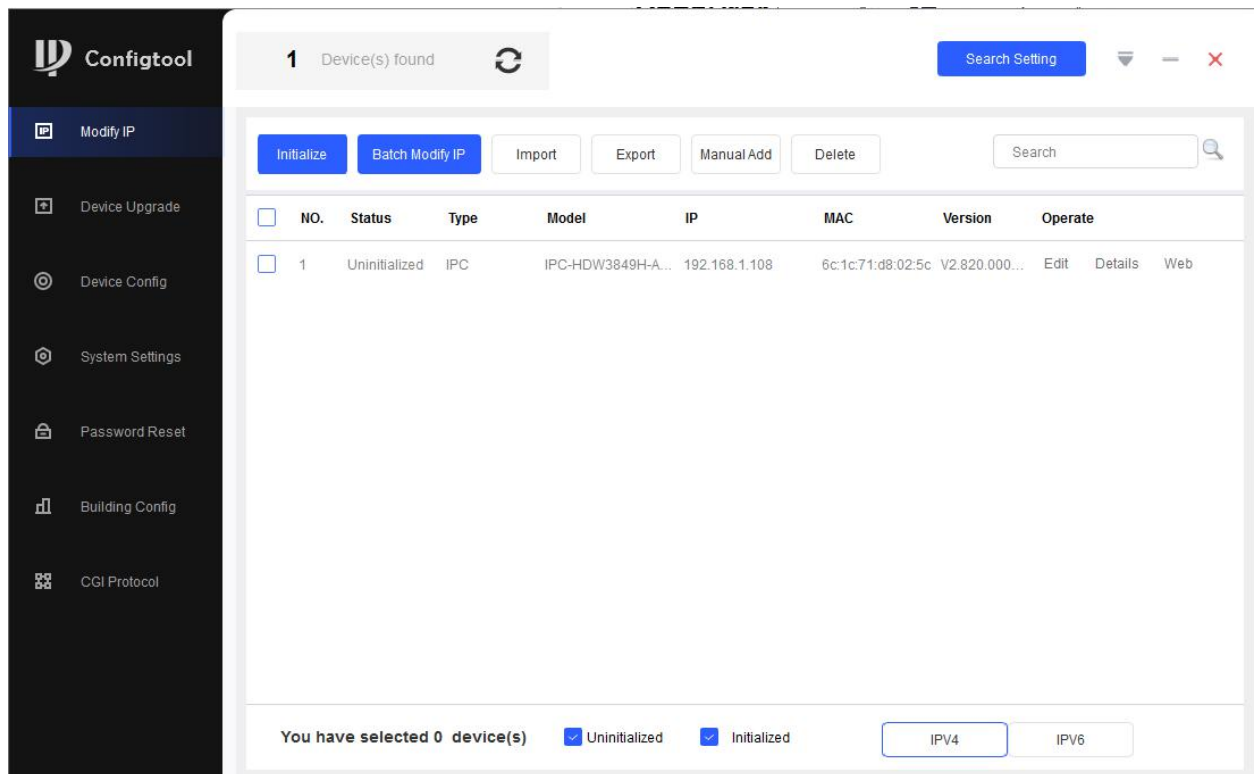

The screenshot shows the ConfigTool web interface. On the left is a dark sidebar with the ConfigTool logo and a menu containing: Modify IP, Device Upgrade, Device Config, System Settings, Password Reset, Building Config, and CGI Protocol. The main panel has a header with '1 Device(s) found' and a 'Search Setting' button. Below the header is a toolbar with buttons: Initialize, Batch Modify IP, Import, Export, Manual Add, and Delete. A search input field is on the right. The main area contains a table with columns: NO., Status, Type, Model, IP, MAC, Version, and Operate. One device is listed with status 'Uninitialized'. At the bottom, it says 'You have selected 0 device(s)' with checkboxes for 'Uninitialized' and 'Initialized', and tabs for 'IPv4' and 'IPv6'. The 'Initialize' button in the toolbar is highlighted with a red box.

NO.	Status	Type	Model	IP	MAC	Version	Operate
1	Uninitialized	IPC	IPC-HDW3849H-A...	192.168.1.108	6c:1c:71:d8:02:5c	V2.820.000...	Edit Details Web

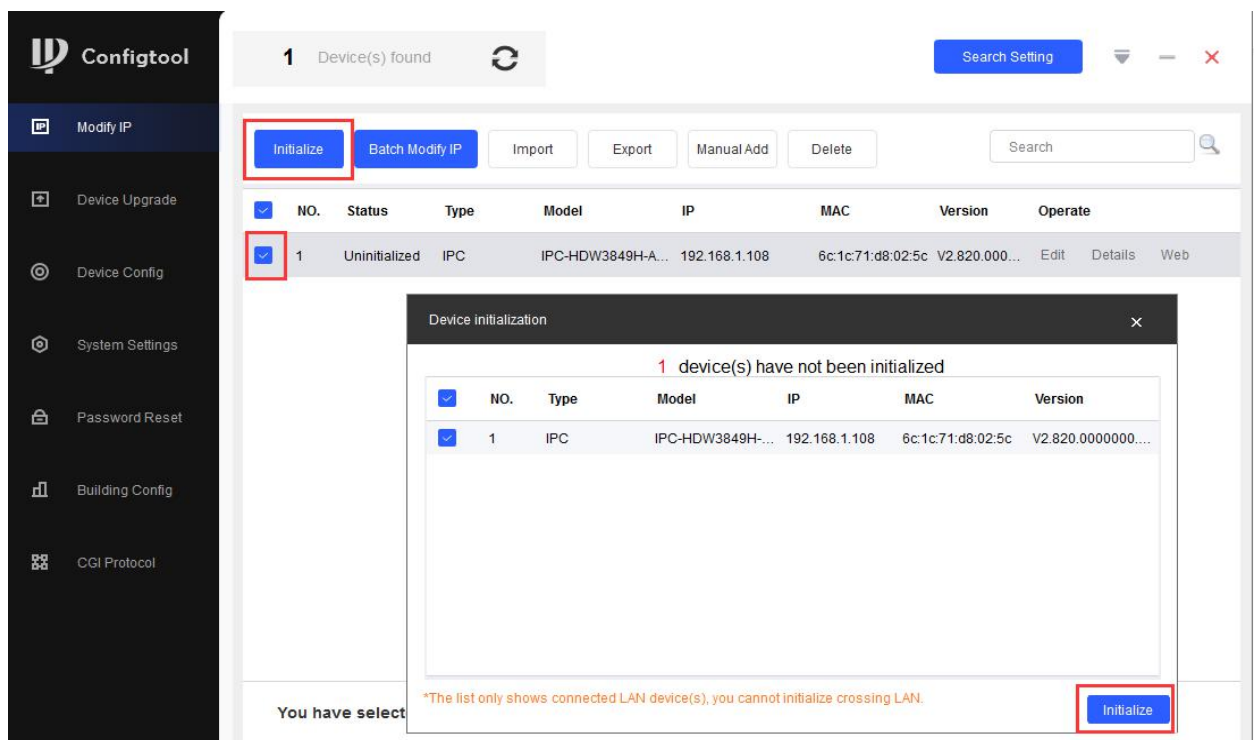

This screenshot shows the same ConfigTool interface as the previous one, but with the 'Initialize' button in the top toolbar highlighted by a red box. A 'Device initialization' dialog box is open in the center. The dialog has a title bar and a close button. Inside, it says '1 device(s) have not been initialized' in red. Below this is a table with columns: NO., Type, Model, IP, MAC, and Version. One device is listed with status 'Uninitialized'. At the bottom of the dialog, there is a red box around the 'Initialize' button. Below the dialog, a note states: '*The list only shows connected LAN device(s), you cannot initialize crossing LAN.' The main panel shows 'You have select' and the 'Initialize' button in the toolbar is highlighted with a red box.

NO.	Type	Model	IP	MAC	Version
1	IPC	IPC-HDW3849H-...	192.168.1.108	6c:1c:71:d8:02:5c	V2.820.0000000...

Device initialization

1

device(s) have not been initialized

Username

admin

New Password

.....

Weak

Medium

Strong

Confirm Password

.....

Use a password that has 8 to 32 characters, it can be a combination of letter(s), number(s) and symbol(s) with at least two kinds of them. (excluding single quote('), double quote("), colon(:), semicolon(;), connection symbol(&))

☐ Email Address

(for password reset)

Select P/N

PAL

*After you have set new password, please set password again in "Search Setting".

Next

Initialize

Batch Modify IP

Import

Export


Manual Add

Delete

Search

☒	NO.	Status	Type	Model	IP	MAC	Version	Operate
☒	1	Initialized	IPC	IPC-HDW3849H-A...	192.168.1.108	6c:1c:71:d8:02:5c	V2.820.000...	Edit Details Web

Enter IP address in WEB

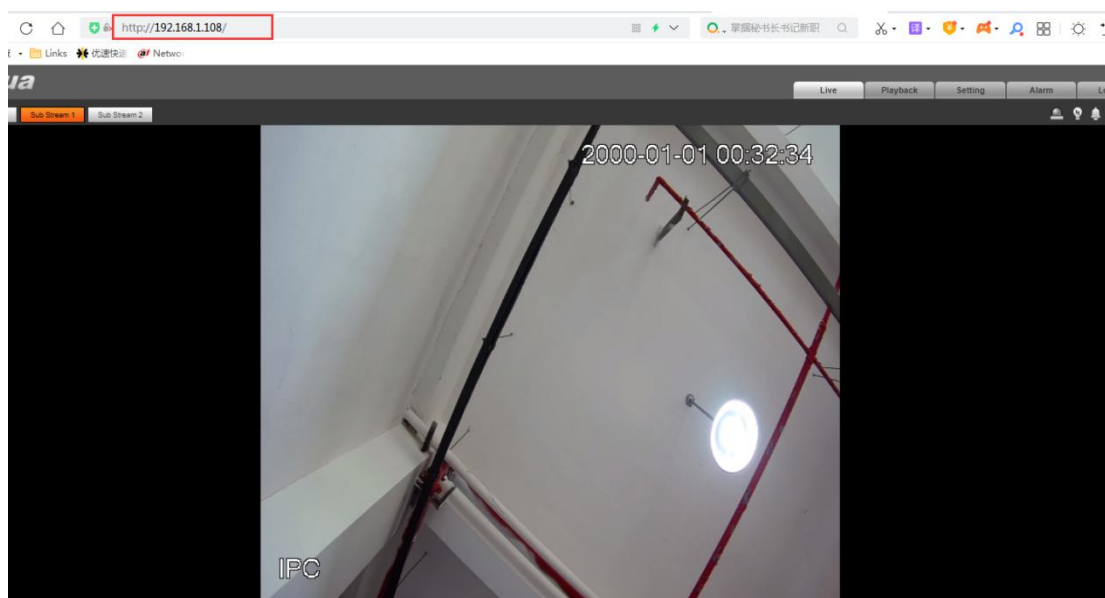

Select Event-> Smart Plan,Click IVS and Save

