

5-TRAY DIGITAL FOOD DEHYDRATOR



INSTRUCTION MANUAL

MODEL: EFD329WD

THANK YOU

for your purchase!

FOLLOW US FOR MORE KITCHEN
TIPS, HACKS, & INSPIRATIONS!



shopelitegourmet

LET'S GET COOKING!



Maxi-Matic, USA
18401 E. Arenth Ave
City of Industry, CA
91748-1227



shopelitegourmet.com

Visit our website to
contact us for support.
Register your product online!

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	2
SHORT CORD PURPOSE	3
POLARIZED PLUG	3
PARTS IDENTIFICATION	4
BEFORE FIRST USE	5
ASSEMBLING	5
HOW TO USE	6
FOOD DEHYDRATING GUIDE	7
HELPFUL HINTS	11
CLEANING AND MAINTENANCE	11
EASY STORAGE	12
DEHYDRATING TIME & TEMPERATURE CHART	13
FOOD PACKAGING AND STORAGE	14
WARRANTY POLICY	15
RETURN INSTRUCTIONS	16

IMPORTANT SAFEGUARDS

The Elite Brand takes consumer safety very seriously. Products are designed and manufactured with our valued consumers' safety in mind. Additionally, we ask that you exercise a level of caution when using any electrical appliance by following all instructions and important safeguards.

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

WARNING: When using electrical appliances, basic safety precautions should always be followed as below:

1. It may be necessary to put heat-resistant material (ceramic tiles, thick board etc.) under the appliance during use. Place the appliance on a heat-resistant surface to avoid possible damage to surface.
2. Do not run the appliance longer than 48 hours. Unplug unit from wall and allow to cool completely.
3. To protect against risk of electrical shock, do not put the base, cord & plug in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
8. Do not use this appliance outdoors.
9. Always use dehydrator indoors on a dry, flat, stable surface to allow sufficient airflow.
10. Do not place dehydrator on or near a hot gas stove, electrical burner or in a heated oven.
11. Never place dehydrator base on newspaper, carpet, towels and the like, which can block airflow and cause failure. The dehydrator will need an open and breathable space to function properly and to its capacity.
12. Do not let cord hang over edge of table or counter or come in contact with any hot surface, including the stove.
13. Any metal or sharp utensils should not be placed inside or used with the dehydrator at any time.
14. Do not use appliance for other than intended use.
15. Turn the appliance Off before changing parts such as lid and trays.
16. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Do not modify the plug in any way.
17. Some countertop and table surfaces, such as Corian®, wood and / or laminates, are not designed to withstand prolonged heat generated by certain appliances. It is recommended by countertop manufacturers and Maxi-Matic® that a hot pad or trivet be placed under your appliance to prevent possible damage to the surface.

- 2 Questions? We're here to help!
Visit: shopelitegourmet.com for support on this product.

SHORT CORD PURPOSE

Note: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a long cord.

Longer power-supply cords or extension cords may be used if care is exercised in their use.

If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the counter top or tabletop where it can unintentionally be pulled on or tripped over by children or pets.

POLARIZED PLUG


If this appliance is equipped with a *polarized plug* (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug.

If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug.

**SAVE THESE INSTRUCTIONS.
THIS PRODUCT IS FOR
HOUSEHOLD USE ONLY.**

PARTS IDENTIFICATION

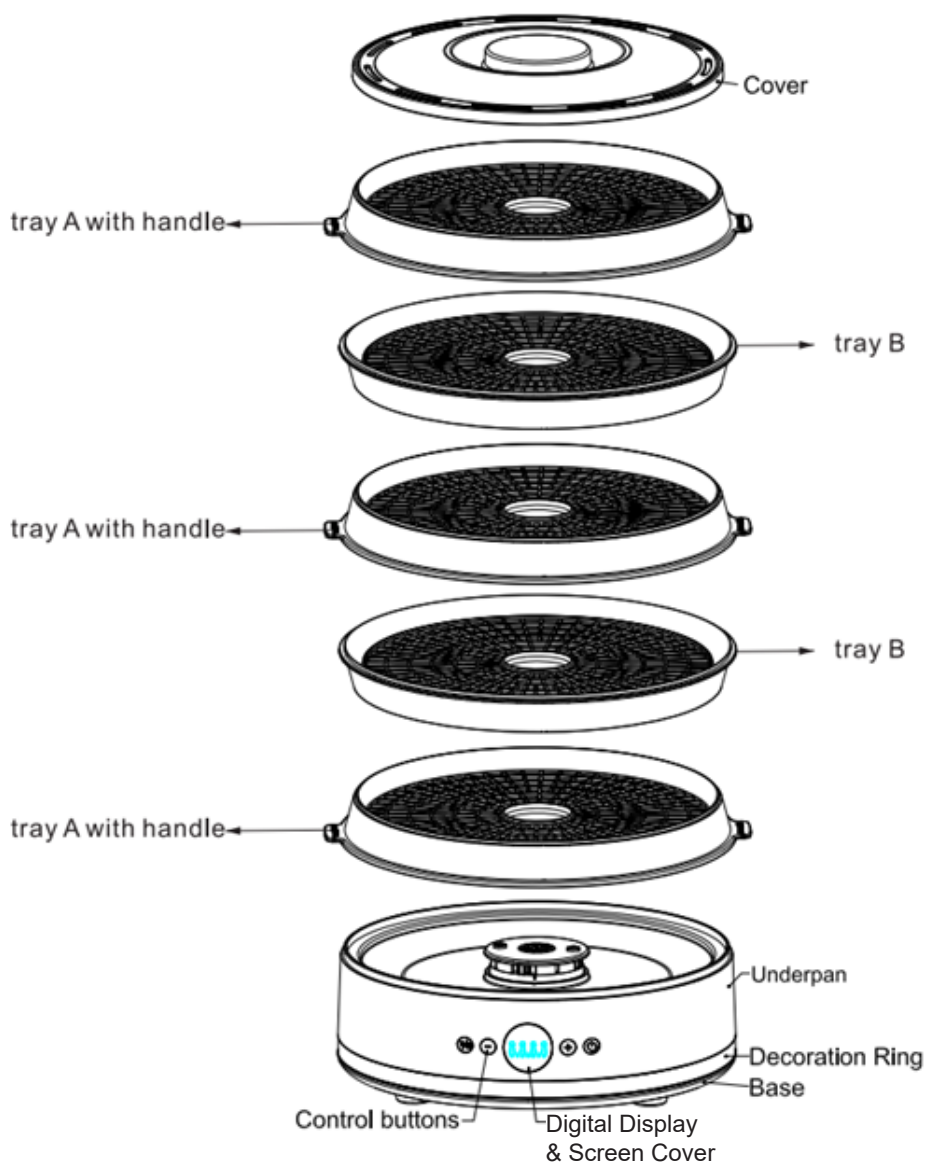

BEFORE FIRST USE

Read all instructions and important safeguards before first use.

1. Carefully remove all packaging material and dispose of or recycle appropriately.
2. Wash the five dehydrator trays and lid in warm, soapy water. Rinse well and dry thoroughly.
3. Wipe the dehydrator base with a clean, soft cloth or sponge.
4. After cleaning, the unit must run in for 30 minutes without placing foods for drying during this period. During the first use, you may detect minimal smoke or odor. This is caused by manufacturing residue and is normal. Please ensure sufficient ventilation. After the running in period, rinse the racks in water and dry all parts. This act is only necessary for the first time.
5. Do not clean appliance with aggressive chemicals or abrasives to avoid damaging the surface of the base, lid and drying trays.

ASSEMBLING


- Make sure that the dehydrator is placed on a dry, stable, level & flat surface.
NOTE: Tray "A" (3 pcs) is White and Tray "B" (2 pcs) is Gray color.

Tray assembly tips:


1. Place one Tray A with handles (see below) on the dehydrator base.
2. Place one Tray B onto Tray A as shown below.
3. Repeat steps 1 & 2.
4. Place Tray A on Tray B for final tier and then place lid on the top.

NOTE: Tray A must be on top for the lid to fit correctly.

Tray B:

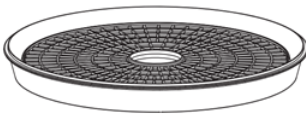

Tray A with the handle:

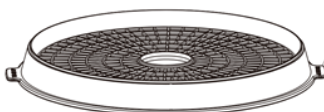

THIS SIDE UP



CAUTION:

NEVER IMMERSE BASE, CORD OR PLUG IN WATER OR ANY OTHER LIQUIDS.

HOW TO USE

1. Make sure unit is OFF and unplugged before using.
2. Always wash the dehydrator trays and lid before each use to avoid any food contamination.
3. Place base on a dry, flat, smooth countertop surface where it will not fall or be pulled by the plug.
4. Prepare food to be dehydrated as instructed in this manual; preparation depends on the type of food.
5. Place food on the trays and load into the base.
6. Connect the power supply, the screen will show "0000".
7. To set Timer and Temperature:

Setting Timer (00:30-48:00)

Press TIME/TEMP button, the display will show default time 10:00 and flash. Then press the + or – buttons until the desired time is displayed. To change the time rapidly, hold down the + or – buttons.

Setting Temperature (FAN, 95°F–104°F–113°F–122°F–131°F–140°F–149°F–158°F)

Press TIME/TEMP button again, the display window will show temperature 158°F and flash. Then press + or – buttons to select the desired temperature. To change the temperature rapidly, hold down the + or – buttons.

8. After setting time and temperature, press START/STOP button to begin dehydrating process. The time in the display window will begin to countdown.
9. The dehydrator will automatically shut off after the set time has expired, the fan will continue running for 10 seconds and the buzzer will sound 5 times and the digital panel will display "End".

NOTE: Begin to check on food before the dehydration period is completed; check food for desired dryness.

Remove

individual pieces and store in containers or food bags. If some pieces are not yet done, leave them on the dehydrator and check frequently until all food dehydration is completed.

10. Unplug after using.
11. Always wash the dehydrator trays and lid after each use. Wipe the base with a soft damp cloth or sponge; do not allow water or any other liquid to get into the base. Make sure the trays and lid are completely dry before replacing them on the base.



NOTE:

- Always start to load the food from the bottom tray to the top tray.

- It is recommended to stack at least 3 working trays, whether you have food on them or not.

- Set low temperature for thin/small pieces of food or for a small load of food. Set high temperature for drying thick/big pieces of food and large loads. The thermostat can also be used to decrease the temperature as the food is near the end of its drying cycle making it easier to control the final moisture level in the food.

*Use 93% fat free when dehydrating red meats to ensure longer life for dehydrator trays. Additionally, hand wash trays & lid with warm soapy water.

FOOD DEHYDRATING GUIDE

- Depending on the moisture in the food itself and the humidity in the air, dehydrating operation time can vary.
- Use the dehydrator in a dust free, well-ventilated, warm and dry room.
- Do not use the dehydrator outdoors.
- Fruit and vegetables dried in your food dehydrator will be different in appearance from those sold in health food stores and supermarkets. This is due to your food dehydrator uses no preservatives, no artificial coloring and only natural additives.
- One easy way to determine if food is dried is to place a piece in a small zipper seal plastic bag. Seal the bag and shake it lightly. If moisture appears, the food is not ready to be removed.

SELECTING THE TYPE OF FOOD TO DEHYDRATE:

- Food to be dried should be in good condition. Select fruits that are just ripe; they have the highest natural form of sugar and are best for dehydrating.
- Fruits that are not ripe may have a flat, bitter taste.
- Vegetables should be fresh and tender.
- Check fruits and vegetables for marks or bruises and cut away these portions before preparing for dehydration.
- Avoid using overripe fruits and vegetables with spoiled portions.
- Meat (minimum 93% fat free), poultry and fish should be fresh and lean.
- Preparation, dehydration time and storage of foods also influence their quality and taste. Follow the preparation, dehydration and storage instructions in this manual to ensure the best-quality dried foods.
- *WARNING: If you suspect food is contaminated, freeze at 0° for 48 hours to prevent bacteria growth, or heat at 175°F for 15 minutes to pasteurize it. Some nutrition may be lost, but it will stop the contamination process.*

VEGETABLES:

Vegetables dried at home require a little more effort in processing and storage than do fruits because they are low in acid and have little sugar. Some vegetables have a poor quality when dehydrated and are better frozen than dried. Others, such as potatoes, are available at reasonable prices all year round, and it may not be worth your time to dry them unless they are used for lightweight camping. Be selective in the vegetables you choose to dry.

Preparation:

- Select only the highest quality, most fresh, crisp and tender vegetables for dehydrating.
- Wash vegetables carefully and thoroughly before dehydrating to remove any dirt and bacteria.
- Most vegetables should be peeled, trimmed, cut, or shredded prior to dehydrating.

FOOD DEHYDRATING GUIDE (cont.)

Pretreatment Methods:

- It is recommended to blanch vegetables prior to dehydrating. Avoid hot water blanching because it destroys the enzymes that produce off flavors during storage, resulting in poor texture and poor re-hydration.
- It is recommended to use the two below blanching methods instead:
- Steam blanching is preferred over water blanching because there is less flavor and vitamin loss.
- Microwave blanching is also excellent and usually keeps a brighter color in the vegetables after dehydrating.

• **Steam Blanching:**

1. Layer prepared vegetables in the top portion of a food steamer, no more than 2 to 2 ½ inches deep.
2. Steam until vegetables are heated all the way through but are not cooked enough to eat (usually 2 to 3 minutes). Small pieces may need occasional stirring to steam blanch evenly.
3. Transfer steamed vegetables directly to dehydrating trays, working as quickly as possible.

• **Microwave Blanching:**

1. Microwave ovens are convenient for blanching fresh vegetables. Prepare vegetables for steam blanching by placing vegetables with a small amount of water (refer to your microwave oven cooking chart) in a covered casserole dish.
2. Cook for only ¼ to 1/3 the time specified in the chart, stirring well after half of the blanching time.
3. Transfer blanched vegetables directly to dehydrating trays, working as quickly as possible.

DEHYDRATING TIPS:

Dehydrating time for pre-treated fruit will vary according to the following factors:

- Thickness of fruit pieces or slices
- Number of trays with food being dried
- Volume of food being dried
- Moisture or humidity in your environment
- Your preference of dehydrating for each type of dried food

It is recommended to:

- Check your food frequently every hour during the dehydrating cycle.
- Label food with the name of food contents, date and weight before dehydrating. It will also be helpful to note the dehydrating time for future reference.
- Blanched vegetables & fruits will give the best results in dehydrating.
- Correct food storage after dehydrating

FOOD DEHYDRATING GUIDE (cont.)

PREPARATION & PRETREATMENT OF FRUITS:

Most fruits are suitable for dehydrating at home, but some fruits will require more dehydrating time than others; the guidelines offered below will help you get started. Some fruits might not be suitable for dehydrating all year round, so it will be helpful to learn which fruits are in season and experiment with those first.

Preparation:

- Wash fruits well and remove any bruised or overripe portions. Peel if desired. Larger fruits may be halved.
- If fruit size varies, slice into 3/8" - 1/2" thick for more even dehydrating.
- Smaller fruits such as grapes and cherries may be dried whole.
- Remove any pits or stones from fruits such as prunes, cherries, apricots, etc.
- Fruits that have been artificially waxed to prevent moisture loss should always be peeled. Peeling is optional with other fruits.
- Dried pear skins tend to be grainy, and peach peels are a little fuzzy.
- Most fruits can be placed directly on the dehydrating trays as they are prepared such as pineapples, grapes, strawberries, prunes, etc. However, apples, apricots, peaches and pears turn brown when cut. These may be pretreated to slow browning and to prevent vitamins A and C loss, but your attention is called to the cautions set forth below, which are for your protection.

Pretreatment Methods:

It is not necessary to always pre-treat food in order to dehydrate it. However, pretreatment often makes food look better, increases the shelf life and can even enhance the nutritional value of some foods. Experiment with both treated and untreated food in your storage to see which will best suit your needs. Proper storage is critical to the quality of the stored product, whether treated or untreated.

Natural Pre-Dips:

Use pineapple or lemon juice as a natural alternative to reduce browning. Slice fruit directly into juice. Remove promptly (about 2 minutes) and place on dehydrating trays. Fruits may also be dipped in honey, spices, lime or orange juice, jello powders or sprinkled with shredded coconut to give them a snappy dried flavor. Use your imagination and make your own dip.

Sodium Bisulfate:

Ask for food-safe, (USP) grade only. Dissolve 1 teaspoon of sodium bisulfate in one quart of water. Prepare small amounts of fruit and dip for 2 minutes in the solution. This helps prevent loss of vitamin C and maintains a bright color. Sodium bisulfate is available in most pharmacy/drug stores.

Popping Backs:

When dehydrating fruit halves, especially apricots, it has been suggested that popping the back ("inside out") will speed the dehydrating time. This is true, but it also results in the loss of the nutritional juices to the bottom of the dehydrator. Instead, cut each half in half again to give the end product more nutritional value, a brighter color, and faster reconstitution capabilities.

FOOD DEHYDRATING GUIDE (cont.)

MEAT DEHYDRATING PREPARATION:

CAUTION! The United States Department of Agriculture recommends meat be precooked prior to or cooked after dehydrating to reduce the risk of food borne illnesses. Normally raw meat is used for making jerky. However, cooked meat as well as raw meat can be dehydrated. Make sure to always cut meat down to bite size before dehydration. It is much easier to work with beforehand.

Be extra careful when making jerky from raw chicken or turkey; salmonella bacteria may be present in poultry when it is purchased. It is extremely important to cut raw chicken or turkey into portions that do not exceed 1/4" thickness. Any marinade must soak into the meat at least 10 minutes. It is not recommended to remove any excess marinade sauce. Never consume food that tastes, smells or looks improper.

Raw Meat For Beef Jerky:

- Only use meat that is at least 93% fat-free to make jerky. Make sure to trim off all the fat before slicing into bite-size portions. It is recommended to slice meat about 1/8" - 1/4" thickness.

NOTE: For best results, we recommend using red meats (minimum 93% fat free). This will result in longer life for your dehydrating trays. Additionally, hand wash trays with warm soapy water immediately after use & trays have cooled.

- Marinating beef has many different combination recipes. Please see some recipe samples below for your preference:

Traditional Jerky: (Good for approximately 3-5 lbs of beef, fish, or poultry)

1/2 lb brown sugar *Spices of your choosing
3 cups soy sauce 1/2 cup liquid smoke (optional)

- Mix all ingredients together. Make sure the brown sugar is dissolved. Let mixture sit for approximately 15 minutes. Place cut up meat into the marinade and cover. Marinade in the fridge for 12 hours or overnight. Make sure to turn meats periodically to coat thoroughly. Drain any excess liquid.
- Place meats onto trays and dehydrate. Dehydrating time for a full 5-tray set up will take approximately 5-6 hours.

NUTS:

- Remove shells to the nuts and rinse nuts with warm water. Pat dry and spread on trays. Most nuts will take approximately 20-30 hours to dehydrate; they should be allowed to dehydrate until brittle.
- After dehydrating, allow to cool. Nuts that will not be consumed within a day or two should be frozen to ensure freshness. Remove nuts from the freezer and allow them to defrost before using.

FLOWERS:

- For best results, pick flowers after the morning dew rises and before the evening mist sets in. Do not use flowers that have been sprayed with insecticides or other chemicals. If dehydrating at the same time as herbs intended for consumption, place flowers on bottom trays and herbs on top trays; this is to prevent any "drippings" from the flowers to fall onto the herbs.

FOOD DEHYDRATING GUIDE (cont.)

HERBS:

- Rinse and pat dry. Remove any dead, mushy or discolored portions, but leave the stem and do not break apart until dehydrating. Spread herbs or flowers on tray and allow them to dehydrate for about 2-7 hours, depending on their type. When dehydrating is complete, remove from tray and allow to cool.
- Remove from stem and break leaves or buds apart, or crush if desired. If dehydrating seeds, choose when pods have changed in color.

HELPFUL HINTS:

- Always preheat the dehydrator for at least 5 minutes before using.
- If the dehydrator has been stored away for some time, wash before using.
- Fresh vegetables and fruits are best for dehydrating. Canned goods do not dehydrate as well.
- Vegetables and fruits should always be cleaned before preparation and pretreatment. For best results, always prepare and pre-treat fruits and vegetables as outlined in this manual.
- **NOTE:** For best results, we recommend using red meats (minimum 93% fat free). This will result in longer life for your dehydrating trays. Additionally, hand wash trays with warm soapy water.
- It is relatively safe to leave the dehydrator on when dehydrating foods take a long time, but make sure to set the dehydrator in a safe place.
- Exact dehydrating time varies greatly depending on several factors: type, size and quality of food, quantity placed on trays and personal preference. It will help to keep a personal notepad where you can write down your own notes. Keep notes on the type of food, weight before and after dehydrating, total dehydrating time and final results.

CLEANING AND MAINTENANCE

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

Always unplug the dehydrator from electrical outlet when not in use and before cleaning.

TO CLEAN:

- Always allow the dehydrator to cool completely before cleaning.
- Unplug the dehydrator before cleaning.
- After each use, clean and dry the dehydrating trays and lid in warm, soapy water. **NOTE:** After dehydrating red meats, hand wash trays with warm soapy water immediately after dehydrating and after the unit has cooled.
- Use a damp cloth to clean the dehydrator base.
- Do not immerse the dehydrator in water. Use nonabrasive cleaners or soft soap only.

TO STORE:

Unplug unit; store in its box in a clean, dry place. Never store it while it is hot or still plugged in. **Never wrap cord tightly around the appliance.** Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

 
EASY STORAGE

This food dehydrator has nestable trays to save space as shown by image below.



HOW TO:

1. Reverse one "tray A with handle" on the base according on below picture, when you place the "Tray A with handle" on the base, you can't see "this side up" on the handle .
2. Then put one "tray B" on the second layer, then put the "tray A with handle" on the third layer, you can't see "this side up" on the handle .
3. Then put the "tray B" on the fourth layer, at last put the "tray A with handle" on the last layer, you can't see "this side up" on the handle, then place the lid on the top.

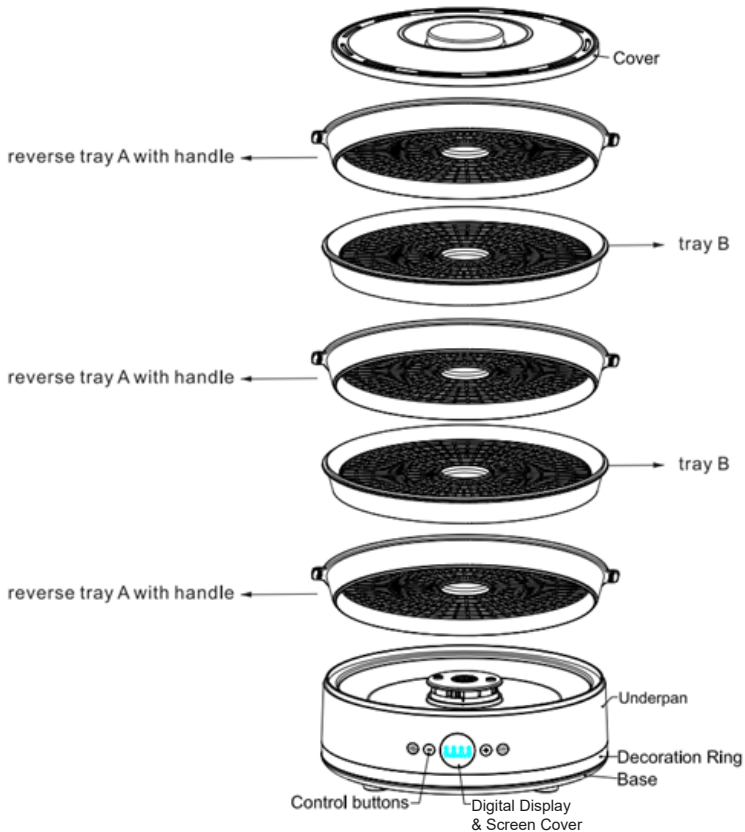

DEHYDRATING TIME & TEMP. CHART

	TIME (hours)	TEMPERATURE (°F)	PREPARATION
FRUIT			
Apples	6 - 7	135 - 145	Slice ¼ inch thick
Bananas	7 - 8	135 - 145	Slice ¼ inch thick
Blueberries	36 - 42	135 - 145	Arrange whole
Grapes	42 - 48	135 - 145	Slice in half
Mangos	4 - 6	135 - 145	Slice 1/8 inch thick
Pineapples	8 - 9	135 - 145	Slice ¼ inch thick
Raspberries	24 - 48	135 - 145	Arrange whole
Strawberries	8 - 10	135 - 145	Slice ½ inch thick
Tomatoes	6 - 8	135 - 145	Slice ¼ inch thick
VEGETABLES			
Herbs	4 - 6	100 - 115	Arrange on tray
Beets	4 - 6	125 - 140	Peel, slice 1/8 inch thick
Bell Peppers	10 - 12	125 - 140	Slice ¼ inch thick
Broccoli	4 - 5	125 - 140	Break into florets
Carrots	4 - 6	125 - 140	Peel, slice 1/8 inch thick
Celery	3 - 4	125 - 140	Slice ¼ inch thick
Kale	4 - 5	125 - 140	Arrange whole
Mushrooms	3 - 4	125 - 140	Slice ¼ inch thick
Summer Squash	4 - 6	125 - 140	Slice ¼ inch thick
Yams	4 - 5	125 - 140	Slice ¼ inch thick
MEAT			
Beef (Minimum 93% Fat Free)	5 - 6	150 - 158	Trim fat, slice ¼ inch thick
Poultry	5 - 6	150 - 158	Trim fat, slice ¼ inch thick
Fish	5 - 6	150 - 158	Trim fat, slice ¼ inch thick

FOOD PACKAGING AND STORAGE

- Dried foods need to be properly packaged to prevent re-absorption of moisture and microbial deterioration. Pack food in clean, dry, airtight containers. Glass jars or freezer containers with tight-fitting lids are good for storage. Re-sealable plastic freezer bags are also acceptable.
- Store packaged dried food in a dry, cool location away from light. Higher temperatures and exposure to light will shorten the storage time and result in loss of quality and nutrients. Most dried fruit, when properly packaged and stored, will be good for 1 year at 60°F or 6 months at 80°F. Fruit leather/rolls should keep for up to 1 month at room temperature. Vegetables have about half the storage life as fruit. If food is to be kept longer, then store it in a freezer.
- Package vegetables and fruits in separate containers to avoid flavor transfer.

Packaging:

DRIED FOODS MUST BE PROPERLY PACKAGED IN ORDER TO KEEP WELL.

Package your dried foods in freezer plastic bags, squeezing out as much air as possible. Heat-sealable bags may also be used. Store the plastic bags inside of airtight metal, plastic or glass containers. Storing foods in rigid containers without first putting them into the freezer bags exposes the dried foods to air. Vacuum packaging equipment for home use is available in some stores around the country. Vacuum packaging will greatly extend shelf life.

Storage Conditions:

Store properly packaged dried foods in a cool, dark place. The cooler the food is kept, the longer the optimal quality will be maintained. For every 18°F drop in temperature, the shelf life increases 2 to 3 times. If you have room in a refrigerator or freezer, keep your dried foods there. Otherwise, find the coolest place in your home to store dried foods. Light also causes the quality and nutritive value to deteriorate. Keep dried foods in the dark or in opaque containers.

Shelf Life:

Fruits have a naturally high sugar and acid content, which allows them to dry well and store for longer periods of time than vegetables. When properly packaged and stored at room temperature or below (70°F or less), most fruits will maintain a high quality and nutritional value up to a year. Most vegetables are best when eaten within six months.

FRUITS AND VEGETABLES KEPT BEYOND THE RECOMMENDED TIME MAY NOT BE AS NUTRITIOUS OR TASTE AS GOOD BUT WILL NOT SPOIL UNLESS THE PACKAGING IS NO LONGER INTACT.

LIMITED WARRANTY* ONE (1) YEAR
WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE

PLEASE DO NOT RETURN TO STORE OF PURCHASE.

If you have any problems with this unit, contact Customer Service for support.

1. Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
2. Retail stores/merchants selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.
3. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
4. At its sole discretion, Maxi-Matic USA will either repair or replace the product found to be defective during the warranty period.
5. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
6. Consumer's remorse is not an acceptable reason to return a product to our Service Center.
7. This limited warranty covers appliances purchased and used within the 50 U.S. states plus the District of Columbia and does NOT cover normal wear of parts or:
 - Product Purchases that were listed as USED, LIKE NEW, OPEN BOX, or REFURBISHED from Outlet Shops or Online Retailers.
 - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
 - Damages caused in shipping.
 - Damages caused by replacement or resetting of house fuses or circuit breakers.
 - Defects other than manufacturing defects.
 - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Lost or missing parts of the product. Parts will need to be purchased separately.
 - Damages of parts that are not electrical; i.e. cracked or broken plastic/glass, scratched/dented inner pots.
 - Damage from service or repair by unauthorized personnel.
 - Extended warranties purchased via a separate company or reseller.
 - Acts of nature such as fire, floods, hurricanes, tornadoes, etc.

8. This warranty does not apply to re-manufactured merchandise.

Maxi-Matic, USA shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty.

*One Year Limited Warranty valid only in the 50 U.S. states plus the District of Columbia, excluding Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary by state, province, and/or jurisdiction.

**Any instruction or policy included in this manual may be subject to change at any time.

MAXI-MATIC, USA

18401 E. Arenth Ave. City of Industry, CA 91748

Visit: shopelitegourmet.com to contact us for support

Questions? We're here to help!

Visit: shopelitegourmet.com for support on this product.

RETURN INSTRUCTIONS

RETURNS:

- A. Any return of defective merchandise to the manufacturer must be processed accordingly by first contacting customer service to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.
- B. **IMPORTANT RETURN INSTRUCTIONS.** Your Warranty depends on your following these instructions if you are returning the unit to Maxi-Matic, USA:
1. Carefully pack the item in its original carton or other suitable box with sufficient cushioning to avoid damage in shipping.
 2. Before packing your unit for return, be sure to enclose:
 - a) Your name, full address with zip code, daytime telephone number, and RA#,
 - b) A dated sales receipt or PROOF OF PURCHASE,
 - c) The model number of the unit and the problem you are having (Enclose in an envelope and tape directly to the unit before the box is sealed,) and
 - d) Any parts or accessories related to the problem.
 3. Maxi-Matic, USA recommends that you ship the package via UPS ground service for tracking purposes. **We cannot assume responsibility for lost or damaged products returned to us during incoming shipment.** For your protection, always carefully package the product for shipment and insure it with the carrier. C.O.D shipments cannot be accepted.
 4. **All return shipping charges must be prepaid by you.**
 5. Once your return has been received by our warehouse, Maxi-Matic, USA will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph B.
 6. **Maxi-Matic will pay the shipping charges to ship the repaired or replacement product back to you.**

ELITE CUSTOMER SERVICE CENTER



Maxi-Matic, USA
18401 E. Arenth Ave
City of Industry, CA
91748-1227



shopelitegourmet.com
Visit our website to contact us
for support.
Register your product online!



We take pride in the fact that Elite Gourmet products are continuously improving. To keep you well informed of these changes and to reduce paper consumption, we've included this QR code for you to scan and easily download the most recent updates to your product to your mobile device. Just access your camera, point at the QR code & your mobile device will do the rest.

FOLLOW US FOR MORE KITCHEN TIPS,
HACKS, & INSPIRATIONS!



shopelitegourmet

Elite is a registered trademark of Maxi-Matic, USA.
Copyright Elite by Maxi-Matic.

Actual product may vary from the images/illustrations in this manual
due to continual product improvement.

®



Elite Gourmet