


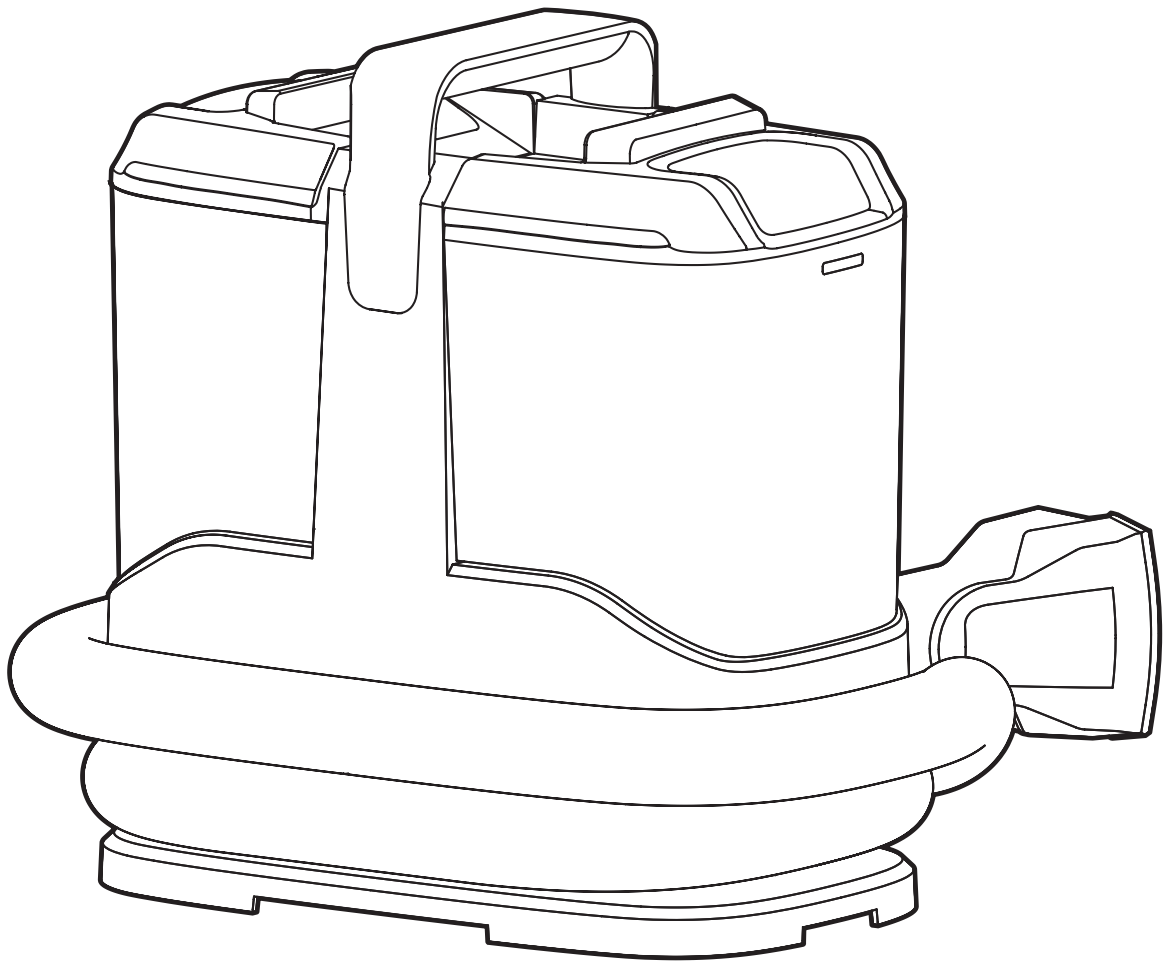

# **SMALL SPOT CLEANER**

## **Product Instructions**

Product No. 2000361

**vonhaus**


## Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

## SCAN ME




## Product Overview

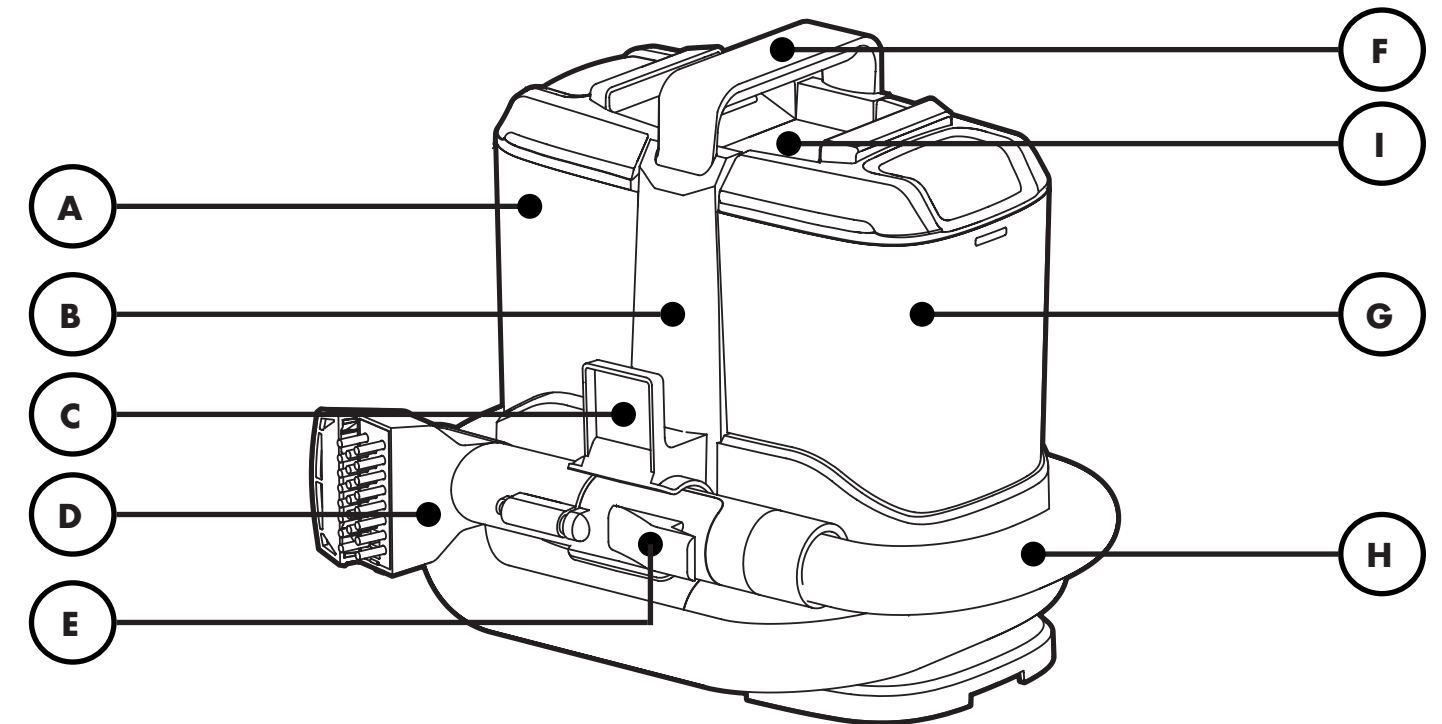


- A. Clean Water Tank
- B. Main Frame
- C. Hook For Brush
- D. Brush
- E. Water-Spray Button

- F. Handle
- G. Dirty Water Tank
- H. Hose
- I. On/Off Switch

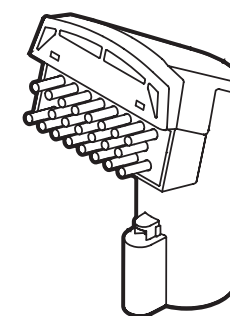


Brush

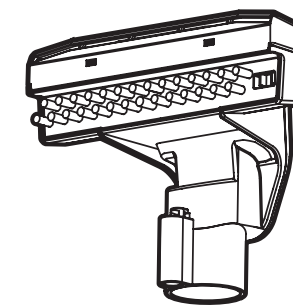

Big Brush



Self-Cleaning  
Hose Nozzle

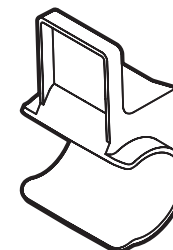

Hook for Brush



Screw



Need further help?  
[support@vonhaus.com](mailto:support@vonhaus.com)

See our full range at  
[www.vonhaus.com](http://www.vonhaus.com)

## Assembly


1

- Remove all accessories from the clean and dirty water tanks
- Insert the hook for the brush on to the back of the product. Secure in place with the screw provided.

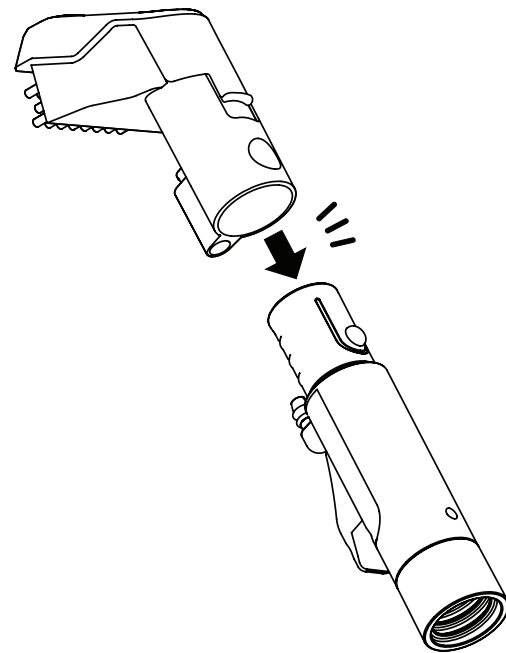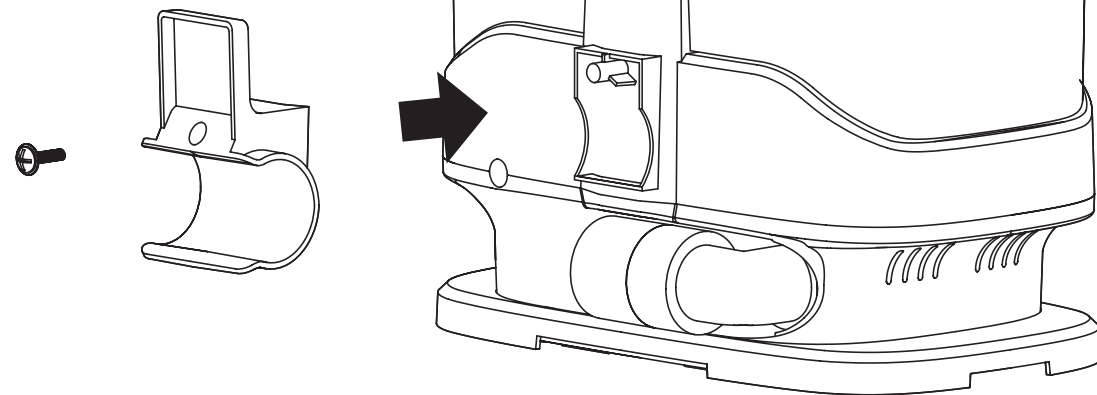

2


- Ensure the hose is securely attached to the main unit.
- Insert your desired brush head into the end of the hose. It will click in to place once it

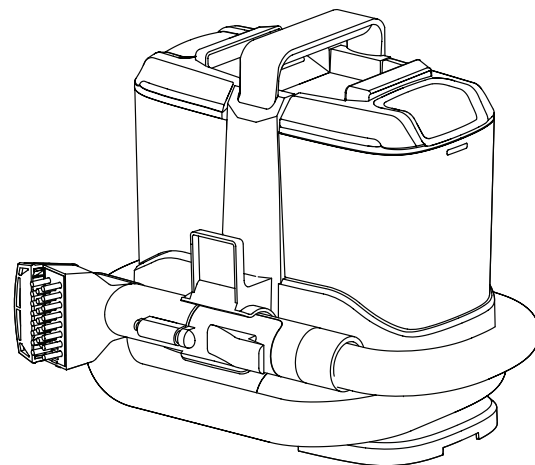


- has been secured in place.
- Wrap the hose around the bottom of the unit and secure in place with the hook for the brush.

## Assembly


3

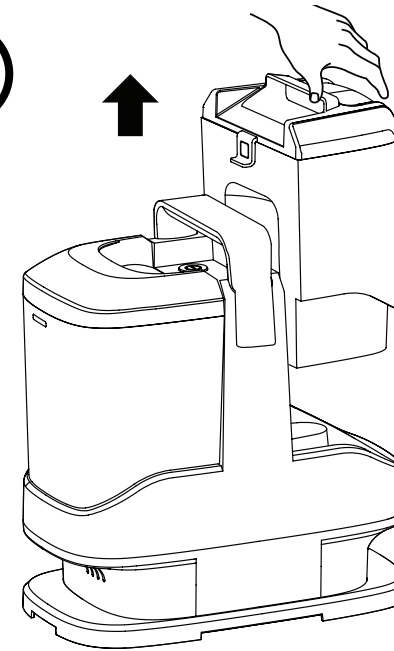

1. Remove the clean water tank from the unit and remove the lid.
2. Fill the tank up with warm water but do not exceed the maximum fill line.
3. For stubborn stains, you can mix water with spot cleaning detergent directly in the water tank. Follow the detergent guidelines

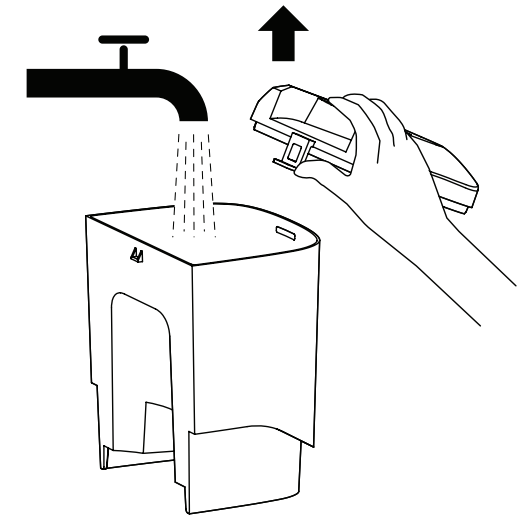


- and ensure the maximum fill line is not exceeded.
- 4. Do not use carpet shampoo as this foams and it not suitable for this type of product.
- 5. Secure the lid back in to place and insert the clean water tank back in to the unit .

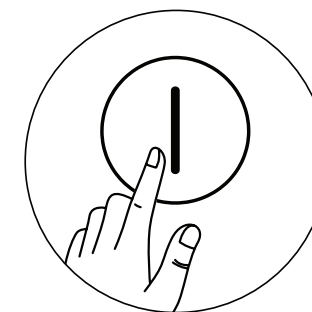

4


- Plug the power cord in to the mains and press the On/Off switch to turn on.

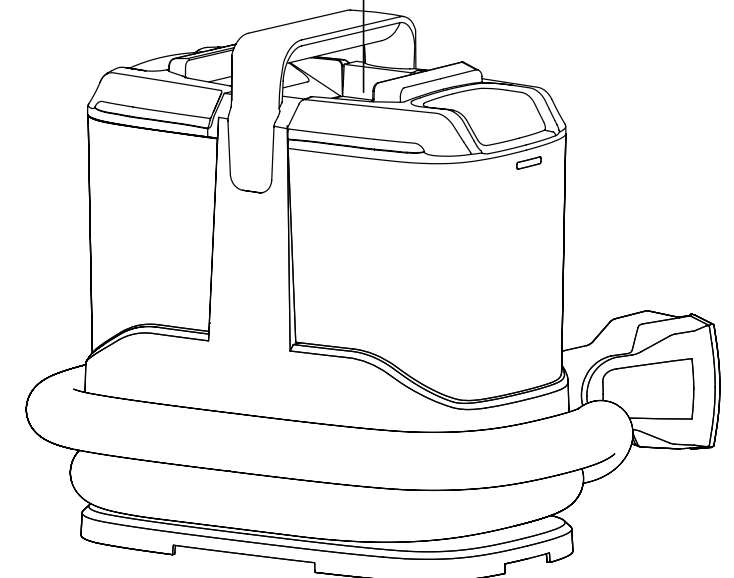


# Operation

- 1 Add spot cleaning detergent on to the spillage and let it sit, following the detergent guidelines.

Press the water release button, on the hose, to spray water on to the surface.

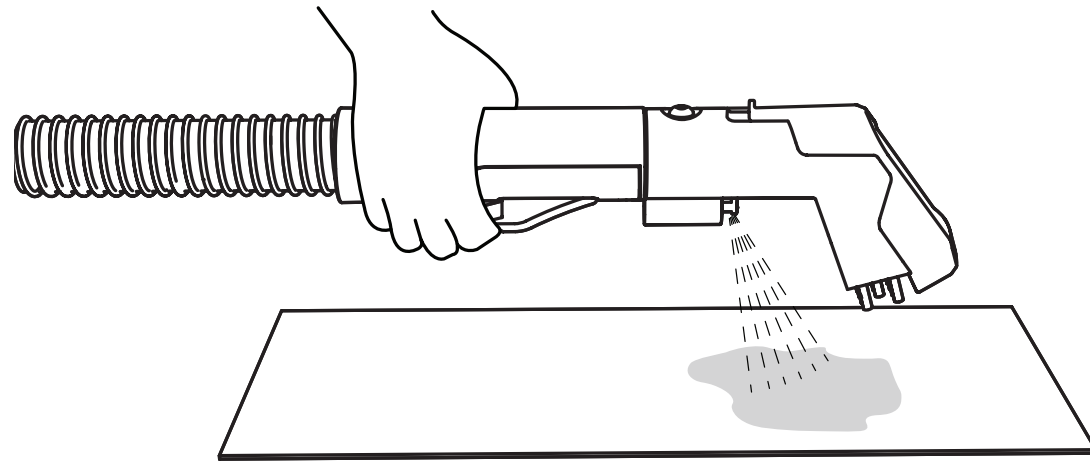

- 2 Move the brush head backwards and forwards to help to remove the stain from the surface.

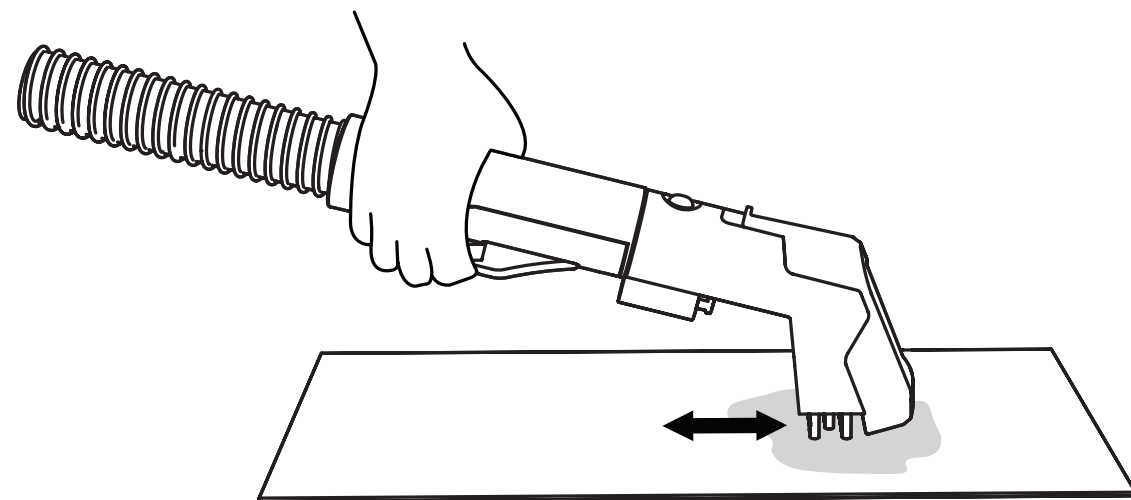


# Operation

- 3 Stop pressing the water release button and tilt the brush head forward so the brushes aren't in contact with the surface.


Pull the brush head backwards towards yourself and ensure the suction inlet is collecting the dirty water.




Over or under tilting the brush tool may result in poor water suction

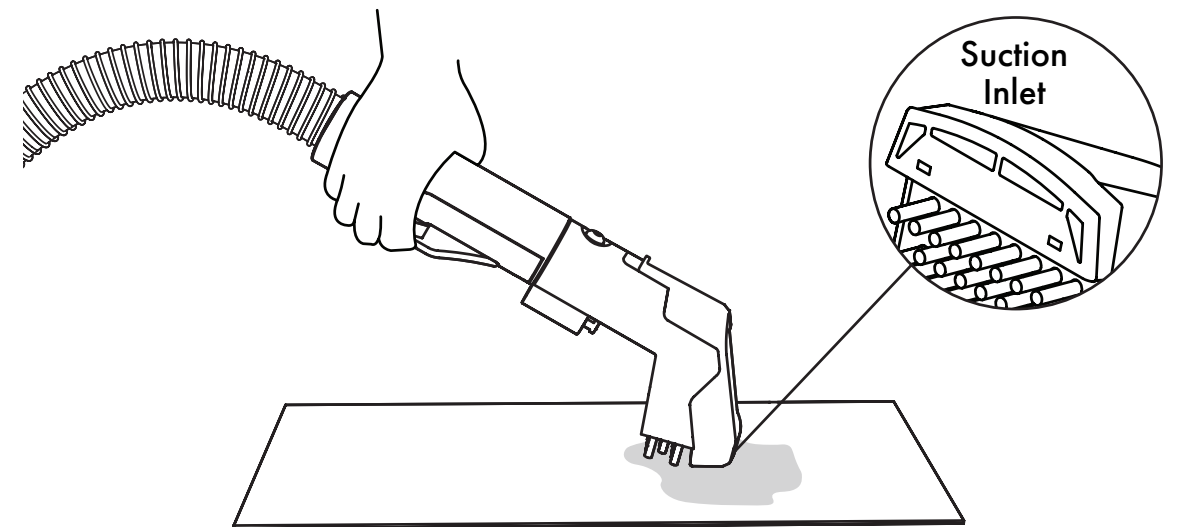

- 4

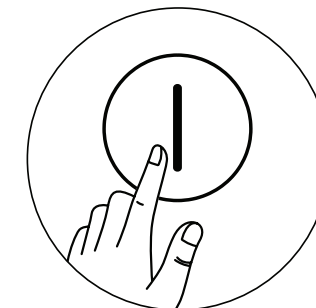


Once you have finished cleaning, turn the product off using the On/Off switch and unplug the power cord.

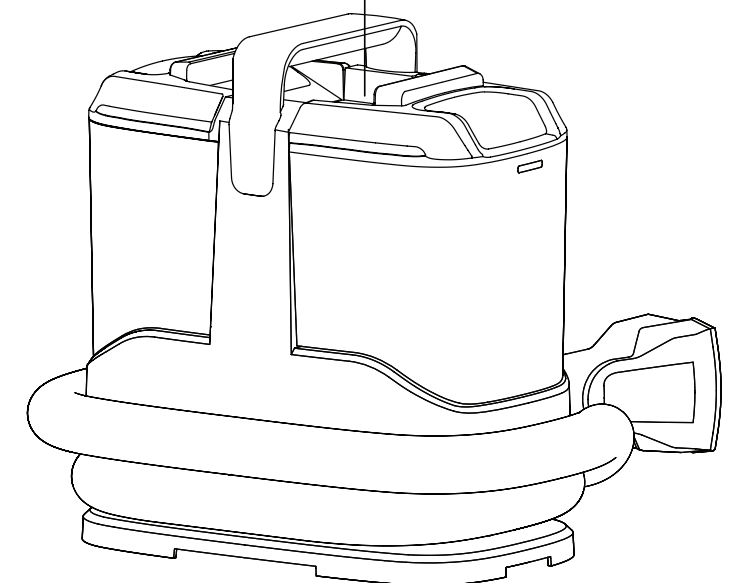


## Cleaning & Maintenance

- 1** To clean the brush head, remove it from the hose and rinse with warm soapy water. The transparent cover on the brush head can be removed for deeper cleaning.

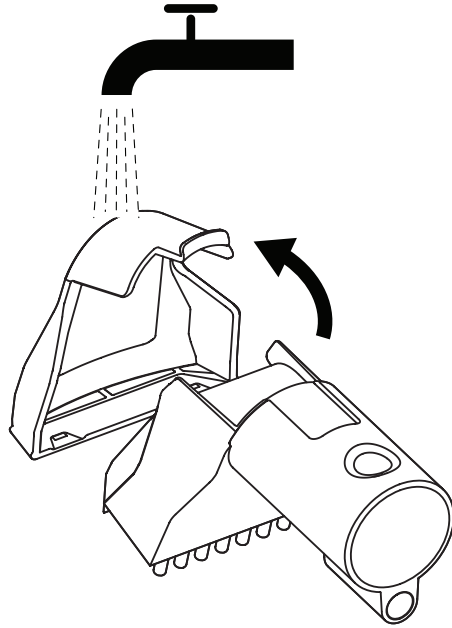


- 2** To clean the hose, remove the brush head and affix the self-cleaning hose nozzle to the end of the hose. Press the water release button and this will help to clean the hose.

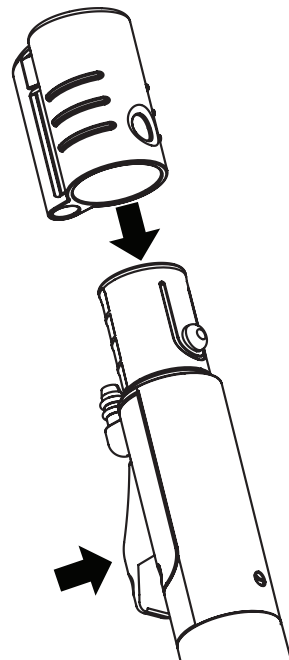


## Cleaning & Maintenance

- 3** Remove the clean water tank from the unit and empty the water. Ensure the water tank is clean and dry before placing back in to the unit.

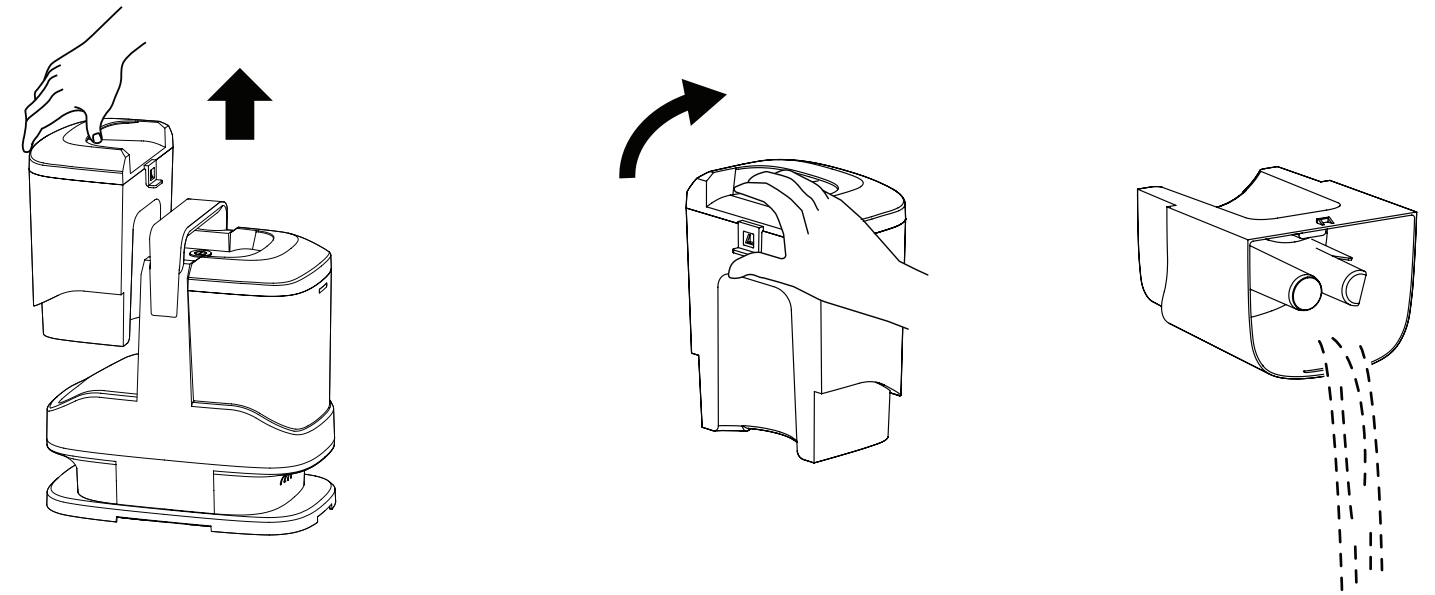


- 4** Remove the dirty water tank from the unit and empty the water after every use, or when the water reaches the maximum fill line. Rinse with warm soapy water and ensure the water tank is dry before placing back in to the unit.

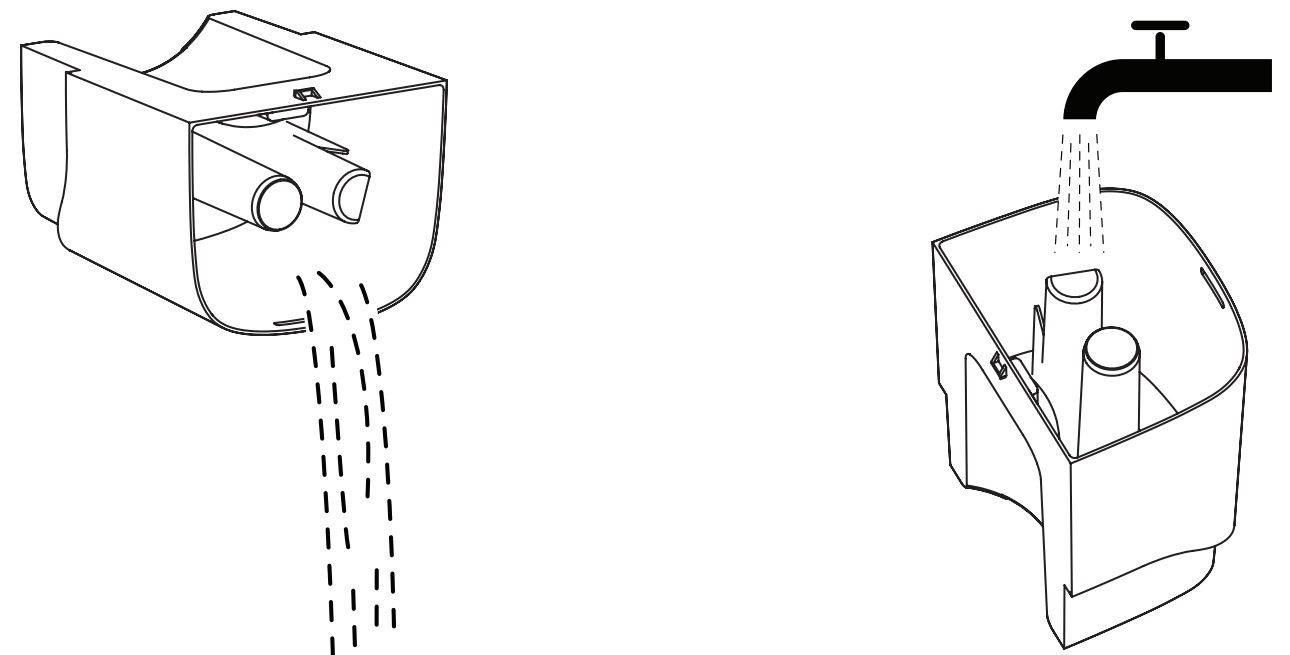

## Cleaning & Maintenance


5

Remove the small foam filter which is located underneath the dirty water tank. Rinse with warm water and ensure it is fully dry before replacing it back in to the unit.

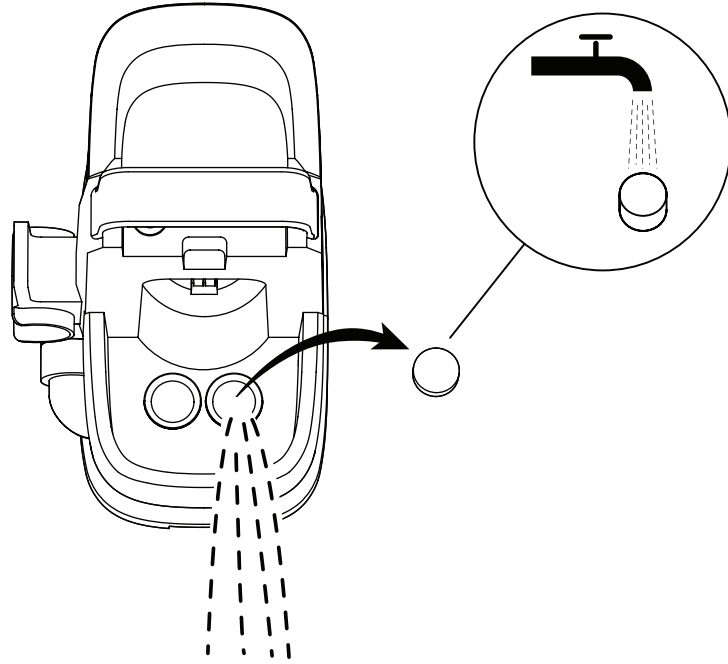

6

Ensure all parts are cleaned and dry after every use. Wipe down the main unit with a damp cloth before storing away.

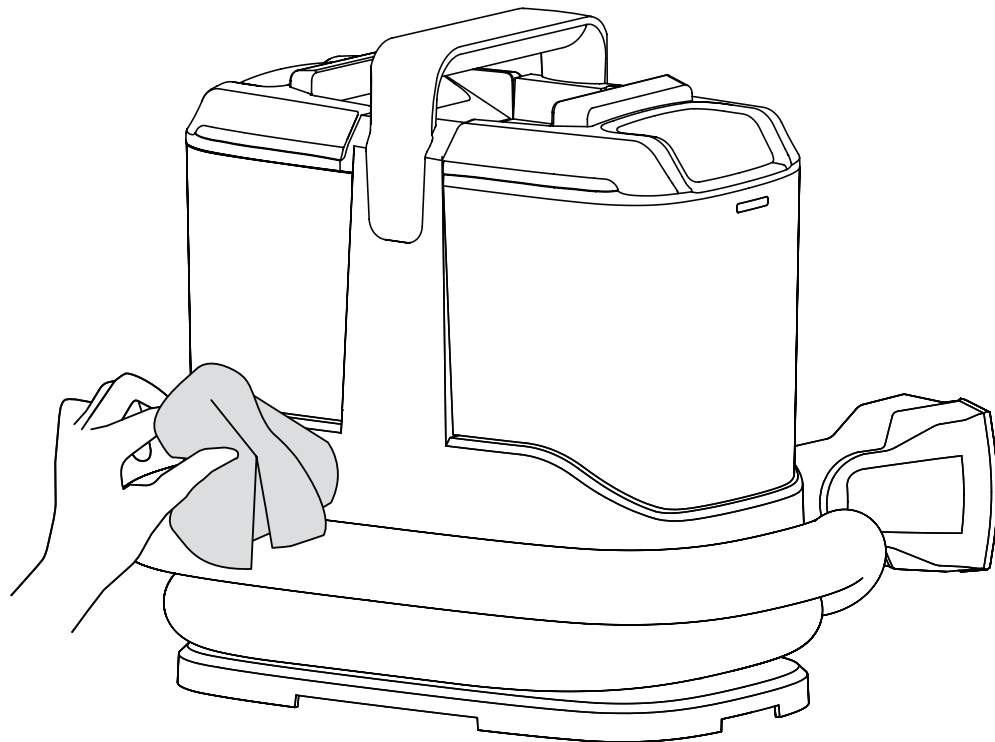

## Troubleshooting

### Why won't my machine start?

#### Possible reasons:

- The plug may not be properly connected.
- The power cord may be damaged.

#### What to do:

- Switch off the machine and check the plug is secure.
- If the power cord is damaged contact the customer services team on [support@vonhaus.com](mailto:support@vonhaus.com)

### Why is there no water after pressing the water-spray button?

#### Possible reasons:

- The spray nozzle may be blocked.
- The handle or pump may be damaged.

#### What to do:

- Remove the brush and clean the spray nozzle.
- If the problem persists, contact [support@vonhaus.com](mailto:support@vonhaus.com)

### Why is there no suction?

#### Possible reasons:

- The dirty water tank may be full
- The hose might not be properly connected
- The suction inlet on the brush head is blocked
- The foam filter is blocked

#### What to do:

- Empty and clean the dirty water tank
- Check the hose is properly connected and use the self-clean nozzle to check for any blockages
- Clean the brush head in warm water and gently scrub to ensure the suction inlet isn't blocked
- Clean or replace the foam filter located under the dirty water tank

# Safety Information

## Important Safety Notice

This product is **not suitable for use by children** or by individuals with **physical, sensory, or mental impairments** that may limit their ability to operate the equipment safely, **unless** they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

## Caution

Only use the machine for its intended cleaning purpose.  
This appliance is for household use only.  
Keep away from open flames and heat sources.  
Stop using the machine if the spray nozzle or suction hole becomes blocked, or if foreign objects are sucked in.  
Always empty and clean the tanks and remove blockages before reusing.  
Do not tilt, ride, or place excessive weight on the machine.  
Keep out of reach of children; do not use where children can touch the unit.  
Not for outdoor use.  
Discontinue use if the machine makes unusual noises or emits an unusual smell.

## Power Cord and Plug Safety

Clean the plug regularly.  
Ensure the plug is firmly connected when in use.  
Unplug the appliance when not in use for prolonged periods, before maintenance, checking, or moving.  
Never plug in or unplug the machine with wet hands.  
Keep the plug away from children.  
Do not damage the power cord or remove the

plug forcefully.  
Do not use if the power cord or plug is damaged.  
Avoid using overloaded sockets.  
If the appliance malfunctions, switch it off and unplug it immediately.

## Don't Use the Machine For:

- Dry dust
- Large amounts of powder, sand, stones, or rubbish
- Metal objects such as needles and pins
- Large plastic bags or stockings
- Items likely to clog the machine

## Additional Precautions

This is a wet-use machine; do not use it for large amounts of dry dust.  
In extremely cold conditions, dry the clean water tank, dirty water tank, and hose after each use to prevent freezing.  
Remove foreign objects from the hose before reusing if blocked.  
Use only water below 40°C.  
Do not use the machine on items or surfaces unsuitable for wet cleaning (e.g., delicate crafts, certain fibres, sensitive surfaces).  
Do not tilt the appliance if the tank contains water to prevent spills.  
Stop and empty the dirty water tank when it reaches the full line.  
Use only recommended detergents and check they are suitable for your items.  
Do not use foam detergents.  
Do not use with flammable liquids, hot air, oils, or combustible materials.  
Do not use if the hose is damaged or excessively bent.  
Do not block the air outlet.  
Never attempt to disassemble or repair the

# Safety Information

appliance yourself.  
This product can be used to clean cars or other domestic vehicles. Use only during dry weather. Do not allow the product to be exposed to rain, snow or high winds.  
Never immerse the appliance in water or other liquids.  
Do not use to pick up hazardous or infectious materials.  
The dirty water tank must be in place for operation.  
If the supply cord is damaged, it must be replaced by the manufacturer, their service agent, or a qualified person.

## Important


- Avoid allowing children/ animals in proximity during use
- Check that any cleaning chemicals used in combination with the product is suitable for your home; check if pet friendly/ for allergens and is suitable to use with the machine

## Note:

This appliance is not a toy and should not be used by children. Individuals with reduced physical, sensory or mental abilities should use it only with support and supervision.

The unit is suitable for use on 50Hz or 60Hz mains frequency; no adjustment is required.

## Disposal Information

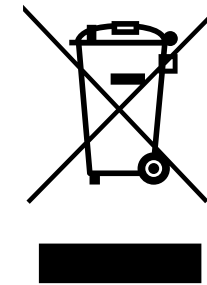

This symbol indicates that this product should not be disposed of with regular household waste. To help protect the environment and human health from uncontrolled waste disposal, please recycle this product responsibly.

# Information

---

## Customer Service

If you are having difficulty using this product and require support, please contact [support@vonhaus.com](mailto:support@vonhaus.com)

## Warranty

To register your product and find out if you qualify for a free extended warranty please go to [www.vonhaus.com/warranty](http://www.vonhaus.com/warranty)

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

## Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

## Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

## Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at [support@vonhaus.com](mailto:support@vonhaus.com)

VonHaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.  
Unit 30, Stakehill Industrial Estate  
Middleton, Manchester, M24 2RW

## EU Authorised Representative

Authorised Representative Service  
77 Camden Street Lower  
Dublin, D02 XE80  
Ireland

## Let's get started!

Visit our product hub for  
useful tips and tricks on  
getting the most out of  
your new product.

**SCAN ME**

