


# MP-SS4

## 4-Channel Speaker Selectors

**MONOPRICE**

Thank you for giving Monoprice the chance to win your business! We are confident you will find that Monoprice offers an outstanding combination of performance and value in everything we make. To ensure you get the most out of your new amplifier, please take a moment to read this manual before you get started.

### Features

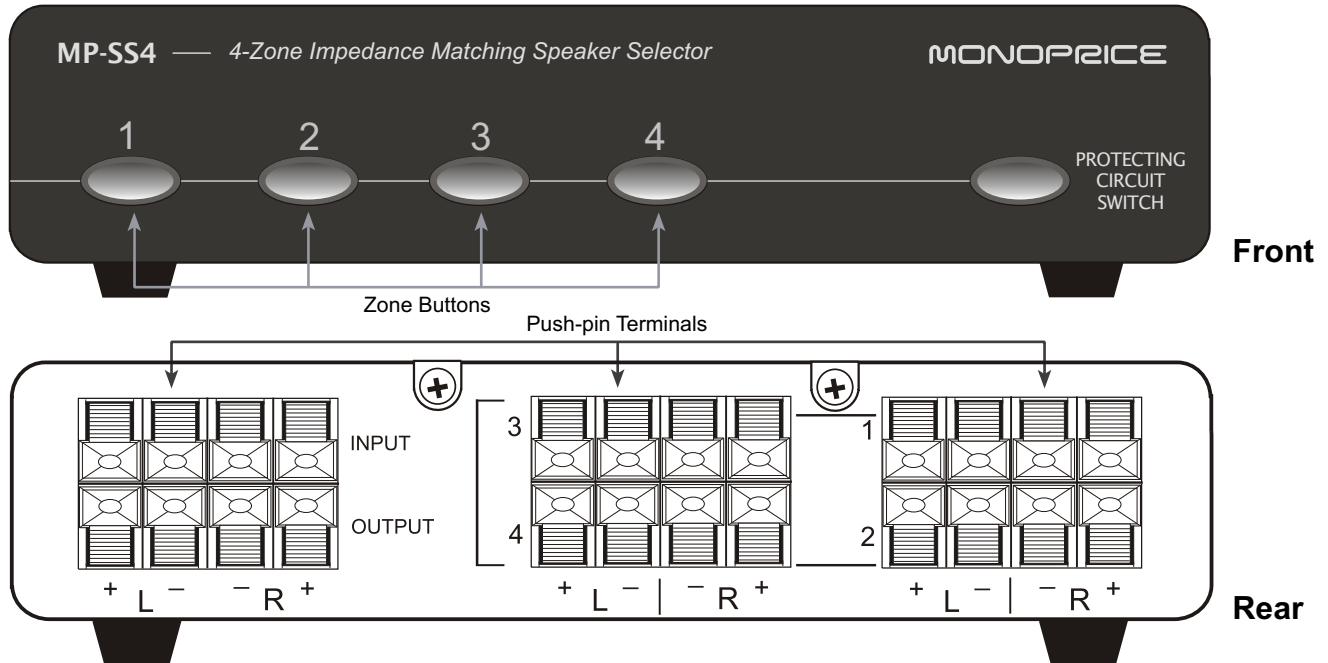

The Monoprice MP-SS4 are low-profile speaker selector boxes that allow you to distribute a stereo high-level (amplified) signal into multiple zones. These models include a manually activated impedance protection circuit that can be turned ON to prevent the impedance presented to your receiver from dropping below an unsafe level of 5 Ohms, regardless of the number and impedance ratings of your speakers. The protecting switch can also be turned off when used as part of a planned system of impedance matching volume controls, allowing you to get the most out of your amplifier. **If you are unsure, consult a professional contractor.**


### Connecting your Monoprice Speaker Selector

The terminals on the rear of the speaker selector will accommodate 14 gauge cable which will suffice for even long connections (greater than 100 feet of wire). For shorter distances, 16- or 18-gauge wire will suffice. For behind-the-wall installations, we recommend using UL Class 3 approved cable (marked "CL3") for compliance with local building codes. When connecting a speaker and amplifier, it is important to retain the correct polarity. To do this, be sure that the wire attached to the +, red, or positive terminal on the speaker connects to the +, red, or positive terminal on the rear of the selector box. Similarly, the -, black, or negative terminal on the speaker must connect to the respective -, black, or negative terminal on the selector box. Polarity should also be maintained when connecting your amplifiers outputs to the amplifier inputs on the selector box.

### Connecting Speaker Cables

1. Route the speaker cables from the amplifier and from each speaker zone to the speaker selector.
2. Strip 3/8" insulation from the end of the cable and twist the exposed end to avoid fraying.
3. Press on a "push-pin" terminal to reveal an eye into which the twisted cable is inserted; release the terminal to lock.

Specifications	MP-SS4
Listening Zones	4
Protection Circuit High Power Resistors	2 x 10 ohm/15 watt per channel
Power Handling with Protection Circuit ON	70 watts/channel
Power Handling with Protection Circuit OFF	140 watts/channel
Dimensions: L x W x H	216 x 112 x 49 mm 8.5" x 4.4" x 1.93"

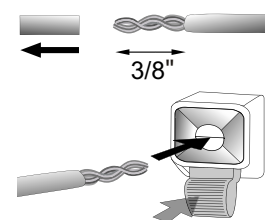

Never place a speaker selector where it is exposed to excessive moisture or heat. Leave at least 1" of space above the unit for heat dissipation.