




SUS

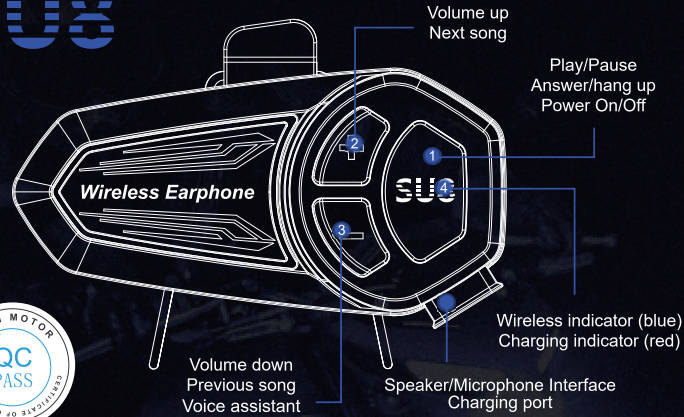

- 1 Button: Long press for 3 seconds to turn on/off (power-on 4 blue blinks fast, power-off 4 goes off) Double-tap to switch between Chinese and English (disconnect wireless)
- 2 Button: (When music is playing) short press the next song/long press volume up (Before connecting to wireless) Double-click to switch between manual and automatic answering.
- 3 Button: (While music is playing) Short press the previous song/long press volume down; Double-tap to wake up the voice assistant, double-tap again to exit the voice assistant function (exit depends on the phone)
- 4 Indicator light: Red light is always on when charging / off when full (the device automatically shuts down when the charger is plugged in under power-on condition)

**Wireless pairing:** waiting for pairing (4 blue blinks quickly); successful pairing (4 blue blinks slowly)

**Phone features:** (☺ After 10 seconds) Auto answer Manual answer "short press" 1 (incoming call) → Answer Press and hold 1 for 2 seconds (incoming call) → Refuse a call Short press during a call 1 (talking on phone) → End a call Double-click 1 → Redial last number Short press 1 (outgoing call) → Cancel call

**Clear pairing:** 2 3 Press and hold both buttons for 5 seconds to clear pairing records.

**Standby state:** Wireless mode is not connected for 10 minutes, no operation, automatic shutdown

## Instruction warning

NOTE: This product has been tested, meet the restrictions of Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device. This device complies with Part 15 of the FCC Rules. The operation needs to fulfil the following two conditions.

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning for Portable device:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## ▲ Warnings

- Do not dismantle, squeeze or puncture the battery.
- Stop using immediately if battery leaks or swells up.
- Do not expose the battery to high temperature.
- If the product is not used for a long time, please store it in a dry place and charge the product regular (once a month) to ensure that the product can work normally.

