

User Manual

Connection Tutorial:

1. First, ensure that the wireless function of your mobile phone is turned off, then take the earphones out of the charging case. After removal, the indicator lights of both earphones flash white (please wait 5 seconds after taking out the earphones). The earphones will automatically enter TWS binaural mode. After successfully entering TWS mode, only one earphone's indicator light flashes white.
2. Turn on the wireless function of your mobile phone and connect to "TWS". After successful connection, the earphone indicator light will turn off.

If only one earbud has sound, first delete the paired "TWS" device, turn off your phone's wireless function, then return to Step 1.

Touch Control Function:

1. Single-tap the touch area of the earphone: Play/Pause, Answer/Hang up calls;
2. Double-tap the touch area of the earphone: Volume Down/Volume Up;
3. Triple-tap the touch area of the earphone: Next track/Previous track;
4. Press and hold the touch area of the earphone for 3 seconds: Activate Siri / Reject incoming calls;
5. Press and hold the touch area of the earphone for 5 seconds: Power On/Power Off.



The power delivered by the charger must be between min 2.5 Watts required by the radio equipment, and max 10 Watts in order to achieve the maximum charging speed.

I. Operating Frequency Band and RF Power

Operating Frequency Band: 2402-2480MHz
Maximum Radio-Frequency Power: -3.11dBm

II. Basic Product Information

Product Name: Wireless Earphones
Model: J100
Manufacturer Name: Dongguan Baolifeng Electronic Technology Co., Ltd
Manufacturer Address: 4/F, Mingxin Science Park,138 Qiqiao Road, Qishi Town,Dongguan City, China
Purpose: Wireless audio playback and calling

III. Safety Warnings

1. Do not disassemble or modify the earphones and charging case without authorization to avoid electric shock or excessive RF radiation.
2. Keep away from high-temperature, flammable and explosive environments, and ensure the charging case is well-ventilated.
3. Keep small parts such as ear tips away from children to prevent accidental swallowing.

IV. Instructions for Use

1. Pairing: The earphones automatically enter pairing mode when taken out of the charging case (the indicator light of one earphone flashes red and blue). Search for the corresponding device name on your mobile phone and connect.
2. Indicator Explanation: Red and blue flashing = Pairing; Indicator off = Connected successfully; Red flashing = Low battery; Solid red light = Charging; Indicator off = Fully charged.
3. Touch Control (General Version): Single tap to answer/end a call or play/pause music; Double tap to Change songs.

V. Battery Safety Warnings

1. It is forbidden to disassemble or short-circuit the earphone battery and charging case. Do not throw them into open flames, and keep them away from children.
2. If the battery leaks or swells, do not touch it and dispose of it properly in accordance with local regulations.

VI. Care and Maintenance

1. Wipe the earphones and charging case with a dry soft cloth. Do not use corrosive cleaning agents.
2. Avoid dropping or squeezing the earphones. If not used for a long time, fully charge them before storing with power disconnected.
3. Regularly check the charging port and earphone contacts, clean any dirt promptly, and stop use immediately if any abnormality occurs.

VII. Recycling Instructions

Do not dispose of waste earphones and charging case as household garbage. Please recycle them properly in accordance with local regulations.



VIII. Troubleshooting

1. Unable to pair: Restart the earphones, ensure wireless function is enabled on your phone, stay within the 10-meter effective range, and keep away from interference sources such as routers.
2. Unable to charge: Check if the charging cable, port and earphone contacts are clean and intact.
3. Abnormal sound quality or signal: Clean the ear tips, shorten the operating distance and restart the earphones. For unsolved problems, contact after-sales service; do not disassemble the device.



FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.