

PRECAUTIONS	45	USE	55
General safety instructions	45	Preliminary operations	55
For this appliance	51	Materials suitable for use with microwaves	55
Appliance purpose	51	Using the accessories	56
This user manual	51	Digital programmer	57
Manufacturer's liability	52	First use	57
Identification plate	52	Cooking advice	64
Disposal	52	Mini guide to accessories	65
To save energy	52	Discover the recipes	65
Information on power consumption in off/stand-by mode	52	Special functions	65
Light sources	52	Secondary functions	72
How to read the user manual	53	Settings	72
		Other settings	75
DESCRIPTION	53	CLEANING AND MAINTENANCE	75
General description	53	Cleaning the appliance	75
Control panel	53	Cleaning the oven cavity	75
Other parts	54	Special functions	77
Accessories	54	Vapor Clean (on some models only)	77
Optional accessories (can be purchased separately)	55	Extraordinary maintenance	79
Microwaves	55	INSTALLATION	79
		Electrical connection	79
		Positioning	79

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities. For further information on the product: www.smeg.com

PRECAUTIONS

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY AND RETAIN FOR FUTURE USE

General safety instructions

Risk of personal injury

- **ATTENTION:** during use, the appliance and its accessible parts become very hot. Children must be kept away from the appliance.
- **ATTENTION:** during use, the appliance and its accessible parts become very hot. Never touch the heating elements during use.
- Protect your hands by wearing oven gloves when moving food inside the oven.
- Never try to put out a fire or flames with water: turn off the appliance and smother the flames with a fire blanket or other appropriate cover.
- This appliance may be used by children aged at least 8 and by people of reduced physical, sensory or mental capacity, or lacking in experience in the use of electrical appliances,

provided that they are supervised or instructed by adults who are responsible for their safety.

- Children must not play with the appliance.
- Keep children under the age of 8 at a safe distance unless they are constantly supervised.
- Keep children under the age of 8 away from the appliance when it is in use.
- Cleaning and maintenance must not be carried out by unsupervised children.
- The cooking process must always be monitored. A short cooking process must be continuously surveyed.
- Never leave the appliance unattended during cooking operations where fats or oils could be released, as these could then heat up and catch fire. Be very careful.
- Do not pour water directly onto very hot trays.
- Keep the oven door closed during cooking.
- If you need to move food or at the end of cooking, open the door 5 cm for a few seconds, let the steam come out, then open it fully.
- Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance.
- Switch off the appliance immediately after use.

- DO NOT USE OR STORE FLAMMABLE MATERIALS NEAR THE APPLIANCE.
- DO NOT USE AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILST IT IS IN USE.
- DO NOT MODIFY THIS APPLIANCE.
- Installation and servicing should be carried out by qualified personnel in accordance with current standards.
- Do not try to repair the appliance yourself or without the assistance of a qualified technician.
- Do not pull the cable to unplug the appliance.


For microwave appliances

- ATTENTION: if the door or the door seal is damaged, the appliance must not be used until it has been repaired by a qualified person.
- ATTENTION: it is hazardous for anyone other than a qualified person to carry out any service or repair operation which involves the removal of a cover which offers protection against exposure to microwave energy.
- ATTENTION: liquids and other foods must not be heated in sealed containers since they are liable to explode.

- When a combined function is used, children should use the appliance only when supervised by an adult, as very high temperatures are generated.
- Check the appliance visually during the cooking of foods in plastic or paper containers.



Improper use
Danger of explosion

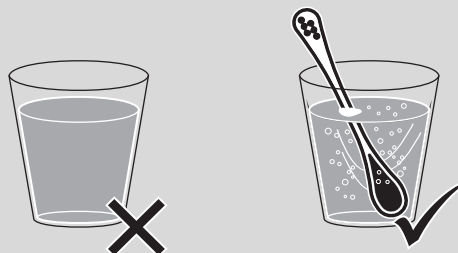

- When using the microwave to heat or reheat liquids, the boiling process may be delayed – boiling temperature can be reached without the formation of the usual "rolling boil".
- This delayed boiling and consequent superheating of the liquid can generate an explosion inside the appliance, or sudden boiling over of the superheated liquid can occur when removing the container from the appliance.



Improper use
Danger of explosion

- To avoid these dangers, it is necessary to insert the supplied boiling rod (or a heat-resistant plastic spoon) in the container while heating.
- Use the microwave only for the preparation of food for consumption. Other types of applications are strictly forbidden (e.g. drying clothes, warming slippers, sponges, wet cloths or the like, dehydrating foods) because they can lead to the risk of injury or fire.
- Microwave heating of beverages can cause delayed eruptive boiling, so care must be taken when handling the container.
- Clean the appliance regularly and remove any food residue.
- Failure to clean the oven cavity encourages deterioration of the surface, which could adversely affect the life of the appliance and possibly pose a hazard.
- Do not use the microwave to dry food.
- Do not use the microwave to heat oils or fry.
- Do not use the appliance to heat foods or beverages containing alcohol.
- Do not heat eggs in their

shells or whole hard boiled eggs; they may explode even after the heating process has completed.

- Do not heat food in its packaging.
- Do not use the combination functions to heat or boil liquids.
- Baby food should not be heated in sealed containers. Remove the cover or the teat (in the case of baby bottles). Always check the temperature of the preparation after it has been heated, it should not be too high. For an even temperature and to avoid scalding stir or shake the contents.
- Puncture the skin of food that has a hard skin or peel (e.g. potatoes, apples, etc.) before cooking.
- Before operating the appliance, ensure that the microwave oven cavity does not contain unsuitable objects or utensils.
- When the appliance is not in use, do not use the cavity to store combustible materials, kitchen utensils, food or similar objects.
- Do not use the microwave functions when the oven is empty.
- Use kitchenware and utensils that are suitable for use in a microwave oven.
- Do not use aluminium


containers to cook food.

- Do not use metal containers for cooking food or beverages.
- Do not use dishes with metallic decorations (gold-plated or silver).
- Where provided, do not use the tray and/or the deep tray for MICROWAVE-ONLY cooking.
- If smoke is present, switch off or unplug the appliance from the power socket and keep the door closed to smother any flames.
- This appliance complies with the current standards and directives regarding safety and electromagnetic compatibility. However, it is recommended that people who wear pacemakers maintain a minimum distance of 20-30 cm between the pacemaker and the microwave oven when it is in operation. Contact the pacemaker manufacturer for further information.
- The appliance operates in the 2.4GHz ISM band.
- In compliance with the provisions regarding electromagnetic compatibility, the appliance belongs to group 2 and

class B (EN 55011).



Improper use
Risk of damage to the appliance.

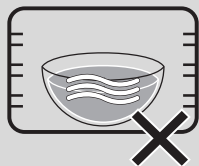

- When using microwaves, do not place the food (or its container) on the bottom of the oven. Use the accessories supplied, placed on the shelves appropriate for the recipe you wish to prepare.

- **DO NOT USE CONTAINERS/ ACCESSORIES (trays, glass dishes, etc.) PLACED DIRECTLY ON THE BOTTOM OF THE OVEN CAVITY.**


- If the appliance is installed in a cabinet, it must be operated with any cabinet door open.
- The appliance may be positioned or installed at less than 850 mm from the floor (see chapter "INSTALLATION").

Risk of damaging the appliance

- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and metallic sponges), rough or abrasive materials or sharp metal

scrapers on glass parts as this could cause scratch the surface and break the glass. Use wooden or plastic utensils.

- Do not sit on the appliance.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts made of steel or that have metallic surface finishes (e.g. anodizing, nickel- or chromium-plating).
- Racks and trays should be inserted as far as they will go into the side guides. The mechanical safety locks that prevent them from being removed must face downwards and towards the back of the oven cavity.

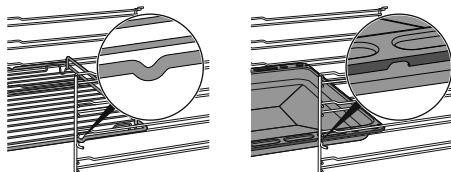

- Do not use steam jets to clean the appliance.
- Do not spray any spray product near the appliance.
- Do not obstruct ventilation openings and heat dispersal slots.
- Fire hazard: never leave objects in the oven cavity.
- **DO NOT FOR ANY REASON USE THE APPLIANCE AS A SPACE HEATER.**
- Do not use plastic cookware or containers

when cooking food.

- Do not place sealed tins or containers in the oven cavity.
- Remove all trays and racks which are not required during cooking.
- Do not cover the bottom of the oven cavity with aluminium or tin foil sheets.
- Do not place pans or trays directly on the bottom of the oven cavity.
- If necessary, you can use the tray rack (supplied or sold separately, depending on the model) by placing it on the bottom as a support for cooking.
- If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven cavity.
- Do not use the open door to rest pans or trays on the internal glass pane.
- Never use the oven door to lever the appliance into place when fitting.
- Avoid exerting too much pressure on the door when open.
- Do not use the handle to lift or move this appliance.

For pyrolytic appliances

- When the pyrolytic function is in use, the surfaces could reach temperatures that are higher than usual. Keep children at a safe distance.

- Before starting the pyrolytic cycle, remove any food residues or large spills from previous cooking operations from the inside of the oven.
- Before starting the pyrolytic cycle, remove all accessories from the oven cavity.
- Before starting the pyrolytic cycle, switch off the burners or electric hot plates of the hob installed above the oven.

Installation and maintenance

- THIS APPLIANCE MUST NOT BE INSTALLED IN A BOAT OR CARAVAN.
- The appliance must not be installed on a pedestal.
- Position the appliance into the cabinet cut-out with the help of a second person.
- To prevent any possible overheating, the appliance should not be installed behind a decoration door or a panel.
- Installation and servicing should be carried out by qualified personnel in accordance with current standards.
- Have the electrical connection performed by authorised technical personnel.
- The appliance must be connected to earth in compliance with electrical

system safety standards.

- Use cables withstanding a temperature of at least 90 °C.
- The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm.
- If the power cable becomes damaged, contact technical support immediately to arrange for it to be replaced in order to avoid possible hazards.
- **WARNING:** while positioning the appliance, make sure that the power supply cable is not caught or damaged.
- Always use any necessary/required personal protective equipment (PPE) before performing any work on the appliance (installation, maintenance, positioning or movement).
- Before performing any work on the appliance, switch off the power supply.
- Allow the appliance to be disconnected after installation, via an accessible plug or a switch in the case of a fixed connection.
- Fit the power line with an all-pole circuit breaker with a contact separation distance sufficient to provide complete disconnection in category III overvoltage conditions,

pursuant to installation regulations.

- This appliance can be used up to a maximum altitude of 4,000 metres above sea level.

For this appliance

- Do not rest any weight or sit on the open door of the appliance.
- Take care that no objects are stuck in the doors.
- Do not install/use the appliance outdoors.
- Only use the temperature probe provided or recommended by the manufacturer (on some models only).

Appliance purpose

This appliance is intended for cooking food in the home environment. Every other use is considered improper. It must also not be used:

- In kitchen areas provided for employees in shops, offices and other work environments.
- in farms/farmhouses.
- By guests in hotels, motels and other types of residential environments.
- In bed and breakfasts.



This appliance may only be installed and used indoors.

This user manual

- This user manual is an integral part of the appliance and must therefore be

kept in its entirety and within the user's reach for the whole working life of the appliance.

- Read this user manual carefully before using the appliance.
- The explanations in this manual include images, which describe all that regularly appears on the display. However, it should be kept in mind that the appliance may be equipped with an updated version of the system, and as such, all that appears on the display may differ from those in the manual.

Manufacturer's liability

The manufacturer declines all liability for damage to persons or property caused by:

- use of the appliance other than that specified;
- failure to comply with the instructions in the user manual;
- tampering with any part of the appliance;
- use of non-original spare parts.

Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

Disposal



This appliance conforms to the WEEE European directive (2012/19/EU) and must be disposed of separately from other waste at the end of its service life.

The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.



Power voltage
Danger of electrocution

- Disconnect the mains power supply.
- Unplug the appliance.

To dispose of the appliance:

- Cut the power cable and remove it.
- Deliver the appliance to the appropriate recycling centre for electrical and electronic equipment waste, or return it to the retailer when purchasing an equivalent product, on a one for one basis.

Our appliances are packaged in non-polluting and recyclable materials.

- Deliver the packing materials to the

appropriate recycling centre.



Plastic packaging
Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the plastic bags.

To save energy

- Only preheat the appliance if the recipe requires you to do so. The preheating stage can be disabled for all functions (see chapter "Preheating") apart from the PIZZA (preheating cannot be disabled) and ECO functions (no preheating stage).
- When using the functions (including the ECO function), avoid opening the door during cooking.
- Unless otherwise indicated on the package, defrost frozen foods before placing them in the oven.
- When cooking several types of food it is recommended to cook the foods one after the other to make the best use of the already hot oven.
- Use dark metal moulds: They help to absorb the heat better.
- Remove all trays and racks which are not required during cooking.
- Stop cooking a few minutes before the time normally used. Cooking will continue for the remaining minutes with the heat which has accumulated inside the oven.
- Reduce any opening of the door to a minimum to avoid heat dispersal.
- Keep the inside of the oven clean at all times.


Information on power consumption in off/stand-by mode

Technical data on the appliance's power consumption in off/stand-by mode can be found at www.smeg.com under the page corresponding to the product in question.

Light sources

- This appliance contains light sources which cannot be replaced by the user and must only be replaced by the

technical assistance service.

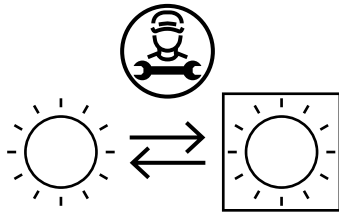

- The light sources contained in the appliance are declared suitable for operation at ambient temperature $\geq 300^{\circ}\text{C}$ and intended for use in high

temperature applications such as ovens.

- This appliance contains light sources of efficiency class "G".

How to read the user manual

This user manual uses the following reading conventions:



Warning/Caution




Information/Advice

EN

DESCRIPTION


General description

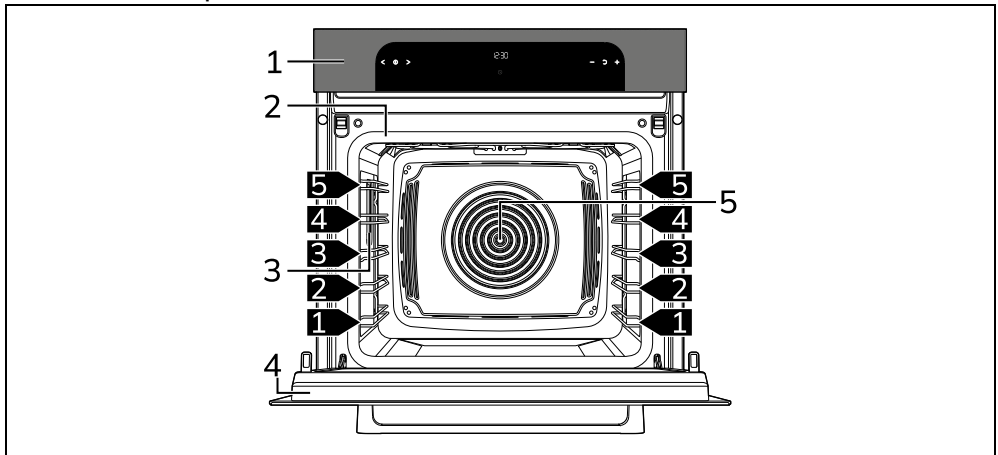

- 1 Control panel
- 2 Gasket
- 3 Light
- 4 Door

- 5 Fan
- 1,2,3... Frame shelf

Control panel

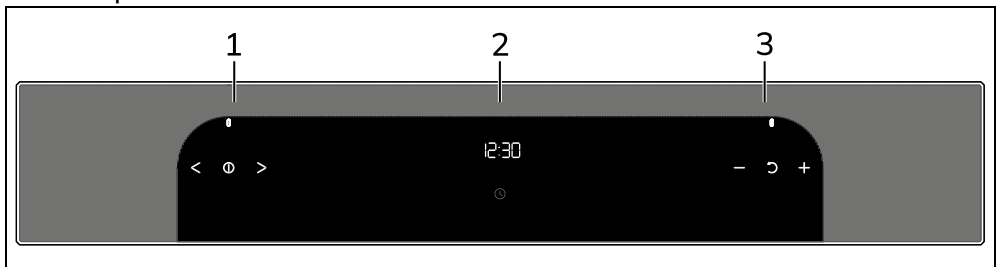

1 Function touch buttons

By means of these touch buttons you can:

- turn the appliance on and off;

- select a function.

2 Digital programmer

Displays the current time, the selected

cooking temperature, power and function and any time set.

3 Temperature touch buttons

By means of these touch buttons you can set:

- the cooking temperature;
- the duration of a function;
- programmed cooking cycles;
- the current time;
- timer;
- to cancel a change or return to the previous screen.

Other parts

Shelves

The appliance features shelves to position trays and racks at different heights. The insertion heights are indicated from the bottom upwards.


Cooling fan

The fan cools the appliance and comes into operation during cooking.

The fan causes a steady outflow of air from above the door which may continue for a short period of time even after the appliance has been turned off.

Oven lighting

The appliance's interior lighting comes on:


- When the door is opened.
- when the  button is pressed on the display;
- when any function, apart from the

 -  -  functions are selected (depending on the model).

Accessories


- Not all accessories are available on some models.
- The accessories intended to come into contact with food are made of materials that comply with the provisions of current legislation.
- Original supplied and optional accessories can be requested to Authorised Assistance Centres. Use only original accessories supplied by the manufacturer.

Boiling rod

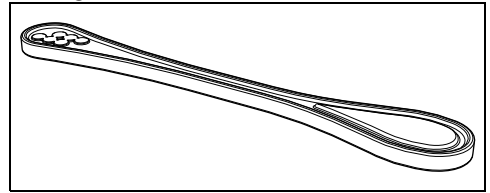


To be placed in containers when heating liquids, necessary to avoid delayed boiling.

Rack

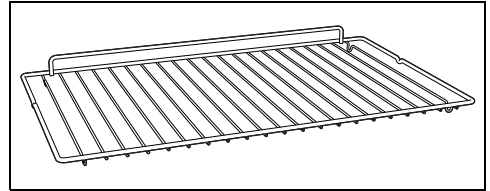


Used for supporting containers with food during cooking.

Glass dish

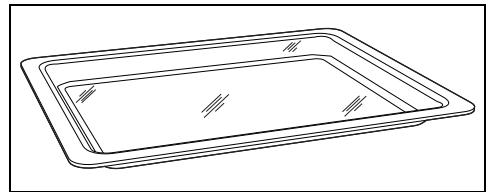


Useful for any type of cooking and collecting fat from foods placed on the rack above. To be placed on top of the lowered pan stand, it is particularly suitable for microwave cooking.

Tray rack

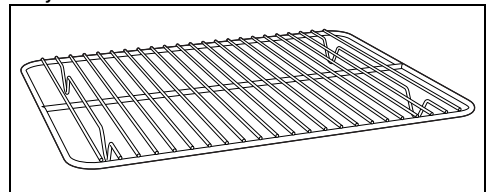

To be placed above the glass dish. To cook foods which may drip.

Deep tray

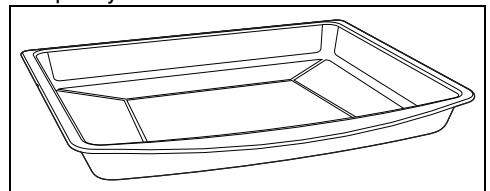


Useful for collecting fat from foods placed on the rack above and for cooking pies,

pizzas, baked desserts, biscuits, etc.

! WARNING: The deep tray can be used for combined microwave cooking. Do not use it for microwave cooking ONLY.


Optional accessories (can be purchased separately)

STONE2 or refractory stone (on some models only)

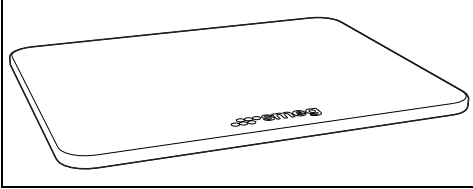

Ideal accessory for baking bread (pizza, bread, focaccia...), but you can also use it for more delicate preparations such as biscuits.


BBQ (teflon-coated barbecue grill pan)

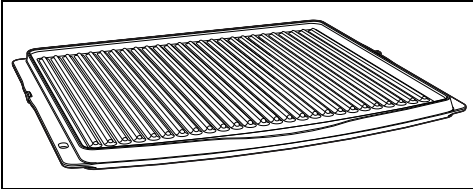

Double-use accessory: the striped side is recommended for grilling meat (fillets, hamburgers...), while the smooth surface

can be used for cooking vegetables, fruit, fish...

AIRFRY (oil-free frying rack)

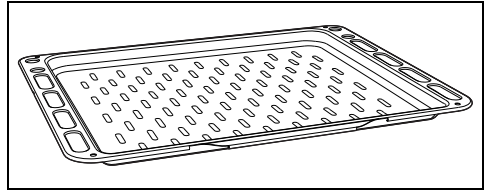

Recommended accessory for air frying breaded, pre-cooked and/or frozen foods (French fries, potato or meat croquettes, mozzarella, etc.).

Microwaves

The appliance is equipped with a microwave generator called a magnetron. The microwaves generated are evenly emitted into the oven cavity in order to reach the food and heat it.

Heating takes place through friction between the molecules contained in the food (mainly water molecules), with the consequent generation of heat.

The heat generated directly inside the food allows it to be defrosted, re-heated or cooked in a shorter time compared to traditional cooking.

The use of suitable containers for microwave cooking leads to the microwaves reaching the food in a uniform manner.

USE

Preliminary operations

! See General safety instructions.

- Remove any protective film from the outside or inside of the appliance, including accessories.
- Remove any labels (apart from the technical data plate) from the accessories and shelves.
- Remove and wash all the appliance accessories (see chapter "CLEANING AND MAINTENANCE").

First heating

1. Set a cooking time of at least one hour (see paragraph "Using the oven").
2. Heat the empty oven compartment at the maximum temperature to burn off

any residues left by the manufacturing process.

When heating the appliance

- air the room;
- don't stay.

Materials suitable for use with microwaves

In general, in order for all of the food to be reached, the materials used for microwave cooking must be transparent to microwave energy.

Below is a table of materials to use and those not to use:

MATERIALS TO USE:

- Glass (always remove the lids)*
- Baking ware
- Glasses
- Jars

- Porcelain
- Earthenware
- Plastic (only where suitable for microwave use)*
- Containers
- Plastic wrap (must not come into contact with the food)

*only if heat-resistant.

MATERIALS NOT TO USE

- Metals (can lead to arcing or sparks)
 - Aluminium foil
 - Aluminium trays
 - Plates
 - Metal utensils
 - Freezer bags tie wraps
- Wood
- Crystal glasses
- Paper (risk of fire)
- Polystyrene containers (danger of contamination of foodstuffs)



Dishes must be free of metal decorations.



Do not use metal accessory trays in the microwave or combined microwave functions.

Testing dishes



The microwave function can be used without any food inside the oven only for this test.

To check whether the cookware is suitable for use with microwave cooking, carry out this simple test:

1. Remove all accessories from the oven cavity.
2. Place the cookware to be tested on the rack inserted in the first shelf.
3. Select the microwave function at maximum power level (e.g. 1000 W).
4. Set a cooking time of 30 seconds.
5. Start cooking.



Unsuitable cookware
Risk of damage to the appliance

- Stop the test immediately if there is a cracking sound or if sparks are emitted from the cookware. If this happens, it means that the cookware is not suitable for microwave cooking.

At the end of the test the cookware must be either cold or slightly warm. If the cookware is hot then it should be considered as


unsuitable for microwave use.

Using the accessories

Racks and trays

Racks and trays have to be inserted into the side guides until they come to a complete stop.

- The mechanical safety locks that prevent the rack from being removed accidentally must face downwards and towards the back of the oven cavity.

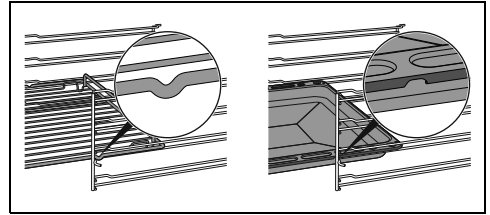


Gently insert racks and trays into the oven until they come to a stop.



Clean the trays before using them for the first time to remove any residues left by the manufacturing process.

Glass racks and glass dish

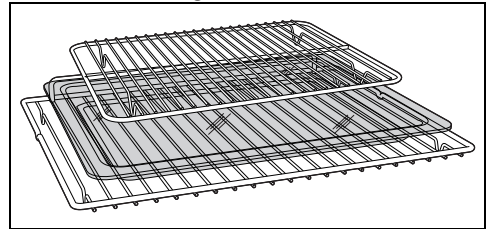

The glass dish must be placed on the rack. The tray rack has to be inserted into the glass dish. In this way fat can be collected separately from the food which is being cooked.

Boiling rod



Improper use
Danger of explosion/burns


- To avoid the danger of explosion inside the appliance or the sudden boiling over of superheated liquids, always place a boiling rod in the liquid that is being heated.




High temperature Risk of damage to the accessory

- Use the boiling rod only with Microwave functions. The rod must not be used with combination and traditional functions.

When using the microwave to heat or reheat liquids, the boiling process may be delayed. To avoid this, place the boiling rod (or a heat-resistant plastic spoon) supplied into the container while heating.

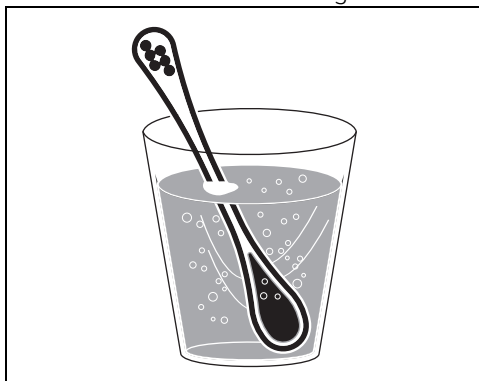

Digital programmer

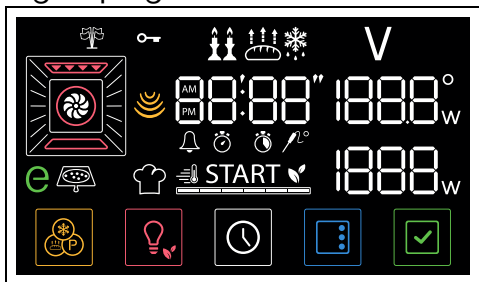

The parameters and values for the currently selected function will be indicated on the display. To use it, simply press the touch buttons on the control panel or press the buttons on the lower part of the display, depending on the operations to be performed by the appliance.

Touch buttons

The control panel is equipped with touch buttons that can be used by lightly pressing the required icon.

- The and buttons allow you to select the required function within the

screen on the display.



Press and hold the or button to quickly scroll through the parameters to be changed.

EN

- Press the button to exit the current function and return to the clock screen on the display.
- Buttons and can be used to increase or decrease the value of the selected parameter.



Press and hold the or button to quickly change the value of the selected parameter.


- Press the button to reset the selected parameter to its previous value.
- Press the button to return to the previously selected screen.

First use





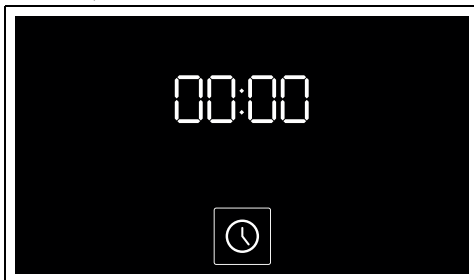

If the time is not set, the oven will not switch on.



When using the appliance for the first time or after a prolonged power failure, will appear on the display and the button will flash. In order to start a cooking function, the current time has to be set.











Setting the time



1. Press the button.

2. Use the  and  buttons to select the time format to display ( or ).


 When you select the  version, **AM** (am) or **PM** (pm) appear on the display.


3. Press the  button to confirm and modify the time.
4. Press the  and  buttons to adjust the hours.
5. Press the  button to set the hours and move to the minutes.
6. Press the  and  buttons to adjust the minutes.
7. Press the  button to confirm.

 It may be necessary to change the current time, for example for daylight saving time.

 To cancel the operation, press and hold the  button on the display for a few seconds.


Modifying the time

1. In the main menu, hold down the  button for a few seconds.

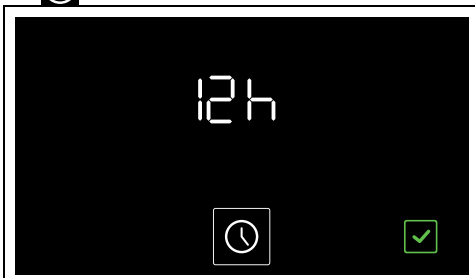


2. Modify the time as described in point 2 in the previous chapter.



Low brightness


After 2 minutes of inactivity, the  button and the current time appear on the clock display in low light.

In this mode, the touch buttons on the control panel are disabled except for the

-  button on the control panel.





 The display can be switched to low brightness mode by pressing the  button on the control panel.

 The display will only switch to low brightness mode when the oven is not hot. Whenever the touch buttons are pressed, the appliance beeps and the word "Hot" is displayed


Reactivating the display




To activate the display and the touch buttons on the control panel:

- Press and hold the  button on the display for about 1 second or press the  button on the control panel.


The display turns on and the touch buttons on the control panel light up.


Using the oven


 See General safety instructions.


 If the appliance has been waiting for a user action for more than twenty minutes, the text  appears on the display. In this case, it is not possible to continue with the operation and it is necessary to press the  button on the control panel.



Microwave cooking

 By penetrating directly into the food, microwaves allow you to cook in very short times and with significant energy savings. Suitable for cooking without fat, they are also ideal for defrosting and reheating food, preserving both its original appearance and aroma.

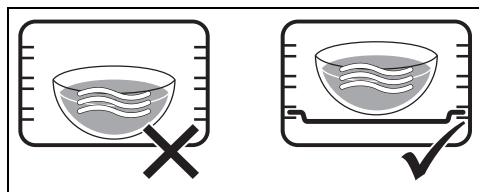
 When using microwaves, do not place the food (or its container) on the bottom of the oven. Use the accessories supplied, placed on the shelves appropriate for the recipe you wish to prepare.






 DO NOT USE CONTAINERS/ACCESSORIES (trays, glass dishes, etc.) PLACED DIRECTLY ON THE BOTTOM OF THE OVEN CAVITY.

1. Open the door.
2. Place the food inside the oven.
3. Close the door.
4. Press the  and  buttons on the control panel to select the MICROWAVE

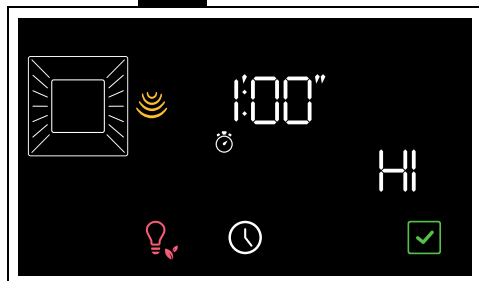
function



The  button and the text **START** start flashing.

5. Press the  and  buttons on the control panel to set the power level from

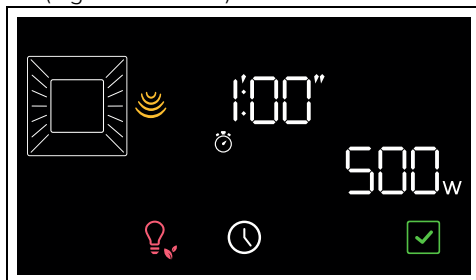

100W to 600W to HI (maximum power) (e.g. "500 watts").





See the Microwave Power section for information on microwave power.


6. Press the  button.

The indicator lights  and  flash on the display.

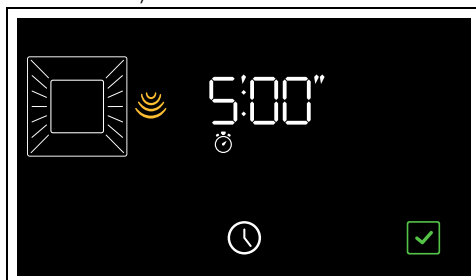

7. Press the  and  buttons on the control panel to set the cooking time (from 5 seconds to 30 minutes) (e.g. "5 minutes").



Press the  button to confirm the cooking duration.

Press the  button to start the function.


8. Check the progress of the cooking by switching on the oven light.

 When the door is opened, the function in progress is stopped. Press the  button to resume the function.

When cooking ends, a sound is emitted and **End** appears on the display.

- Press the  button on the control panel to exit from the function.



When the  button is pressed, the function is displayed again with the same parameters as the function that has just ended.

Microwave power levels





Below is a list of the power levels that can be selected:


Power (W)	Uses
100	
200	Thawing food
300	
400	Delicate cooking
500	
600	Re-heating and cooking food
HI	Heating liquids


Combination cooking






Combination cooking is a mix of traditional and microwave cooking. These functions are indicated by the microwave symbol and the traditional cooking symbol being illuminated.

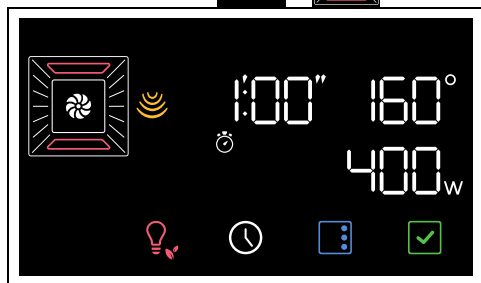


- Press the  and  buttons on the control panel to select a combination cooking function (e.g. MICROWAVE + FAN ASSISTED  + ).




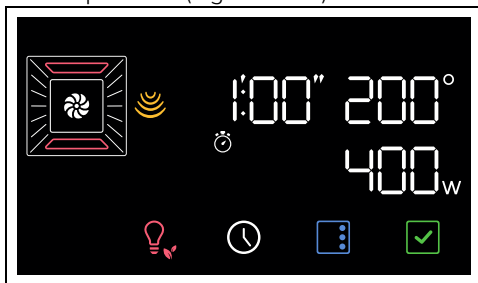

The  button and the text **START** start flashing.

- Press the  and  buttons on the control panel to set the required temperature (e.g. "200°C").



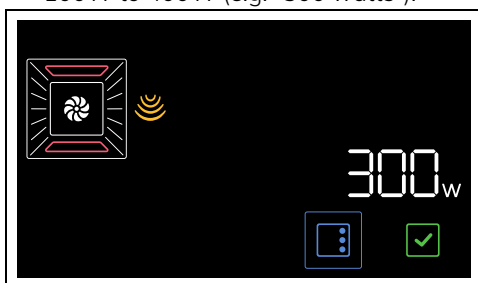


- Press the  button.
- Press the  and  buttons on the control panel to set the power level from 100W to 400W (e.g. "300 watts").




- Press the  button to confirm the microwave power setting.
- Press the  button.

The indicator lights  and  flash on the display.

- Press the  and  buttons on the control panel to set the cooking time (from 1 minute to 6 hours) (e.g. "15 minutes").

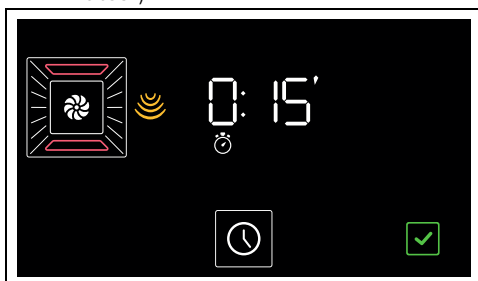

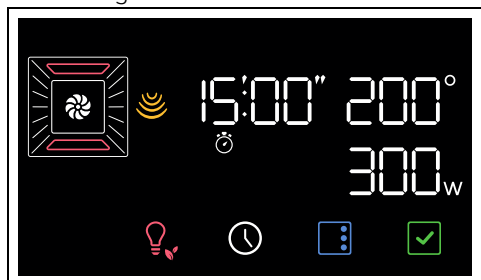

8. Press the  button to confirm the cooking duration.





9. Press the  button again to start the function.



Preheating stage

Cooking itself is preceded by a preheating stage, which allows the appliance to heat to the cooking temperature more quickly.


This stage is indicated by the switching on of the indicator light  and by a progressive increase in the temperature level reached .

 You can skip the preheating phase by holding down the  button for a few seconds.

At the end of preheating:

- the  indicator light switches off;
- the appliance beeps;
- the words **START** and the  button flash to indicate that the food can be introduced into the oven cavity.

Cooking phase

1. Open the door
 2. Place the dish with the food to be cooked into the oven cavity.
 3. Close the door.
- or
- If the dish with the food is already inside the oven cavity, press the  button to start cooking.
4. Check the cooking status of the food by turning on the internal light.


End of cooking

At the end of the cooking process an acoustic signal sounds and the display shows **End**.


5. Press the  touch button on the control panel to exit the function.

List of combined cooking functions


MICROWAVE + FAN-ASSISTED

 The operation of the fan, combined with traditional cooking, ensures consistent cooking even with complex recipes. Using the microwave on the other hand leads to rapid internal cooking of the food.



MICROWAVE + THERMO-VENTILATED




 For combination cooking of food in a short time thanks to the microwave action working together with hot air circulation.


MICROWAVE + GRILL



 The use of the grill results in perfect browning of the food's surface. Using the microwave on the other hand leads to rapid internal cooking of the food.


Traditional cooking

 Cooking can be interrupted at any time by pressing and holding the  button.

1. Use the  and  buttons to select the required function (for example "FAN ASSISTED ").

The  button and the text **START** start flashing on the display.

2. Press the  and  buttons to select the required temperature (e.g. "200°C").

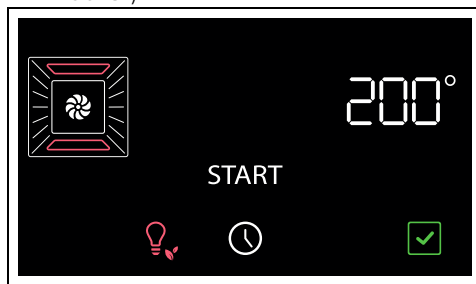

3. Press the  button to start the function.




When the door is opened, the function in progress is stopped. The function restarts automatically when the door is closed.

Preheating stage



Cooking itself is preceded by a preheating stage, which allows the appliance to heat to the cooking temperature more quickly.

This stage is indicated by the switching on of the indicator light  and by a progressive increase in the temperature level reached .



You can skip the preheating phase by holding down the  button for a few seconds.

At the end of preheating:

- the  indicator light switches off;
- the appliance beeps;
- the words **START** and the  button flash to indicate that the food can be introduced into the oven cavity.


Cooking phase



At this stage, a "count up" is displayed, measuring the time that has elapsed since the start of cooking.

1. Open the door.
2. Place the food to be cooked in the oven.
3. Close the door.

or

- If the food is already in the oven, press the  button on the display to start cooking.
4. Check the progress of the cooking by switching on the oven light.


End of cooking

5. Press the  button on the control panel to exit from the function.

 

Timed cooking





Timed cooking is the function that allows a cooking operation to be started and then ended after a specific length of time set by the user.

1. After selecting a cooking function and temperature, press the  button.

The indicator lights  and  flash on the display.

2. Press the  and  buttons on the control panel to set the cooking time (from 1 minute to 13 hours) (e.g. "25 minutes").

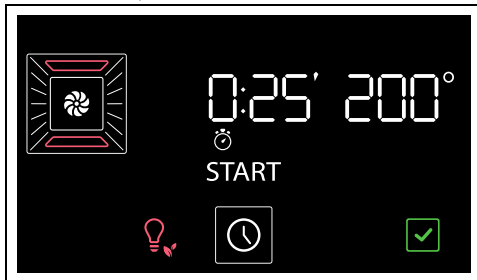

3. Press the  button on the display to confirm the cooking duration.




Bear in mind that a few minutes for oven preheating must be added to the cooking time.

4. Press the  button to start the function.

At the end of the preheating stage:


5. Place the food in the oven.
6. Close the door, cooking starts again automatically.

Timed cooking is indicated by the progressive decrease in the time shown on the numeric display and the progressive decrease of the progress bar .


 
When cooking ends, a sound is emitted and **End** appears on the display.

7. Press the  button on the control panel to exit from the function.



When the  button is pressed, the function is displayed again with the same parameters as the function that has just ended.

How to cancel timed cooking

1. Press the  button on the display for a few seconds.
2. Press the  button on the control panel to reset the cooking time.

- Press the  button to confirm.


Programmed cooking





Programmed cooking is the function that allows timed cooking to be stopped automatically at a time set by the user, after which the appliance will switch off automatically.




For safety reasons, it is not possible to set the end of cooking time by itself without setting the cooking duration.

- After selecting a cooking function and temperature, press the  button.

The indicator lights  and  flash on the display.


- Press the  and  buttons on the control panel to set the cooking time (from 1 minute to 13 hours) (e.g. "25 minutes").

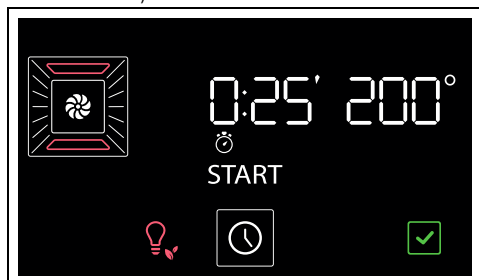


- Press the  button.

The indicator lights  and  flash on the display.

- Press the  and  buttons to set the cooking end time (e.g. "13:15").

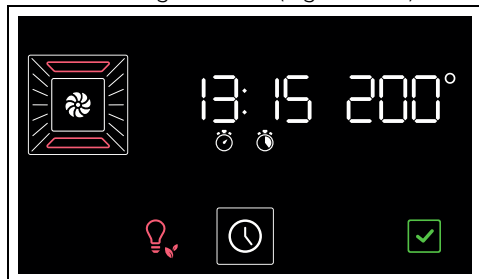

- Press the symbol  to confirm the cooking end time.

- Press the  button to start the function.

The appliance waits for the set start time.




The minutes required for pre-heating are already included in the end-of-cooking time.

When cooking ends, a sound is emitted and **End** appears on the display.

- Press the  button on the control panel to exit from the function.

How to cancel programmed cooking

- Press the  button for a few seconds.

The indicator lights  and  flash on the display

- Press the  button briefly.

The indicator lights  and  flash on the display.

- Press the  button on the control panel to reset the cooking time.

- Press the  button to confirm.



This only cancels the programmed cooking. Timed cooking starts immediately together with the preheating stage.

Minute minder timer during cooking







The minute minder timer does not stop the cooking operation but rather informs the user when the set time has run out.

- Press the  button.

The indicator lights  and  flash on the display.

- Press the  button.

The digits  and the indicator light  flash on the display.

- Press the  and  buttons on the control panel to set the timer duration (from 1 minute to 13 hours).
- Press the  button to confirm.
When the minute minder finishes, a sound is emitted and the indicator light  on the display flashes.
- Press one of the buttons at the bottom of the display to stop the buzzer.

List of traditional cooking functions



Not all functions are available on some models.

STATIC



Traditional cooking suitable for the preparation of one dish at a time. Ideal for cooking roasts, fatty meats, bread, pies.

FAN ASSISTED



Intense and uniform cooking. Ideal for biscuits, cakes and multilevel cooking.

CIRCULAIRE



The heat is distributed quickly and uniformly. Suitable for all dishes, ideal for cooking on multiple levels without mixing smells or flavours.

GRILL



It allows to obtain excellent grilling and grating results. Used at the end of cooking, it gives a uniform browning to the dishes.

BOTTOM HEAT



The heat comes from the bottom of the cavity. Perfect for cakes, pies, tarts and pizzas.

ECO



This function is particularly suitable for cooking on a single shelf with low energy consumption. It is recommended for all types of food, excluding those that can create a lot of humidity (such as vegetables).
To obtain maximum energy savings and reduce cooking times, it is recommended to place food in the oven without preheating.



When using the ECO function, avoid opening the door during cooking.



Cooking (and preheating) times are longer with the ECO function and may depend on the amount of food in the oven.



The ECO function is a delicate cooking function and is recommended for food withstanding temperatures lower than 210°C; in case of cooking at higher temperatures, select another function.

Cooking advice

General advice

- Use a fan assisted function to achieve consistent cooking at several levels.
- It is not possible to shorten cooking times by increasing the temperature (the food could be overcooked on the outside and undercooked on the inside).

Advice for cooking meat

- Cooking times vary according to the thickness and quality of the food and to consumer taste.
- Use a meat thermometer when roasting meat, or simply press on the roast with a spoon. If it is hard, it is ready; If not, it needs another few minutes cooking.

Advice for cooking with the Grill and the Fan with grill

- Meat can be grilled even when it is put into the cold oven or into the preheated oven if you wish to change the effect of the cooking.
- When using the fan-assisted with grill function, we recommend that you preheat the oven before grilling.
- We recommend placing the food at the centre of the rack.
- With the Grill function, we recommend that you set the temperature to the maximum value to optimise cooking.

Advice for cooking desserts/pastries and biscuits

- Use dark metal moulds: They help to absorb the heat better.
- The temperature and the cooking time depend on the quality and consistency of the dough.
- To check whether the dessert is cooked right through: At the end of the cooking time, put a toothpick into the highest

point of the dessert. If the dough does not stick to the toothpick, the dessert is cooked.

- If the dessert collapses when it comes out of the oven, on the next occasion reduce the set temperature by about 10°C, selecting a longer cooking time if necessary.

Advice for defrosting and proving

- Place frozen foods without their packaging in a lidless container on the first shelf of the oven.
- Avoid overlapping the food.
- To defrost meat, use the rack placed on the second level and a tray on the first level. In this way, the liquid from the defrosting food drains away from the

food.

- The most delicate parts can be covered with aluminium foil.
- For successful proving, a container of water should be placed in the bottom of the oven.

To save energy

- Stop cooking a few minutes before the time normally used. Cooking will continue for the remaining minutes with the heat which has accumulated inside the oven.
- Reduce any opening of the door to a minimum to avoid heat dispersal.
- Keep the inside of the appliance clean at all times.

Mini guide to accessories

We recommend the use of the grill as a support surface for baking moulds/casseroles.

In the absence of the baking tray grill, the grill can be used as a base for grilling with the deep baking tray placed on a shelf below to collect the juices.



Rack

For multi-level cooking, place two racks keeping an empty level between one and the

other and use the FAN-HEATED function

 


Glass dish

Use the glass dish by placing it on the grid



It is suitable for microwave and combination microwave cooking.



Tray rack

We recommend using the baking tray grill as a base for food to grill. The pan below collects the juices from the grills.

We recommend the use of the deep baking tray for cooking on one level only.

Place the deep baking tray on the centre shelf when using the fan-assisted functions.

When using the STATIC function,



place the deep baking tray on the required

shelf.



Deep tray

Place the baking tray on the last shelf with the baking tray grill to cook in GRILL mode




CAUTION: The deep tray can be used for combined microwave cooking. Do not use it for microwave cooking only.

Discover the recipes



To consult the recipes developed for various categories of food and to get more information on cooking suggestions, we recommend visiting the dedicated page on the www.smeg.com website, which can be reached using the QR code on the leaflet supplied with the product.

Special functions




- Press the  button on the display.





To scroll through the available


functions, press the  and 




buttons until reaching the special function required.


 To exit the selected function, press and hold the  button on the control panel or the  button on the display.

 To return to the previously selected screen, press the  button on the control panel


TURBO



 Allows rapid cooking on multiple levels without mixing aromas. Ideal for large volumes of food or intense cooking.

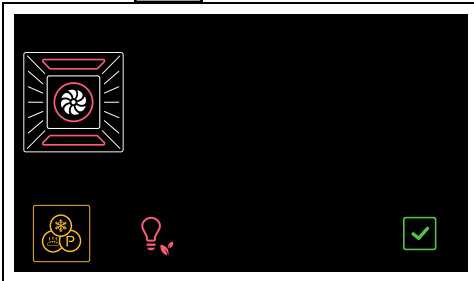
1. After accessing the special functions menu, press the  and  buttons on the control panel to select the function .



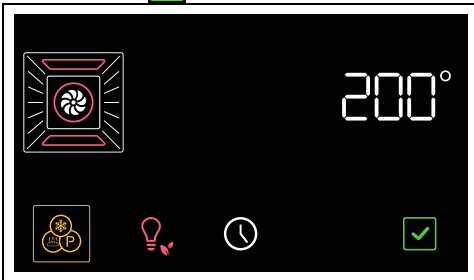

2. Press the  button to confirm.




3. Press the  and  buttons on the control panel to select the required temperature.




4. Press the  button to start the function.


 As with the normal cooking functions, it is possible to skip the preheating and set a timed and programmed cooking.

5. After preheating, open the door and place the food in the oven cavity.
6. Close the door.
7. Check the progress of the cooking by switching on the oven light.
8. Press the  button on the control panel to exit from the function.


PIZZA

 Function designed for cooking pizza. Perfect not just for pizzas, but also for biscuits and cakes.


1. After accessing the special functions menu, press the  and  buttons on the control panel to select the function .

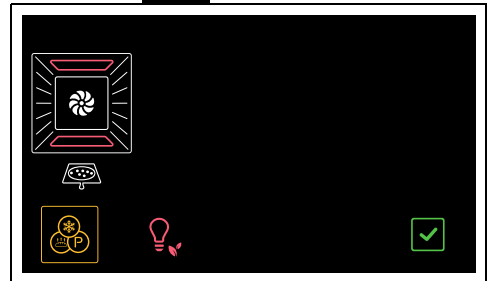

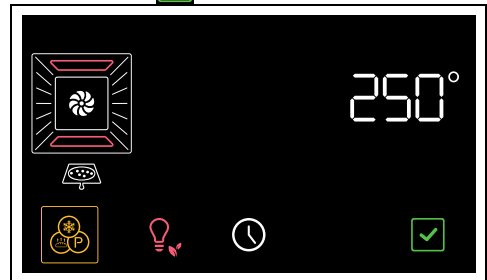

2. Press the  button to confirm.




- Press the  button to start the function.


 As with the normal cooking functions, it is possible to skip the preheating and set a timed and programmed cooking.




 It is not possible to skip the preheating stage when using this function.

- After preheating, open the door and place the food in the oven cavity.
- Close the door.
- Check the progress of the cooking by switching on the oven light.
- Press the  button on the control panel to exit from the function.

STONE


 Useful for stone cooking. For use with the PPR2 or STONE accessory (sold separately).




 Refer to the instructions and recommendations for use described in the accessory documentation.


- Open the door.
- Place the PPR2 or STONE accessory in the oven (see the specific instructions for the accessory).
- Close the door
- After accessing the special functions menu, press the  and  buttons on the control panel to select the function .

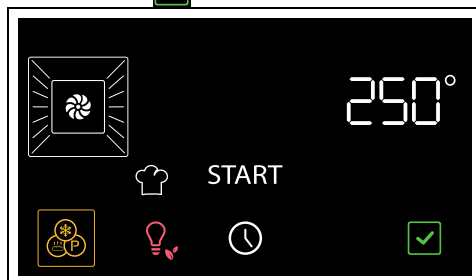


- Press the  button to confirm.





- Press the  and  buttons on the control panel to select the required temperature.
- Press the  button to start the function.



 As with the normal cooking functions, it is possible to skip the preheating and set a timed and programmed cooking.

- After the end of the preheating stage, open the door and place the food on the accessory.
- Close the door.
- Press the  button on the control panel to exit from the function.


BBQ (Barbecue)

 Used for barbecue cooking. For use with the BBQ accessory (sold separately).


 Refer to the instructions and recommendations for use described in the accessory documentation.



- Open the door.
- Place the BBQ accessory in the oven.
- Close the door
- After accessing the special functions menu, press the  and  buttons

on the control panel to select the function **bb9**.

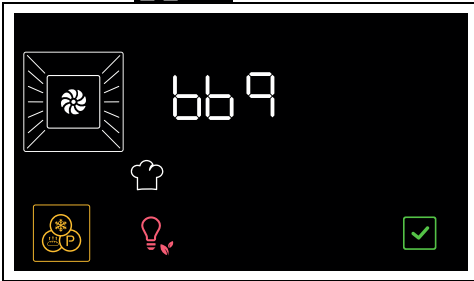

 
5. Press the  button to confirm.

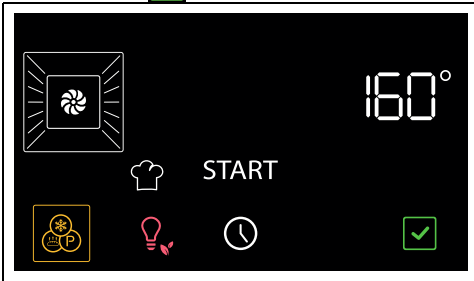

6. Press the  and  buttons on the control panel to select the required temperature.

7. Press the  button to start the function.


 As with the normal cooking functions, it is possible to skip the preheating and set a timed and programmed cooking.


8. After the end of the preheating stage, open the door and place the food on the accessory.



9. Close the door.

10. Press the  button on the control panel to exit from the function.


AIRFRY

 Useful for oil-free frying. For use with the AIRFRY accessory (sold separately).


 Refer to the instructions and recommendations for use described in the accessory documentation.



1. After accessing the special functions menu, press the  and  buttons

on the control panel to select the function **FrY**.

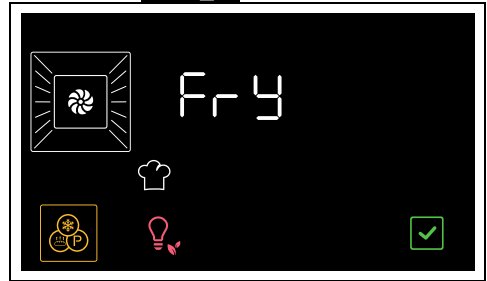

 
2. Press the  button to confirm.

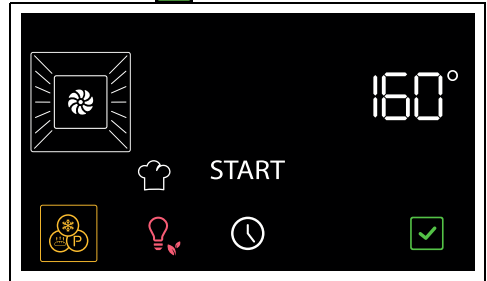

3. Press the  and  buttons on the control panel to select the required temperature.

4. Press the  button to start the function.


 As with the normal cooking functions, it is possible to skip the preheating and set a timed and programmed cooking.

5. After the end of the preheating stage, open the door and place the AIRFRY accessory with the food to be cooked inside the oven.



6. Close the door.

7. Press the  button on the control panel to exit from the function.

POP CORN


 Ideal for making popcorn by means of microwaves.

1. Place the bag of popcorn on the glass tray.
2. Open the door.
3. Place the glass tray on the rack on the second shelf from the bottom.
4. Close the door.


5. After accessing the special functions menu, press the  and  buttons on the control panel to select the function **POP**.



6. Press the  button to confirm.

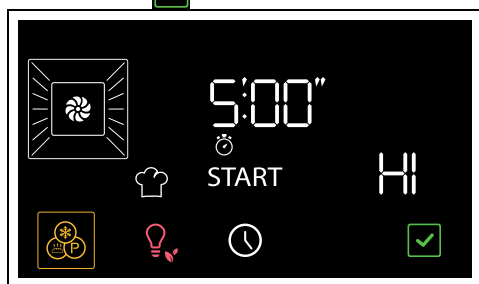


7. Press the  button to start the Popcorn function.



 The duration and microwave power cannot be changed by the user.

When cooking ends, a sound is emitted and **End** appears on the display.


8. Press the  button on the control panel to exit from the function.

SOFT


 **SOFT** Ideal for defrosting cakes and desserts by means of microwaves.



1. Place the food to be defrosted in a Pyrex container/bowl or other microwave-safe material.
2. Open the door.
3. Place the container/bowl on the rack on the second shelf from the bottom.
4. Close the door.
5. After accessing the special functions menu, press the  and  buttons

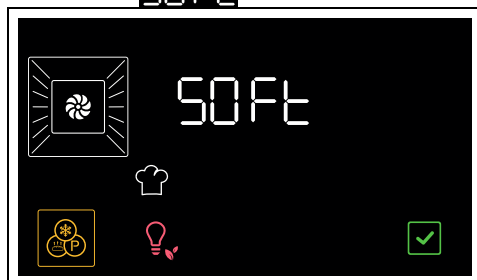
on the control panel to select the function **SOFT**.

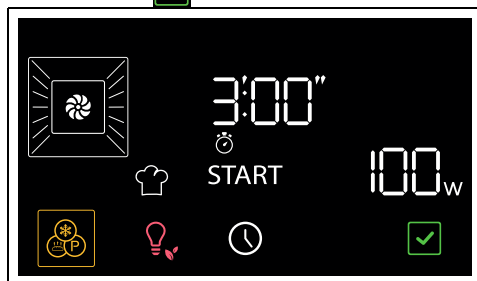


6. Press the  button to confirm.



7. Use the  and  buttons on the control panel to set the duration of the function (the default value is ideal for a block of butter of 250 grams or a frozen cake of about 700 grams).

8. Press the  button to start the Soft function.

 The duration and microwave power cannot be changed by the user.



When cooking ends, a sound is emitted and **End** appears on the display.


9. Press the  button on the control panel to exit from the function.

MELT


 **MELT** Ideal for melting chocolate bars by means of microwaves.



1. Place the chocolate to be melted in a Pyrex container/bowl or other microwave-safe material.
2. Open the door.
3. Place the container/bowl on the rack on the second shelf from the bottom.
4. Close the door.


5. After accessing the special functions menu, press the  and  buttons on the control panel to select the function **MELT**.

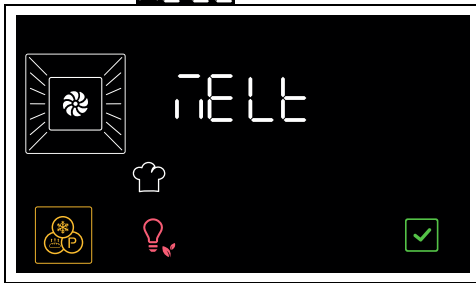

 
6. Press the  button to confirm.

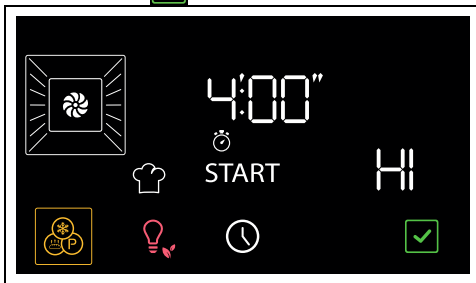


7. Use the  and  buttons on the control panel to set the duration of the function (the default value is ideal for melting a bar of chocolate).

8. Press the  button to start the Melt function.

 The duration and microwave power cannot be changed by the user.


When finished, a buzzer sounds briefly, which can be deactivated by touching any point of the display or by opening the door.







SABBATH


 This function results in the appliance operating in a particular way:

- Cooking can proceed indefinitely, it is not possible to set any cooking duration.
- No preheating will be performed.
- The cooking temperature which can be selected varies between 60-150 °C.
- Oven light disabled, any operation such as opening the door (where present) or manual activation will not activate the light.

- The internal fan remains turned off.
- Touch buttons and audible prompts remain disabled.



 After activating the Sabbath function, the settings cannot be altered. Any action on the control panel touch buttons and/or display buttons will have no effect.

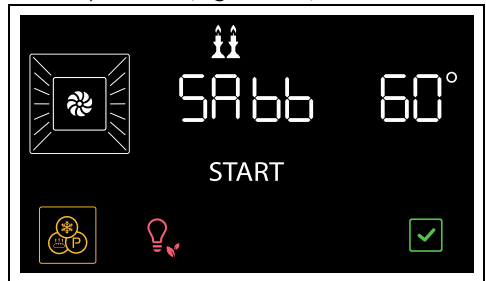1. After accessing the special functions menu, press the  and  buttons on the control panel to select the function .
2. Press the  button to confirm.
3. Press the  and  buttons on the control panel to select the required temperature (e.g. "90°C").







4. Press the  button to start the function.



To exit the function:


1. Press the  button on the display for a few seconds.
2. When the control panel is reactivated, press the  button to end the function.


PROVING









 This function is particularly suitable for helping dough to rise more quickly.

 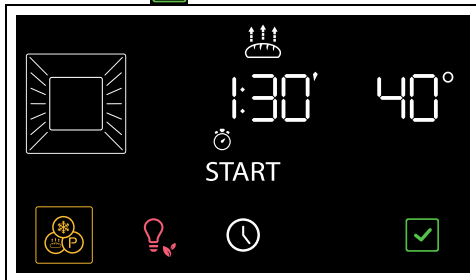
- After accessing the special functions menu, press the  and  buttons and select the  function.

  If the internal temperature is higher than the required temperature, the function will not be activated and each time the  button is pressed, the appliance will emit an audible warning and the message "Hot" will appear. Let the appliance cool down before activating the function.


- Open the door.
- Position the dough to prove on the second level.
- Close the door.
- Press the  button to confirm.








- Press the  and  buttons on the control panel to adjust the temperature (from 25°C to 40°C)
- Press the button 
- Press the  and  buttons on the control panel to set the duration of the proving.
- Press the  button to confirm.
- Press the  button to start the function.
- Press the  button on the control panel to exit from the function.

 For successful proving, a container of water should be placed in the bottom of the oven.


DEFROST (microwave function)



 

 This function allows you to defrost food on the basis of a selectable time.


- After accessing the special functions menu, press the  and  buttons on the control panel to select the function .



 If the internal temperature is higher than the required temperature, the function will not be activated. The appliance will emit an audible warning each time the  button is pressed. Let the appliance cool down before activating the function.

- Open the door.
- Place the food to be defrosted inside the oven.

 It is recommended that you place the food to be defrosted on the first shelf from the bottom.

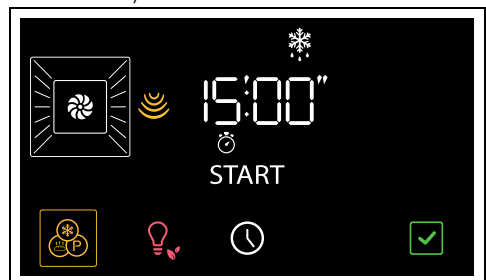
- Close the door.
- Press the  button to confirm.
- Press the button 
- Use the  and  buttons on the control panel to set the defrost duration (from 5 seconds to 30 minutes) (e.g. "15:00").



- Press the  button to confirm.
- Press the  button to start the function.

When finished, **End** flashes on the display and a buzzer sounds.

10. Press the  button on the control panel to exit from the function.

 Allow the food to rest for a few minutes before removing it from the oven.


11. Below is a reference table of the defrosting times for different types of food.

Type	Weight (kg)	Time
Meat	0.5	0h 17m
	1.0	0h 30m
Bread	0.1	0h 03m
	0.5	0h 09m
Cake/baked dessert	0.2	0h 05m
	1.0	0h 13m
Fish	0.4	0h 15m
	0.8	0h 23m

Secondary functions


The buttons at the bottom of the display have some secondary functions:




MINUTE MINDER TIMER


 The minute minder timer only warns the user that the set number of minutes has passed.

1. Press the  button on the main menu.

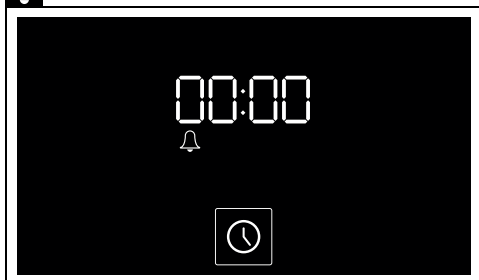The digits  and the indicator light  flash on the display.







2. Press the  and  buttons on the control panel to set the timer duration (from 1 minute to 13 hours).
3. Press the  button to confirm.



4. When the minute minder finishes, a sound is emitted and the indicator light  on the display flashes.
5. Press one of the buttons at the bottom of the display to stop the buzzer.








TIME



1. Press and hold the  button on the main menu for a few seconds.




2. Press the  and  buttons on the control panel to select the time format to display ( or ).

 When you select the  version, **AM** (am) or **PM** (pm) appear on the display.

3. Press the  button to confirm and modify the time.
4. Press the  and  buttons to adjust the hours.
5. Press the  button to set the hours and move to the minutes.
6. Press the  and  buttons to adjust the minutes.
7. Press the  button to confirm.


 To cancel the operation, press and hold the  button for a few seconds.

Settings

- Press and hold the  button on the

main menu for a few seconds.




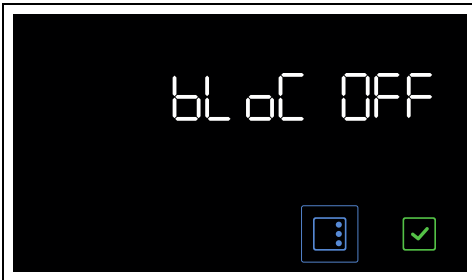
To exit the settings menu and cancel any changes made, press and hold the  button for a few seconds.



Controls lock (child safety)





This mode allows the appliance to lock the controls automatically after 2 minutes of normal operation, without any intervention from the user.

 1. After having accessed the settings menu, press the  button to select the controls lock function.




2. Press the  and  buttons on the control panel to activate the controls lock function.

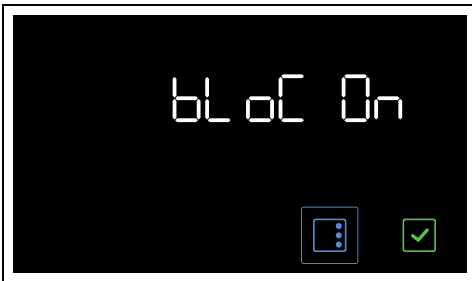

3. Press the  button to confirm. The lock is activated after two minutes of inactivity.



During normal operation, the controls lock is indicated by the  light coming on.




If the buttons on the display or on the control panel are touched, **Lock** appears on the display for two seconds.

To temporarily disable the lock:


1. during cooking, press any button on the display.



2. When the display shows "Lock on", press the  button for a few seconds.

The lock is reactivated after two minutes of inactivity.


To disable the lock:


1. During cooking, press any button on the display.
2. press the  button for a few seconds
3. Follow the instructions described above to set the lock to OFF.


Showroom (for exhibitors only)




This mode allows the appliance to deactivate all heating elements, while keeping the control panel active.

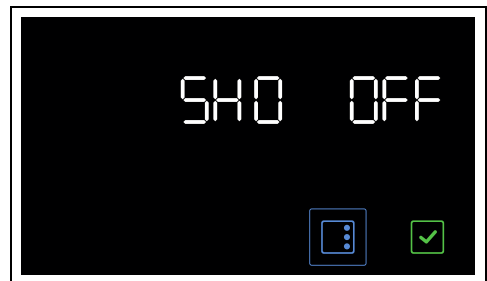

1. After having accessed the settings menu, press the  button to select the showroom function.

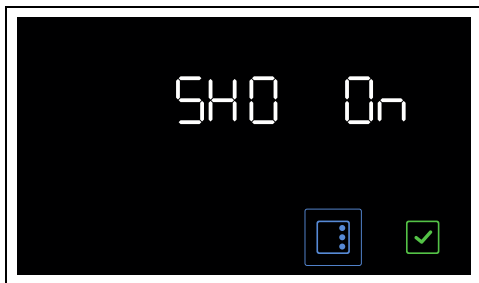


2. Press the touch  and  buttons on the control panel to activate the showroom function.





3. Press the  button to confirm.

 When the showroom function is active, the indicator light  is lit on the display.



 To use the appliance normally, set this function to OFF.


Keep warm

 This mode allows the appliance to keep the food warm (at low temperatures) for one hour after the end of a cooking cycle for which a duration has been set (if it has not been interrupted manually), without altering the taste and smell obtained during cooking.


1. After having accessed the settings menu, press the  button to select the keep warm function.




2. Press the touch  and  buttons on the control panel to activate the keep warm function.

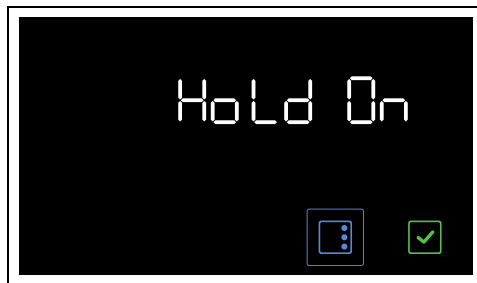


3. Press the  button to confirm.



 To use the appliance normally, set this function to OFF.

Display brightness

 This mode allows you to select the brightness level of the display.


1. After having accessed the settings menu, press the  button to select the brightness level of the display function.




2. Press the touch  and  buttons on the control panel to select the required brightness, from 1 (low brightness) to 5 (high brightness).



3. Press the  button to confirm.

Sound

 Whenever one of the display symbols is pressed, the appliance beeps. This setting disables these sounds.

1. After having accessed the settings menu, press the  button until the sounds function is selected.



2. Press the  and  buttons on the control panel to disable the sound associated with touching the symbols on the display.



3. Press the  button to confirm.

Other settings

Eco light





For greater energy savings, the lights inside the oven cavity are automatically deactivated approximately one minute after the start of cooking or after the door is opened.



To stop the appliance from automatically deactivating the light after approximately one minute, set this mode to Off.



The Eco light function is factory set to On.

- To deactivate the Eco light function, press the  key for a few moments.
- To reactivate the Eco light function, press the  key for a few moments.

CLEANING AND MAINTENANCE

Cleaning the appliance



See General safety instructions.

Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

Ordinary daily cleaning

Always and only use specific products that do not contain abrasives or chlorine-based acids.

Pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or a microfibre cloth.

Food stains or residues

Do not use steel sponges and sharp scrapers as they will damage the surface. Use normal, non-abrasive products and a wooden or plastic tool, if necessary. Rinse thoroughly and dry with a soft cloth or a

microfibre cloth.

Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.

Cleaning the external glass

To clean the external glass, use a first dry cloth and moisten it with the cleaning product; then finish cleaning with a second dry cloth, preferably microfibre, to remove any residue and prevent streaks.

Cleaning the oven cavity

In order to keep your oven in the best possible condition, clean it regularly after letting it cool down.

Avoid letting food residue dry inside the oven cavity, as this could damage the enamel.

Take out all removable parts before cleaning.

For easier cleaning, it is recommended to remove:

- the door;
- The rack/tray support frames.



In the event you are using specific cleaning products, we recommend running the oven at maximum temperature for 15-20 minutes in order to eliminate any residue.

Drying


Cooking food generates moisture inside the appliance. This is a normal phenomenon and does not affect the appliance's operation in any way.

Each time you finish cooking:

1. Let the appliance cool down.
2. Remove any dirt from inside the appliance.
3. Dry the interior of the appliance with a soft cloth.
4. Leave the door open until the inside of the appliance has dried completely.

Removing rack/tray support frames

Removing the rack/tray support frames enables the sides to be cleaned more easily.

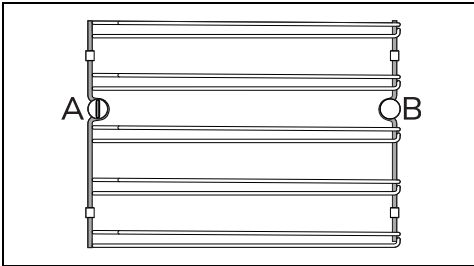

A = front housing

B = rear pin




In some models, the rear pin B can be removed and re-assembled in the same way as the front housing A.




To remove the rack/tray support frames:

1. Unscrew the front fixing pin located on the side wall near the opening of the


oven cavity (you can help yourself with a tool, e.g. a coin).

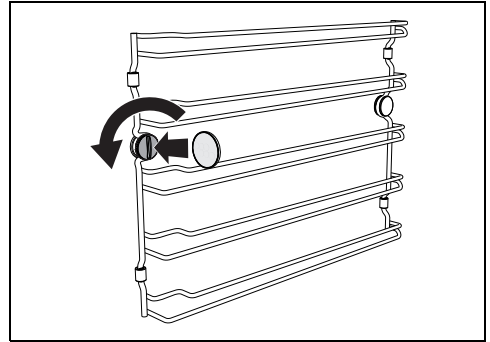

2. Carefully pull the frame towards the inside of the oven cavity to unhook it from front housing A.

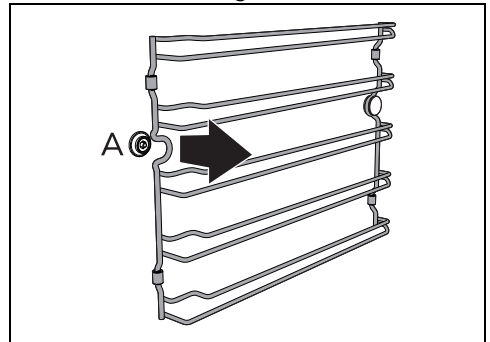


3. Remove the frame from the rear pin B located at the bottom of the side wall.

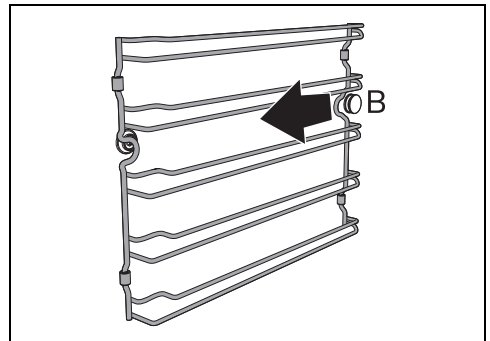


4. Repeat the operation for the frame placed on the other side wall.

To refit the rack/tray support frames:


- Slide the rear part of the frame into the housing under the pin B located at the bottom of the side wall.

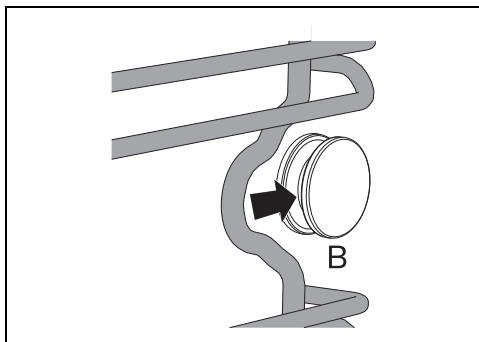

- Replace the front part of the frame in housing A on the side wall near the opening of the oven cavity.

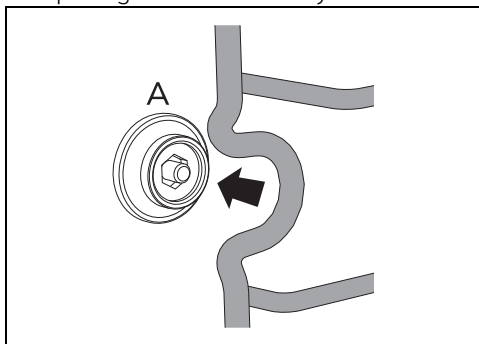


- Screw in the front fixing pin (you can help yourself with a tool, e.g. a coin).

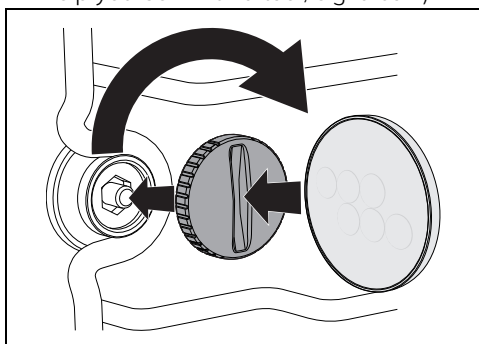






- Repeat the operation for the frame placed on the other side wall.

Special functions


- Press the  button on the display.


 To scroll through the available functions, press the < and > buttons until reaching the special function required.

 To exit the selected function, press and hold the  button on the control panel or the  button on the display.

 To return to the previously selected screen, press the  button on the control panel

Vapor Clean (on some models only)


 See General safety instructions.

 The Vapor Clean function is an assisted cleaning procedure that facilitates the removal of dirt. Thanks to this process, it is possible to clean the inside of the oven very easily. The dirt residues are softened by the heat and water vapour for easier removal afterwards.

Preliminary operations

Before starting the Vapor Clean cycle:

- Completely remove all accessories from inside the oven.
- Remove the temperature probe, if present.
- Remove the self-cleaning panels, if present.
- Pour approx. 120 cc of water onto the floor of the oven. Make sure it does not overflow out of the cavity.
- Spray a water and washing up liquid solution inside the oven using a spray nozzle. Direct the spray towards the side walls, upwards, downwards and towards the deflector.

 We recommend spraying approx. 20 times at the most.







Do not spray the deflector if it has a self-cleaning coating.

- Close the door.
- During the assisted cleaning cycle, wash the self-cleaning panels (where fitted), which were previously removed, separately in warm water and a small amount of detergent.

Vapor Clean cycle setting




If the internal temperature is higher than the required temperature, the function will not be activated and each time the  button is pressed, the appliance will emit an audible warning and the message "Hot" will appear. Let the appliance cool down before activating the function.

1. After accessing the special functions menu, press the  and  buttons on the control panel to select the function .



2. Press the  button to confirm.

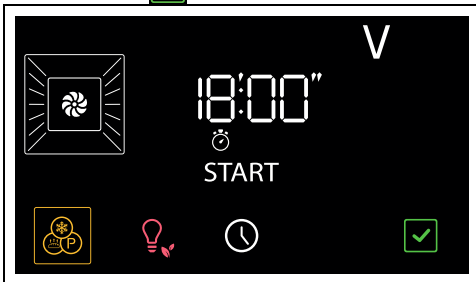

3. Press the  button to start the function.



The duration and temperature parameters cannot be changed by the user.

When finished,  flashes on the display and a buzzer sounds.




4. Press the  button on the control panel to exit from the function.

Programmed Vapor Clean cycle

It is possible to program the Vapor Clean function start time, like all other cooking functions.


1. Once the Vapor Clean function has been selected, press the  button.

The indicator lights  and  flash on the display.

2. press the  and  buttons on the control panel to set the function end time.
3. Press the  button to confirm.

The appliance waits until the set start time to start the Vapor Clean function.

End of Vapor Clean

1. Press the  touch button on the control panel to exit the function.
2. Open the door and wipe away the less stubborn dirt with a microfibre cloth.
3. Use a non-scratch sponge with brass filaments on hard to remove deposits.
4. In case of grease residues use specific oven cleaning products.
5. Remove any remaining water from the oven cavity.
6. Where fitted, reposition the self-cleaning panels and the rack/tray support frames.

For greater hygiene and to avoid foods taking on unpleasant odours:

- we recommend drying the inside of the oven with a fan-assisted function at 160°C for around 10 minutes.
- Where the self-cleaning panels are fitted, we recommend drying the oven cavity with a simultaneous catalytic cycle.



We recommend wearing rubber gloves for these operations.



For easier manual cleaning of parts that are difficult to reach, we recommend removing the door.

Extraordinary maintenance

Seal maintenance tips

The seal should be soft and elastic.

- To keep the seal clean, use a non-abrasive sponge and wash with lukewarm water.

INSTALLATION

Electrical connection



See General safety instructions.

General information


Check the mains characteristics against the data indicated on the plate.

The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance. Do not remove this plate for any reason.

The appliance must be connected to ground using a wire that is at least 20 mm longer than the other wires.

The appliance can work in the following modes:

- 220-240 V~

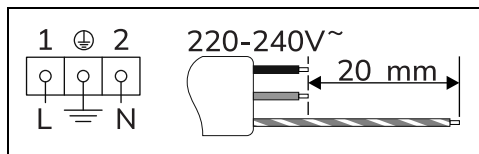

3 x 1.5 mm² three-core cable.



The values indicated above refer to the cross section of the internal lead.



The aforementioned power cables are sized taking into account the coincidence factor (in compliance with standard EN 60335-2-6).

Fixed connection

Fit the power line with an all-pole circuit breaker with a contact separation distance sufficient to provide complete disconnection in category III overvoltage conditions, pursuant to installation regulations.

For the Australian/New Zealand market:

The circuit breaker incorporated in the fixed connection must comply with AS/NZS 3000.

Connection with plug and socket

Make sure that the plug and socket are of the same type.

Avoid using adapters, gang sockets or shunts as these could cause overheating

and a risk of burns.


Cable replacement



Power voltage
Danger of electrocution

- Disconnect the mains power supply.

1. Unscrew the rear casing screws and remove the casing to access the terminal board.

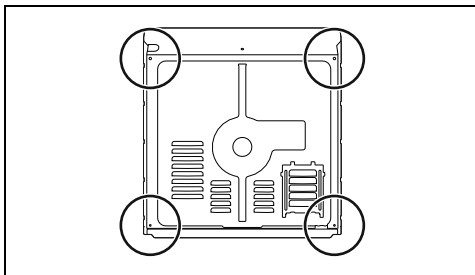


2. Replace the cable.
3. Make sure that the cables (for the oven or any hob) follow the best route in order to avoid any contact with the appliance.

Positioning



See General safety instructions.


Position of the power cable

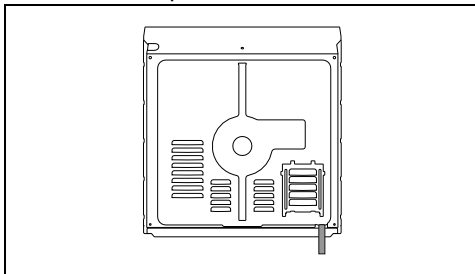


Front panel seal

Glue the supplied seal to the rear part of the front panel to avoid water or other liquids

from leaking in.




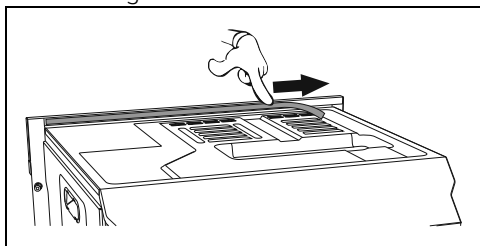



Fastening bushings

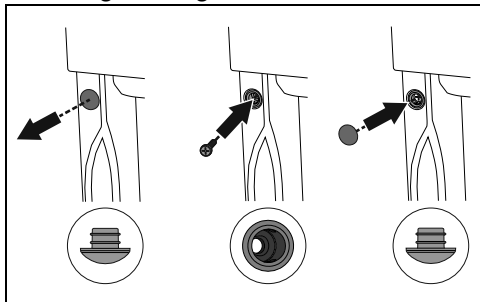


1. Remove the bushing covers on the front of the appliance.
2. Mount the appliance into the recess.
3. Secure the appliance to the cabinet using screws.
4. Cover the bushings with the previously removed covers.

Appliance overall dimensions (mm)

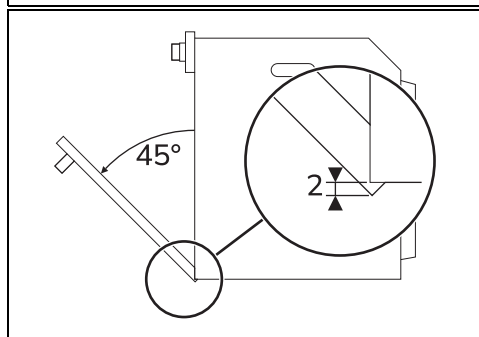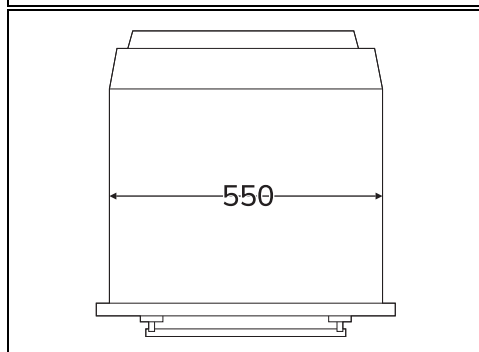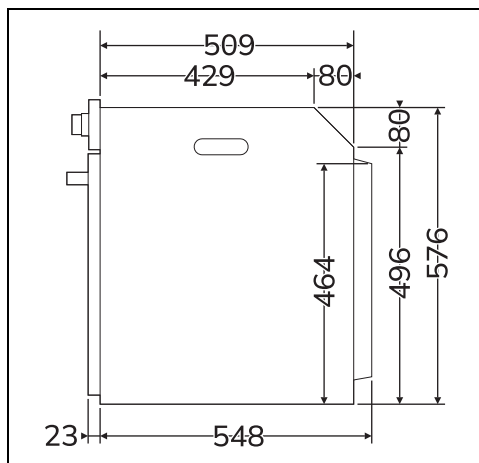
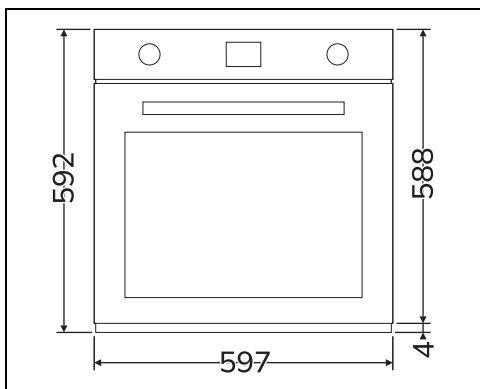



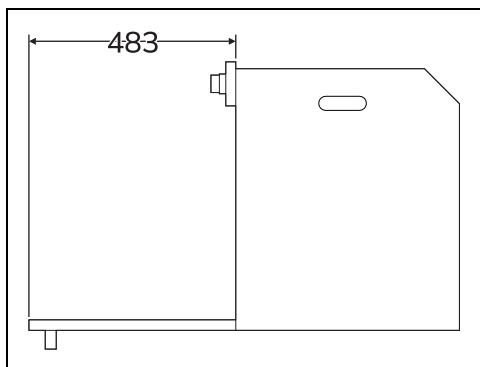


Mounting into a column (mm)

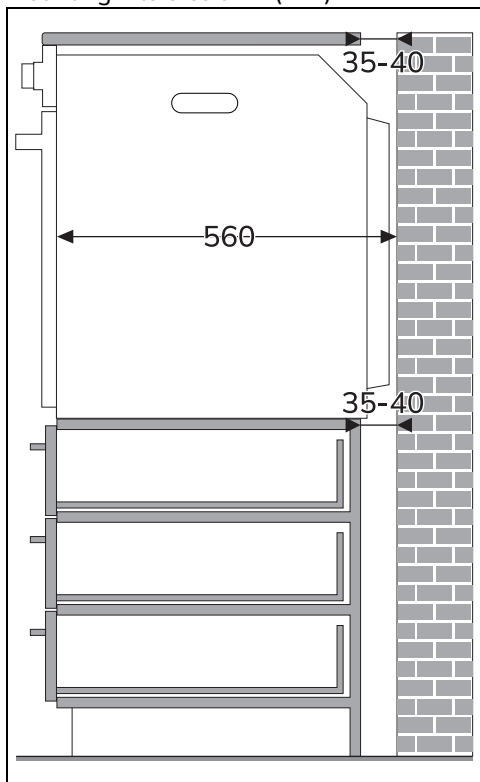


* Make sure that the cabinet top/
rear section has an opening approx.
35-40 mm deep.

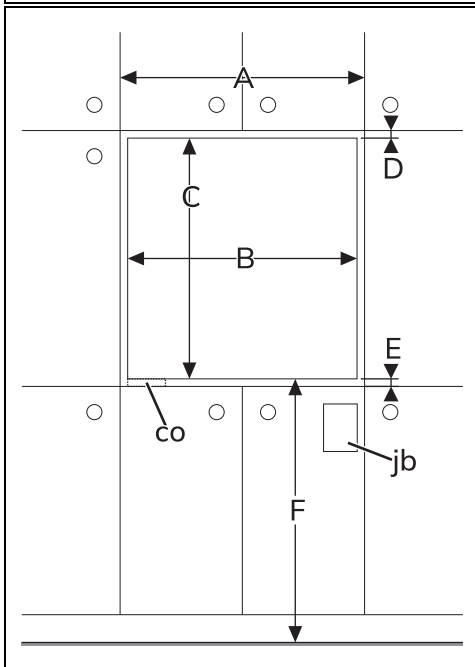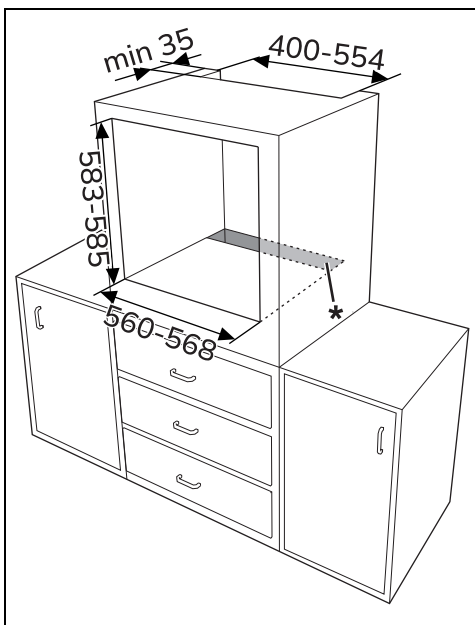

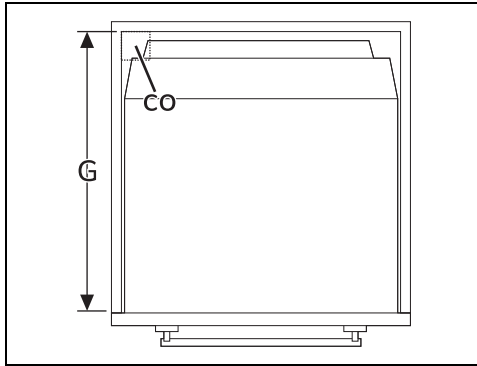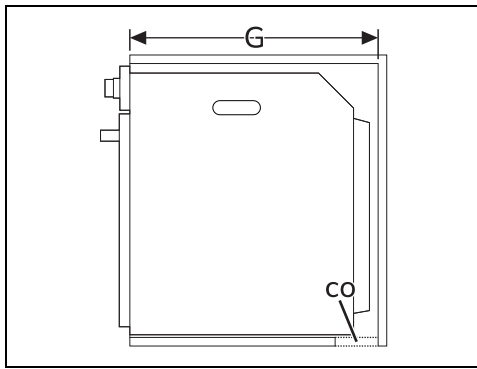

Mounting under worktops (mm)

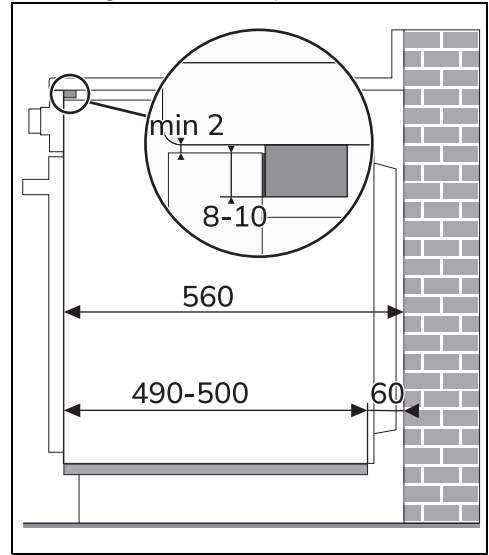

If the appliance is to be built-in under a worktop, a wooden bar has to be installed in order to use the seal that is glued to the back of the front panel to prevent water or other liquids leaking in.

A min. 603 mm

B 560 - 568 mm

C 583 - 585 mm

D 9 - 11 mm

E min. 5 mm


F 121 - 1105 mm

G min. 560 mm


H min. 594 mm

CO Cutout for power cord (min. 6 cm²)

jb Electrical connection box

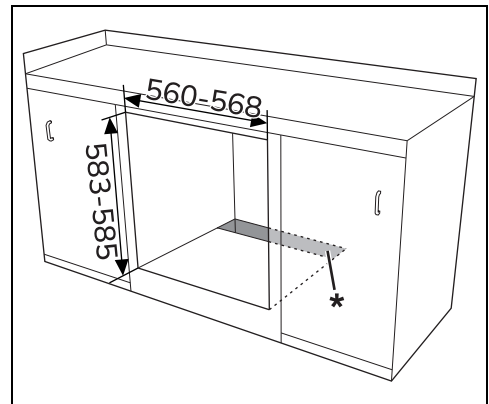

* Make sure that the piece of furniture top/rear part has an opening approx. 60 mm deep.

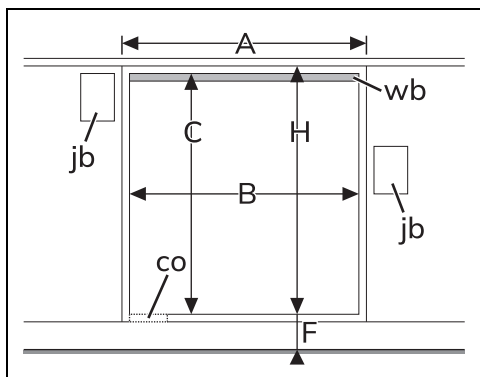

A min. 603 mm

B 560 - 568 mm

C 583 - 585 mm

D 9 - 11 mm

E min. 5 mm

F 121 - 1105 mm

G min. 560 mm

H min. 594 mm

co Cutout for power cord (min. 6 cm²)

jb Electrical connection box

wb Wooden bar (recommended)

