

The Haier logo is displayed in white text on a dark grey rectangular background in the top right corner of the page.

Haier

# Chest Freezer

---

HCF200FI

HCF300FI

**USER & INSTALLATION GUIDE** | NZ AU



## SAFETY AND WARNINGS

---

<b>⚠ WARNING!</b>	
	This appliance contains flammable refrigerant isobutane (R600a).

### READ AND SAVE THIS GUIDE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Children must not clean or maintain the appliance without supervision.
- Cleaning and user maintenance shall not be made by children without supervision.
- The appliance must be positioned so that the plug is accessible.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built in structure, clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This chest freezer is suitable for unheated rooms and outbuildings, provided temperatures do not fall below -15°C.
- This appliance uses flammable refrigerant. Please install, handle, and service it strictly according to the instructions. Contact a professional or our after-sales service for disposal.
- The thermal insulation foam in this appliance may contain flammable insulation blowing gases, any exposed foam may be highly flammable and must be carefully treated during disposal.
- Regulations require this appliance to be earthed.
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance.
- Children aged 3 to 8 may load and unload the appliance only under supervision.

## SAFETY AND WARNINGS

---

- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses and by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - catering and similar non retail applications.
- To avoid food contamination, follow these instructions:
  - Avoid keeping the lid open for long periods, as this raises the internal temperature.
  - Regularly clean surfaces that come into contact with food.
  - Store raw meat and fish in sealed containers to prevent contact with or dripping onto other food.
  - If the appliance will be unused for a long time, switch it off, defrost, clean, dry, and leave the door open to prevent mould growth.
- To ensure safe food storage, keep instant foods and raw meat or fish stored separately.
- This refrigerating appliance is not intended to be used as a built in appliance.
- It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland – the authorized Service Person MUST hold a Gas Work Authorisation for hydrocarbon refrigerants, to carry out Servicing or repairs which involve the removal of covers.
- **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer, the doors and panels should be removed and the racks left in place so that children may not easily climb inside

### Before Use

- This appliance is intended strictly for household use, for storing food only.
- If the appliance is damaged when unpacked, please contact your dealer.
- Ensure the power supply matches the specifications on the appliance's rating plate.

### Declaration of Conformity

The manufacturer of the product/s described herein, to which this description refers, declares on its sole responsibility that the product/s meet the relevant fundamental safety, health and protection requirements of the relevant UK and EU requirements and that the corresponding test reports are available for examination by the relevant authorities and can be requested from the seller of the appliance, especially with regard to CE Declaration of Conformity issued by the manufacturer or with the manufacturer's approval.


Moreover, the manufacturer declares that the parts of the appliance described in this user manual, which come into contact with fresh food, do not contain any toxic substances.

The manufacturer works constantly at the further development of all products. Please therefore bear this in mind as the form, set up and technology are subject to change, without prior notice.

For further information about the product, please consult <https://eprel.ec.europa.eu/> or scan the QR on the energy label supplied with the appliance.


# OVERVIEW

## Control Panel

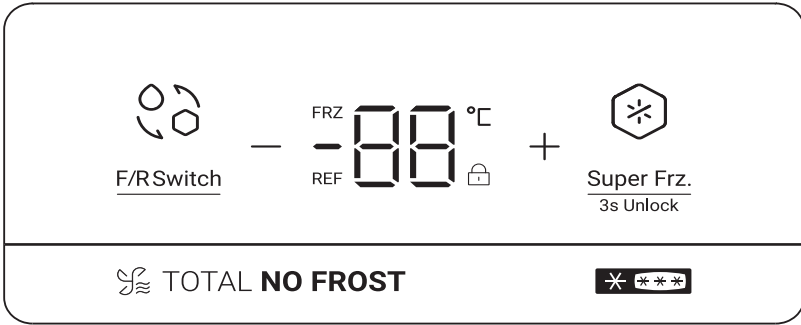

## Product Overview

A	Lid
B	Gasket
C	Basket
D	Cabinet
E	Storage compartment
F	Foot or Caster
G	Control panel
H	Caster
I	Ventilation grille

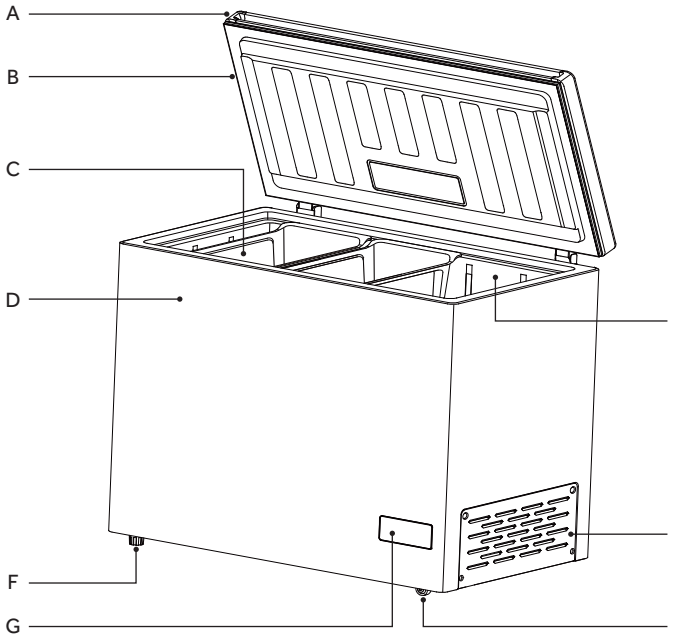

# INSTALLATION


- Fully unpack the appliance and remove all packaging materials. Dispose of packaging safely and keep it out of reach of children.
- Install the appliance in a dry, well-ventilated area. Avoid direct sunlight and keep it away from heat sources.
- The electricity supply must match the rating plate and comply with local regulations.
- Wait at least two hours after installation before switching on the appliance. This allows the refrigerant circuit to stabilise.
- Freezers with installed casters are designed exclusively for short-distance repositioning. Long-distance or movement over uneven surfaces is strictly prohibited.
- The appliance has adjustable feet, which can be lifted and lowered to ensure the product remains stable.
- Fully retract all adjustable feet of freezer to clear ground contact before moving the machine.



- Install the appliance in a location with an ambient temperature matching the climate class shown on the rating plate.

Climate Class	Ambient Temperature
SN	+10 °C to 32°C
N	+16 °C to 32°C
ST	+16 °C to 38°C
T	+16 °C to 43°C

- \* Insert the plug in the socket. Wait until all indicators light up and turn off. The temperature will then be displayed.
- \* Allow two hours for the internal temperature to stabilise before placing food inside.

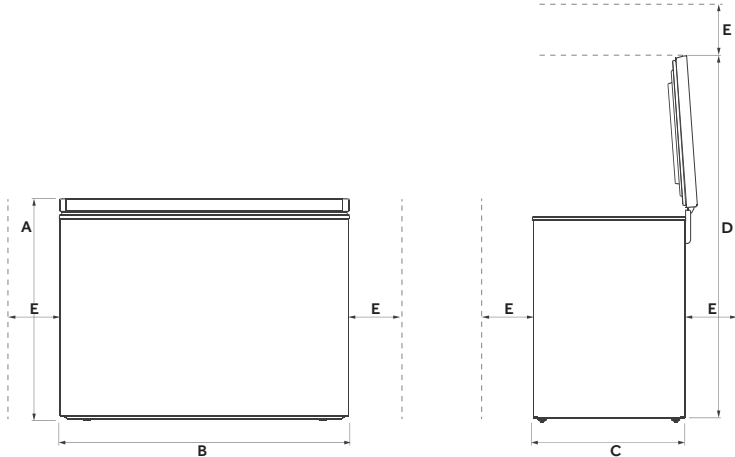

Dimensions		HCF200FI	HCF300FI
		MM	MM
A	Height	865	865
B	Width	940	1205
C	Depth	565	620
D	Overall height (lid open)	1375	1430
E	Clearances (front, rear, sides, top of lid when open)	50	50




# FIRST USE

## Temperature setting

- Press "+" or "-" to adjust temperature(Control Panel).It's suggested to set the temperature at -18°C.

mode	Temperature setting range
Refrigerating	+10°C to 0°C
Freezing	-1°C to -26°C

## Function setting

-  : Light activated in freezing mode (with Super Freeze mode) and remains off in refrigerating mode.
- FRZ : Light activated in Freezer /Super Freeze mode.
-  : Light activated in Super Freeze mode.
- REF : Light activated in Refrigerator mode.
-  : Light activated in locked status.

- **Super Frz.**  
3s Unlock : Press 3s to lock/unlock the control panel, quick press to turn Super Freeze on/off while unlock status.

Attention : Energy consumption will increase when this function is on.The Super Freeze function will be switched off automatically after 56 hours to save energy.During the Super Freeze function, temperature in the freezer will be -26°C.


- **F/R Switch** : Quick press to switch between Frz and Ref modes directly.(Note: Invalid when in Super Freeze mode; system responds with a flashing alert)

Attention : Before changing storage mode, we recommend removing all contents from the product. Set the required temperature, keep the lid closed, and allow a day for the internal temperature to stabilise, prior to putting in contents to be stored at the new temperature.

## Guidance on Freezing Food

- Wrap or seal food in aluminium foil, airtight containers, or freezer-safe storage bags before freezing.
- Allow hot food to cool prior to placing it in the appliance.
- Smaller portions freeze faster. The recommended maximum portion size is 2.5 kg.
- Avoid placing warm food directly against frozen items. This could cause defrosting and reduce shelf life.
- The capacity of the appliance, as shown on the rating plate, should not be exceeded.
- When freezing large amounts of fresh food, activate the Super Freeze function (if available) at least 24 hours in advance.
- Storage times for frozen products vary by type and packaging. Always follow the instructions on the label.

WARNING: When loading food items, maintain clearance from all air ducts inside the cabinet to ensure optimal cooling performance. The return air cover forms part of the airflow tunnel. DO NOT remove it under any circumstances! If there is any outside object entry air outlet, please consult and contact after-service immediately, DO NOT disassemble if contamination occurs.

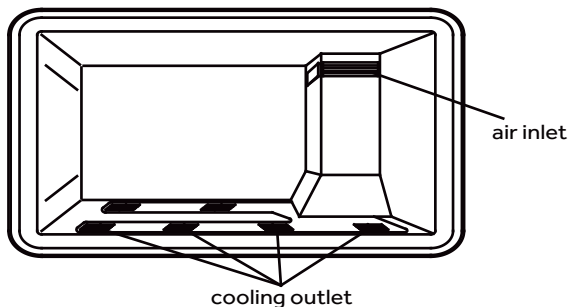

## CLEANING AND MAINTENANCE

---

### Cleaning

- Always switch off the power and unplug the appliance before performing any maintenance or cleaning.
- If the appliance will be unused for a long time, leave the door open to prevent unpleasant odours.
- To ensure food safety, use and clean the freezer regularly as described below.
- Clean the inside of your freezer at least once a year.
  - Use warm water and baking soda solution about a tablespoon of baking soda to litre/quart of water. Rinse thoroughly with water and wipe dry.
  - Do not use cleaning powders or other abrasive cleaners.
  - Do not wash removable parts in a dishwasher.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents, or metal scouring pads. These may damage or discolour the freezer.
- Never use metallic scouring pads, brushes, abrasive cleaners, or alkaline solutions on any surface.
- Clean the door gasket every three months with the baking soda solution as above. Keep it clean and flexible to ensure a proper seal. For areas like seams, slots, and holes, use simple tools such as soft brushes to clean. If needed, removable shelves, trays, drawers, and similar accessories can be taken out and washed in the sink.

# TROUBLESHOOTING

---

## Is the door difficult to open?

- After closing the door, it may be difficult to open again for a few minutes. This is normal and indicates the seal is functioning properly. Wait a few minutes, and the door will open easily.

## Appliance not operating (not running or cooling)

- Is there a power failure.
- Is the plug undamaged and firmly connected to the socket?

## Appliance isn't cooling properly / 'HH' appears on display

- Is the door of the appliance closed properly?
- Is the appliance exposed to direct sunlight or heat?
- Has too much warm food been placed in the appliance?
- You can find the climate class on the rating label on the back of the appliance. It shows the ambient temperatures suitable for proper operation.

Climate Class	Ambient Temperature
SN	+10 °C to 32°C
N	+16 °C to 32°C
ST	+16 °C to 38°C
T	+16 °C to 43°C

## The appliance makes noise

- This sound comes from the compressor motor and refrigerant moving through the system. These noises are normal.

## Condensation builds up on the outer walls

- Under certain atmospheric conditions, condensation can form on the appliance's outer walls. This is normal and won't affect performance.

## Auto Defrosting

- Under conditions of heavy ambient humidity(e.g., rainy weather, humid air) or frequent door openings, frost may form on door seals or side liner on the cabinet which is normal. The frost will automatically dissipate after maintaining door closure for a while.

## Freezing in refrigerator mode

- If you encounter freezing of drinks in the base of the product when it is in refrigerator mode, move drinks to be stored in the upper section of the freezer. You may need to store drinks on top of other solid items or in the baskets.

## CUSTOMER SERVICE

---

We recommend our Haier Customer Service and the use of original spare parts.

If you have a problem with your appliance, please first check the Troubleshooting section. If you cannot find a solution there, please contact:

- Your local dealer
- The Service & Support area at **www.haier.com.au** or **www.haier.co.nz**

where you can activate the service claim and also find FAQs.

To contact our Service, ensure that you have the following data available. The information can be found on the rating plate at the door.

Model \_\_\_\_\_

Serial No. \_\_\_\_\_

### Complete and keep for safe reference:

Model \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchase Date \_\_\_\_\_

Purchaser \_\_\_\_\_

Dealer \_\_\_\_\_

Suburb \_\_\_\_\_

Town \_\_\_\_\_

Country \_\_\_\_\_



# Haier

---

WWW.HAIER.COM.AU  
WWW.HAIER.CO.NZ

条形码尺寸40\*8mm, 由厂家生成。

0070520819 2025.07.07