

SENCOR®

Let's live!

**BLUETOOTH SPEAKER
SSS 5100 DOMUS**

**USER'S MANUAL
EN**




Table of Contents

1. Supply content.....	3
2. Description of the BT speaker	3
3. Putting into operation.....	4
4. LED indicator	4
5. Pairing devices via Bluetooth.....	4
6. TWS function	5
7. Audio AUX IN	6
8. MicroSD card playback.....	6
9. Play/Pause button	7
10. Volume dial.....	7
11. Charging	8
12. Technical specifications	9

1. Supply content

- BT speaker
- Charging adapter
- User's manual

2. Description of the BT speaker

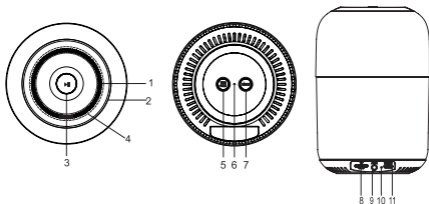

Top part	1	Microphone
	2	LED indicator
	3	Power On, Play/Pause, Call Answer/Reject and Track skip button
	4	Volume touch control
Bottom part	5	TWS / pair button
	6	"Reset" button
	7	"Mode" button
Rear part	8	MicroSD card slot
	9	Socket for audio AUX IN mini jack (3.5 mm)
	10	Recharging indicator
	11	Charging socket (micro USB)

3. Putting into operation

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

Before first use, please charge the BT speaker to a maximum level. Hold down the power On button to turn on the BT speaker. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power On button.



Attention: After a longer period of inactivity, the appliance will turn itself off.

4. LED indicator

The LED indicator shows the following states of the BT speaker:

- Blinking blue - the unit is ready to be paired via Bluetooth and the source of the audio signal is not connected.
- Solid blue - the BT speaker is paired with another device via Bluetooth.
- Solid green - audio jack is connected to the device.
- Blinking red accompanied by acoustic signal - the unit is discharged.
- Solid pink - microSD card playback mode.

5. Pairing devices via Bluetooth

Turn on the BT speaker and search for its Bluetooth name "SSS 5100" in the device to which you wish to pair and start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". To disconnect a paired device, hold down the „TWS / pair“ button at the BT speaker bottom until LED starts blinking

blue on the unit. The BT speaker remembers several last paired units to which it will connect upon powering up.

Note: To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10m.



Attention: Some connected devices support common volume setting. If some of the connected devices do not support this feature, the volume setting will operate separately on each device.

6. TWS function

If you buy another Bluetooth speaker („SSS 5100“), you can pair both speakers together for optimum stereo sound. First make sure that the BT speakers are not connected to any device via Bluetooth. Turn both BT speakers on and press „TWS/pair“ on the first on them. You will hear an acoustic signal and the BT speakers will be paired. Once paired in this way, the BT speakers will be paired automatically the next time they are used. To cancel mutual pairing, please press “TWS/Pair”. Cancelling the pairing will be indicated by an acoustic signal.

Changing the volume level using the volume control buttons will take effect automatically on both paired BT speakers.

Note: If the BT speakers fail to be paired successfully to transfer stereo sound, turn all engaged units off and then on again.



Attention: The TWS function is only available in the Bluetooth mode.

7. Audio AUX IN

The BT speaker is equipped with a 3.5mm jack and can be connected to your device via the supplied audio cable. First connect the audio plug to your device and then to the BT speaker's jack.



Attention: Before connecting your device to the BT speaker, please make sure that the output signal from your device is set to minimum (minimum output volume).
This will prevent the BR speaker from damage.

Note: In this mode, not all functions of the BT speaker are available. The Bluetooth function is not active if the audio jack is connected to the BT speaker.

8. MicroSD card playback

Insert the microSD card into the slot with its contacts facing up. The BT speaker will start playback from the microSD card automatically (in a couple of seconds). Supported playback file

formats include .wma and.mp3. To remove the microSD card, press it gently into the BT speaker with your nail or a flat object and hold firmly when it's released from the slot.



Attention: The BT speaker supports memory cards up to 64GB (formatted to FAT32).

9. Play/Pause button

- 9.1 Long press the Power On button to turn the BT speaker on/off.
- 9.2 Press the Play/Pause button to start or stop music playback during a Bluetooth connection.
- 9.3 An incoming call to a paired device connected using Bluetooth will be accompanied by an acoustic signal and will interrupt music playback. To answer/hang up an incoming call, press the Play/Pause button briefly. To reject incoming call, long press and hold the button.
- 9.4 Press the button twice quickly to skip playback to the next track (available in selected playback modes).
- 9.5 Press the button three times quickly to skip back to the previous track (available in selected playback modes).

Note: To improve the microphone reception while speaking, please speak loud and in the vicinity of the BT speaker.

10. Volume dial

To control the BT speaker volume (+/-), touch the speaker top (No. 4 on figure). Move your finger gently clockwise along the grooved control circumference to increase the playback volume. To decrease the volume level, move your finger anticlockwise.



Make sure that your hands are dry and avoid contact with fluid to ensure proper touch control function.

11. Charging

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels. To charge the BT speaker, please connect the charging adapter to the mains and then to the BT speaker. Charging in progress is indicated red LED, finished charging is indicated by green LED (No.9 on figure).



Attention: For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it's useful that you won't start charging the battery until low battery status is notified by acoustic signal. Charge continuously until fully charged. When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

Recommendation: If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We recommend to store the unit with a the battery charged to prevent irreparable damage to the battery (loss of capacity).

12. Technical specifications

Design for the most efficient 360° sound performance

Touch volume control

DSP digital sound processor

TWS function (True Wireless Stereo)

Sound:

Output power: 10W (Impedance: 3Ω)

Frequency response: 20Hz - 17kHz

Total harmonic distortion: ≤ 1%

Inputs:

Bluetooth Audio 4.2

Action Bluetooth chip (for clearer and more stable sound transmission)

Bluetooth range: within 15m

Audio line input (3.5mm stereo Jack)

MicroSD card playback (up to 64GB)

Other:

LED status indicator

Supports Hands-free telephoning

Built-in rechargeable battery: 2,000 mAh Li-Ion

Playback time: approx. 12 hours

Micro USB charging

Max. charging time 3 hours

Accessories: 5V 1A charging adapter, manual

Dimensions: 100 x 100 x 150mm

Weight: 630g

INSTRUCTIONS AND INFORMATION ABOUT THE DISPOSAL OF DISCARDED PACKAGE

Return the packaging to a collection centre for disposal.

DISPOSAL OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol placed on the product, accessories or package notifies that the product must not be treated as household waste. Please dispose of this product in a collection centre designed for recycling electric and electronic equipment. In some EU or European countries, you can return your products to your local dealer when buying a new equivalent product. Proper disposal of this product helps save valuable natural resources and prevents possible adverse impacts on the environment and human health that might be caused by improper waste disposal. For further information, please contact your local authorities or the nearest waste disposal collection centre. Wrong disposal of this type of waste may be subject to a legal penalty.

For EU companies

If you need to dispose of an electric or electronic device, ask your dealer or supplier for necessary information.

Disposal in countries outside the European Union

To dispose of this product, please ask the ministry or your dealer for the necessary information on correct disposal.



FAST ČR, a.s. hereby declares that the radio equipment type SSS 5100 DOMUS conforms to the 2014/53/EU Directive. For full version of the EU declaration of conformity, please refer to www.sencor.eu website.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in Czech.
Address of the manufacturer: FAST ČR, a.s.,
Černokostecká 1621, Říčany CZ-251 01

EN Warranty conditions

A warranty card is not included with this product.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.

- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.

